

Introduction

This is the set of instructions for the installation of the ZLABGP01A , ZLABGP02A, and ZLABGP03A Wind Baffles.

Read and familiarize yourself with these instructions before assembling.

Package Contents

Wind Baffle	Compatible Outdoor Unit	Screw Type (Qty)	Self-Tapping Screw	Baffle Dimensions in Inches (W*H*D)
ZLABGP01A	LSU090HSV4	#8 x 1/2 in (6)		19-11/16 x 19-11/16 x 7-15/16
	LSU120HSV4			
	LAU090HYV1			
	LAU120HYV1			
	LAU090HVP			
	LAU120HVP			
ZLABGP02A	LSU180HSV4	#8 x 1/2 in (8)		23-5/8 x 23-5/8 x 7-15/16
	LAU240HSV2			
	LSU240HSV3			
	LSU240HLV			
	LSU300HLV			
	LSU360HLV			
	LSU307HV3			
	LSU360HV3			
ZLABGP03A	LMU18CHV	#8 x 1/2 in (8)		21-1/4 x 21-1/4 x 7-15/16
	LMU24CHV			

Figure 1

Precautions for Installation


Things to take into consideration before installing the ZLABGP01A, ZLABGP02A, ZLABGP03A :

- Be sure not to damage painted surface.
- Be careful with the sharp edges on the wind baffle in order to avoid cuts or injury.
- Carefully drill the holes so that no damage is caused to external or internal parts of the unit.
- Make sure that drill chips do not enter the unit.


Installation

- See Figure 1. Center the baffle both vertically and horizontally over the fan cover. Make sure that the baffle does not cover the access panel.
- Mark the screw hole positions in each flange by drilling.
- Install the baffle flanges into the marked holes on the unit utilizing the 6 or 8 screws provided. See Figure 1.
- Do not overtighten the screws.
- Once secure, check to see if the unit and baffle are working properly.


ZLABGP01A

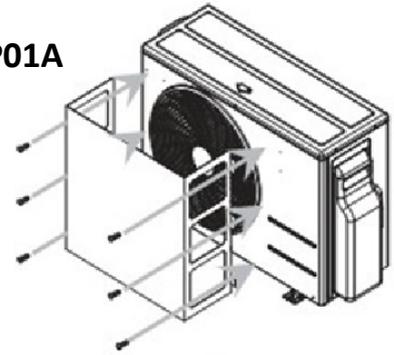

ZLABGP02A

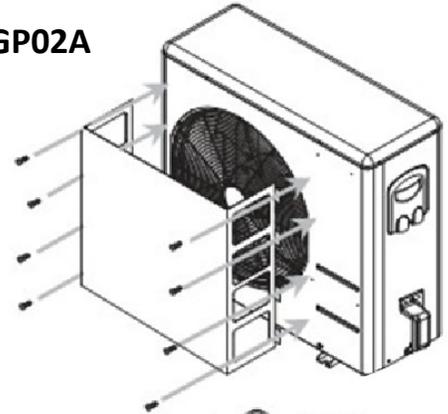

ZLABGP03A

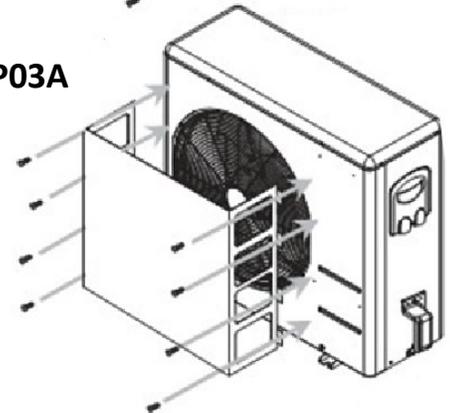

Introduction

This is the set of instructions for the installation of the ZLABGP04A Low Ambient Wind Baffle Kit.

Read and familiarize yourself with these instructions before assembling.

Package Contents

Wind Baffle	Compatible Outdoor Unit	Screw Type (Qty)	Self-tapping Screw	Dimensions (W*H*D) inch
ZLABGP04A	LMU30CHV	#8 x 1/2 in (4)		23-5/8 x 23-5/8 x 7-15/16
	LMU36CHV			
	LMU480HV qty:2			
	LMU540HV qty:2			
	LUU187HV			
	LUU247HV			
	LUU367HV qty:2			
	LUU427HV qty:2			

Precautions for Installation

Things to take into consideration before installing the ZLABGP04A:

- Be sure not to damage painted surface.
- Be careful with the sharp edges on the wind baffle in order to avoid cuts or injury.
- Carefully drill the holes so that no damage is caused to external or internal parts of the unit.
- Make sure that drill chips do not enter the unit.

Installation

- Loosen, but do not remove, the top right and bottom right screws on the plastic fan cover.
- Lift the ZLABGP04A into place and slide the two “U” shaped hooks under the plastic fan cover, and position them around the 2 loosened screws. Make sure the baffle is not blocking the access panel.
- Once in position, tighten the screws in order to secure the fan cover and ZLABGP04A in place. Do not over tighten.
- Using the screws packaged with the unit, secure the left side of the baffle by drilling the screws into their proper position. Make sure the flanges are flush with the unit. Do not over tighten.
- After installing the baffle, check if the product is properly working.