Model MSSuper1E-3E


Serial Number 900000 and higher

Mr.Steam Standard Features

- Stainless steel tank
- Industrial, large diameter, serviceable heating element
- Modular Plug and Play connections
- Electronic water-level control system
- Full-port drain valve
- Limited lifetime steam generator parts warranty

Safety Features

- Built-in, low-voltage 24-volt control
- ASME safety valve

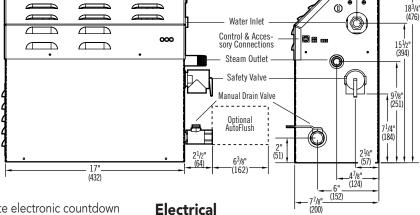

 60-minute electronic countdown shutdown with 75-minute limiting safety back-up

Locating and Installing the Steam Generator Unit

- Select a location as near as practical to the steam room, within 60 feet.
 Typical locations include: closet, vanity cabinet, heated attic or basement.
- Do not install steambath generator inside the steam room.
- Do not install steambath generator outdoors or wherever environmental conditions may affect the safety and/ or performance of the generator.
- Do not install steambath generator or plumbing lines in unheated attic or any locations where water could freeze.
- Do not install steambath generator near flammable or corrosive materials

- or chemicals or in areas having a high concentration of chlorine.
- Install steambath generator on a solid and level surface or securely mounted to a wall using the keyhole slots provided.
- Install steambath generator in an upright position only.
- Provide a minimum of 12 inches inches at both ends and top of the steam generator or as required for servicing. Alternately provide unions to facilitate installation and disconnection of the steam generator.
- The minimum clearance from combustible surfaces is zero all around.

All electrical wiring to be installed by a qualified licensed electrician in accordance with National Electrical Code and local electrical code.

Power Wiring

- **1.** Check power voltage. Use 240V rated unit when supply matches rating of unit before installation.
- 2. Use minimum 90° C/300V rated insulated copper conductors only, type THHN or equal sized in accordance with National Electrical Code and local electrical code for the Amps in Ampere Chart. If allowed by code, NM cable may require a larger wire size than as listed on the chart.
- **3.** Connect suitably sized equipment grounding wire to ground terminal provided.
- **4.** Install a separate circuit breaker between supply and unit. Provide a power supply disconnect within sight of the steam generator or one that is capable of being locked in the open position.

Required Plumbing

Steam Outlet (1/2" NPT) Drain (1/2" NPT) Water Supply (3/8" NPT) Safety Valve (3/4" NPT) Steam Head (1/2" NPT)

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

AMPERE CHART						
Model no.	Max Room Vol. cu.ft.	KW	Volts 1 ph	Phase	Amps	Wire Size (AWG)
MSSuper1E	475	10	208 240	1 1	49 42	6 8
MSSuper2E	575	12	208 240	1	58 50	6
MSSuper3E	675	15	208 240	1 1	73 63	4 4

MODEL	VOLTAGE*	PHASE	OPTIONS	PROJECT INFORMATION	
MSSUPER1E MSSUPER2E MSSUPER3E		1-Single Phase	C+0.0m	Location:	Contractor:
	C=240	3-Three Phase		Architect:	Submitted By:
	*Contact Mr. Steam for other voltages			Engineer:	Date:
Notes:					

Required Equipment: iSteam3, AirTempo, iTempo, iTempoPlus Controls

Optional Equipment: iGenie, AudioWizard, ChromaSteam, HomeWizard, Recessed Light, MS Light, MS Wallseat, AutoFlush, Condensation Pan, AromaSteam



mr.steam[®]

TECHNICAL SPECIFICATIONS

iTempoPlus® Controls

iTempoPlus controls flush mount in the steam/shower enclosure through a 2 %" wide x 3%" high hole. iTempo controls can also be surface mounted.

iTempoPlus Controls Feature:

- Solid brass decorative cover with choice of square or round styles in designer finishes
- Digital display
- Programmable temperature
- AromaSteam Steamhead in matching finish and shape
- Compatibility with SteamLinx

- Soft touch keypad
- Low voltage operation
- Programmable steam bath duration
- Clock
- ON/OFF control for AromaSteam and Chroma72
- Two programmable presets

The iTempoPlus controls are designed to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:

- 4-5 feet above the floor
- in a location representative of the desired steam bathing temperatures. Do not locate the control above or near the Steamhead or direct steam emissions.

The control cable length is 30 feet. Insure that the control and/or steam generator are located accordingly.

An optional 60 ft. cable is available if required, PN 103990-60.

If the control is installed outside the steam room a Remote Temperature Probe Part Number MSTS must be installed inside the steam room.

FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

12" long pigtail FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE **MODEL SHAPE FINISH** PROJECT INFORMATION **RD** Round BB - Brushed Bronze Location: MS iTempoPlus BN - Brushed Nickel SQ Square Architect: ORB - Oil Rubbed Bronze Engineer: PB - Polished Brass Contractor: PC - Polished Chrome Submitted By: PN - Polished Nickel SB - Satin Brass Date: BK - Black Fascia Notes: WH - White Fascia MB - Matte Black

RAW - Custom Plating


BOX CONTENTS:


• iTempoPlus

and square controls:

- Tube of Silicone Sealant
- Steamhead
- Owner's Manual
- Control Cable (30 ft.)



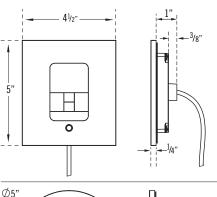

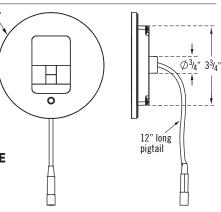

mr.steam[®]

TECHNICAL SPECIFICATIONS

iTempo® Controls

iTempo controls flush mount in the steam/shower enclosure through a 2% wide x 3% high hole. iTempo controls can also be surface mounted.

iTempo Controls Feature:

- Solid brass decorative cover with choice of square or round styles in designer finishes
- Digital display
- Programmable temperature
- AromaSteam Steamhead in matching finish and shape
- Compatibility with SteamLinx
- Soft touch keypad
- Low voltage operation

The iTempo controls are designed to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:

- 4-5 feet above the floor
- in a location representative of the desired steam bathing temperatures. Do not locate the control above or near the steam head or direct steam emissions.
- on a vertical wall

The control cable length is 30 feet. Insure that the control and/or steam generator are located accordingly.

An optional 60 ft. cable is available if required, PN 103990-60.


If the control is installed outside the steam room a Remote Temperature Probe Part Number MSTS must be installed inside the steam room.


FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

BOX CONTENTS:

- iTempo
- Tube of Silicone Sealant
- Steamhead
- Owner's Manual
- Control Cable (30 ft.)



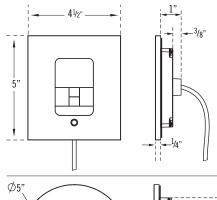

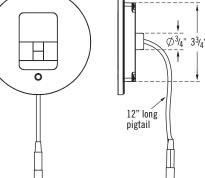

MODEL	SHAPE	FINISH	PROJECT INFORMATION
MS iTempo	RD Round	BB - Brushed Bronze	Location:
	SQ Square	BN - Brushed Nickel	Architect:
		ORB - Oil Rubbed Bronze	Engineer:
		PB - Polished Brass	
		PC - Polished Chrome	Contractor:
		PN - Polished Nickel	Submitted By:
		SB - Satin Brass	Date:
		BK - Black Fascia	Notes:
		WH - White Fascia	
		MB - Matte Black	
		RAW - Custom Plating	

AutoFlush®

Box Contents


- AutoFlush Valve with Cord
- Installation instructions

Operation

The optional AutoFlush System feature automatically drains the Mr.Steam® system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

Note: If the Express Steam® option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle.

AutoFlush Shown Fully Assembled

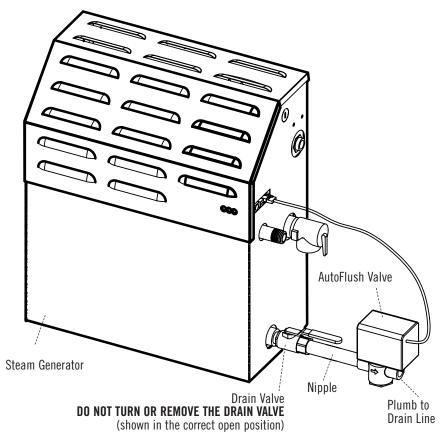

Our exclusive AutoFlush® automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com or scan the QR code before installation to download the Installation, Operation and

Maintenance Manual or refer to the manual provided with the unit.




MODEL	PROJECT INFORMATION		
MS 81500E	Location:	Contractor:	
	Architect:	Submitted By:	
	Engineer:	Date:	
Notes:			

Round 103937, Square 104040, 104104

AromaSteam Steamhead

- Even distribution of steam while remaining cool to the touch
- No field assembly required
- No moving parts
- Integrated aromatherapy oil well for in shower use

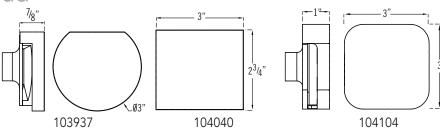

Round & Square Steamhead Installation (½" NPT)

IMPORTANT: Do not disassemble steamhead. MrSteam's steam head is shipped fully assembled and requires no additional assembly.


CAUTION Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.

NOTE: A 1.5" clearance hole around the steam pipe is needed to mount the steamhead.

Locate steamhead 6-12 inches above floor, except for:

- Tub/shower enclosures, install 6 inches above tub top edge.
- For enclosures with acrylic or other non-heat resistant flooring install Acrylic Shield Part Number 103938/10398SQ

IMPORTANT NOTE: To preserve steamhead finish, do not use wrench or other tools to tighten. DO NOT use abrasive cleansers or chemicals. Use only water with mild soap and a non-abrasive sponge.

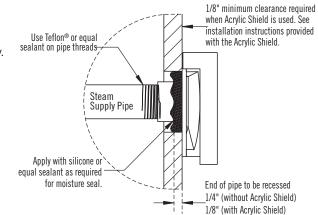

CAUTION Consult with supplier of acrylic, fiberglass and other non-heat resistant enclosures for recommended steamhead location. Use Acrylic Shield PN 103938 / 103938SQ. See instructions provided with steam shield. (An acrylic shield is not available for the iSteam steamhead.)

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH**	PROJECT INFORMATION	
103937-Round	BB Brushed Bronze	Location:	
104040-Square	BN Brushed Nickel	Architect:	
<u>104104*</u>	ORB Oil Rubbed Bronze	Engineer:	
	☐ PB Polished Brass		
	SB Satin Brass PC Polished Chrome PN Polished Nickel	Contractor: Submitted By: Date:	
☐ BLK Black*** ☐ WH White***	BLK Black***	Notes:	
	☐ WH White***		
	MB Matte Black		
	RAW Custom Plating		

^{* 104104} Steamhead is used for AirTempo, iSteam and black/white facia iTempo and iTempoPlus.

^{**} For AirTempo select black or white with a decorative finish

^{***}iSteam, black/white fascia iTempo and iTempoPlus are provided with matching glass face and chrome trim only.