

Sunward®

5' BubbleMassage™ Bath **K-1162-G**



Features

- End drain.
- Integral lumbar support and armrests for comfort.

Hydrotherapy

- 120 BubbleMassage™ airjets.
- Zones of Control feature allows you to target massage to back, midsection, or feet.
- Automatic purge cycles remove residual water from air channels after use.
- Built-in 300 W heater.
- Electronic keypad control.

Installation

Drop-in

Recommended Accessories

K-11677 Bath Drain

K-576 Under-Mount Installation Kit

K-24916 Wireless Music Kit

K-1446 Remote Installation Kit

K-1491 Bath/Whirlpool Pillow

K-1601 Bath/Whirlpool Footstop

K-7213 27" Cable Bath Drain

K-7214 27" Cable Bath Drain

K-7265 Clearflo Bath Drain

K-9497 2-1/2" Keypad Trim

Codes/Standards

ASME A112.19.7/CSA B45.10 CSA B45.5/IAPMO Z124 ASTM E162 UL 1795 Greenguard UL 2818 - Gold



See website for detailed warranty information.

Available Color/Finishes

Color tiles intended for reference only.


Color	Code	Description
	0	White
	96	Biscuit
	47	Almond





Sunward®

5' BubbleMassage™ Bath **K-1162-G**

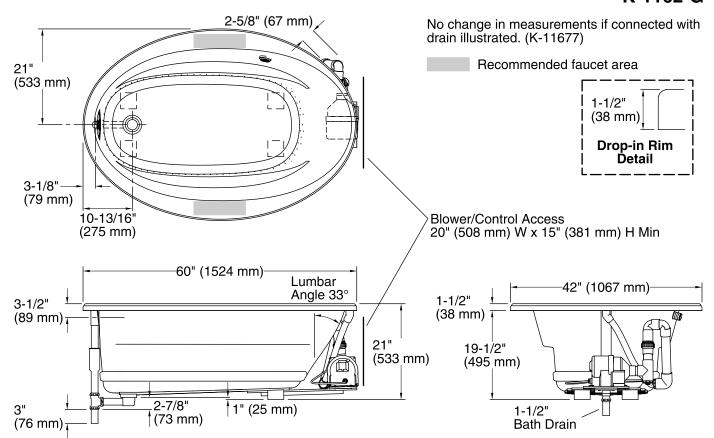

Required Electrical Service

One dedicated circuit required, protected with Class A Ground-Fault Circuit-Interrupter (GFCI) or Residual Current Device (RCD).

Blower: 120 V, 15 A, 60 Hz

Technical Information

All product dimensions are nominal.

Installation: Drop-in Drain location: End

Basin area, bottom: 43" x 21-9/16" (1092 mm x 548 mm)
Basin area, top: 53-1/2" x 32-1/8" (1359 mm x 816 mm)

Weight: 110 lbs (49.9 kg)
Minimum floor load: 35 lbs/ft² (170.9 kg/m²)

Water depth: 15" (381 mm)
Water capacity: 57 gal (215.8 L)

Template: Drop-in, 1042556-7, required, included

Electrical component Blower: 120 V, 10 A, 60 Hz

rating:

Notes

Measure your actual product for rough-in details. Install this product according to the installation instructions.

The hot water supply should be 70% of the capacity of the bath or greater. Installations will vary.

Provide one grounded electrical outlet within 24" (610 mm) of each component.

Remote blower installation kit is available for relocating the blower. Provide access for servicing the blower.

Kit is required for under-mount installations (sold separately).

Do not relocate or alter the PVC tee or coiled flexible tubing connected to the blower. Follow the blower relocation instructions exactly.

