
## MSTS/iMSTS in Room Temperature Sensor


## **BOX CONTENT**

• MSTS/iMSTS probe with wire attached

## **FUNCTION**

- Used to accurately read the temperature inside the steam room and send it to the controller.
- MSTS is for use with the iTempo® or iTempoPlus® controls
- iMSTS is for use with the iSteam® Control

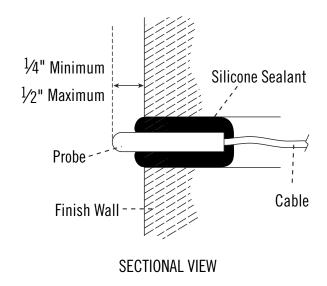

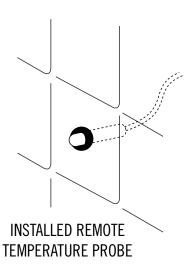

## FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com or scan the QR code before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.



MODEL	PROJECT INFORMATION	
☐ iMSTS ☐ MSTS	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:	1	I