

Installation and Operation Instructions for

# **MASCOT® FT**

Wall-Mounted, Modulating Gas, Condensing, Combination Boiler

Model MFTCW 140,000 BTU/hr 199,000 BTU/hr

- Natural Gas (NG) Factory Configuration
- Propane Gas (LP) Field-Convertible

**FOR YOUR SAFETY:** This product must be installed and serviced by a professional service technician, qualified in hot water boiler and heater installation and maintenance. Improper installation and/or operation could create carbon monoxide gas in flue gases which could cause serious injury, property damage, or death. Improper installation and/or operation will void the warranty.

#### **WARNING**

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

#### WHAT TO DO IF YOU SMELL GAS

- · Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a nearby phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or gas supplier.

#### **A** AVERTISSEMENT

Assurez-vous de bien suivres les instructions données dans cette notice pour réduire au minimum le risque d'incendie ou d'explosion ou pour éviter tout dommage matériel, toute blessure ou la mort.

Ne pas entreposer ni utiliser d'essence ou ni d'autres vapeurs ou liquides inflammables dans le à proximité de cet appareil ou de tout autre appareil.

# QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:

- Ne pas tenter d'allumer d'appareils.
- Ne touchez à aucun interrupteur. Ne pas vous servir des téléphones dans le bâtiment où vous vous trovez
- Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
- Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le sservice des incendies.

L'installation et l'entretien doivent être assurés par un installateur ou un service d'entretien qualifié ou par le fournisseur de gaz.



10.2 Notes: 82

#### TABLE OF CONTENTS **SECTION 1 Product Accessories** 4.17 DHW Flow Restrictors......45 1.1 Introduction ...... 1 Included with the Appliance...... 1 **SECTION 2 Product Characteristics** Specifications .......4 **SECTION 5** Dimensions ...... 6 **Control Display and Operation** Control Dial and Buttons ......52 5.2 LCD Overview......53 2.5.1 Central Heating Flow......10 Operating Mode ......54 Status Display Mode ......55 5.5 DHW Set Point Change Mode ......56 **SECTION 3** CH Set Point Change Mode......57 Safety Regulations Storage Mode......57 3.1 Safety Symbols ......12 5.8 Installer Mode......58 3.2 Safety Precautions and Proper Use......14 Outside Temperature (option).....60 5.10 External Set Point Temperature Control......60 **SECTION 4** 5.11 Error Mode ......61 Installation **SECTION 6** Location and Clearances ......16 **Error Codes** 4.2 Wall Mount Bracket ......17 4.2.1 Installation Height and Location ......17 4.2.2 Hang the Boiler ......17 4.3.1 Combustion Air from Room......18 **SECTION 7** 4.3.2 Ducted Combustion Air ......18 Trouble Shooting Diagnostics......67 4.5 General Location Guidelines......21 7.2 Suggested Corrective Actions ...... 68 4.6 Locations for Vent Pipe Terminator ......22 4.6.1 Direct Venting Clearances......22 **SECTION 8** 4.6.2 Non-Direct Venting Clearances...............23 **Maintenance** 4.6.3 Venting Requirements in Massachusetts ... 24 8.1 Annual Startup and General Maintenance ......... 70 4.7 Air Supply and Vent Connections at the Appliance . 26 8.2 Flushing the Boiler .......72 4.7.1 Vent / Air Pipe Lengths......26 Draining and Cleaning......73 4.7.2 Direct Venting.......26 4.7.3 Indoor Combustion Air.....27 **SECTION 9** 4.8 Vent / Air Pipe Termination .......28 Installation Check 4.9 Gas Supply and Piping......30 Quick View .......74 4.10 Gas Supply Pressure .......33 4.11 Gas Set Up and Adjustment......33 4.12 High Altitude Installations and Orifices......34 4.13 Natural Gas to Propane Conversion ..................36 **SECTION 10** 4.14 Plumbing Guidelines ......40 Repair Part Diagram 4.15 Pressure Relief Valve......43

4.16 Disposal of Condensate .......44

#### **SECTION 1**

#### **Product Accessories**

#### 1.1 Introduction

This manual provides information necessary for the installation, operation, and maintenance of the LAARS Heating Systems **Mascot FT**. All application and installation procedures must be read and reviewed completely before proceeding with the installation. Consult the LAARS Heating Systems factory, or your local factory representative, with any problems or questions regarding this equipment. Experience has shown that most operating problems are caused by improper installation.

All installations must be made in accordance with 1) American National Standard Z223.1/NFPA54-Latest Edition "National Fuel Gas Code" or

2) CSA B149.1 "Natural Gas and Propane Installation Code" and with the requirement of the local utility or other authorities having jurisdiction. Such applicable requirements take precedence over the general instructions contained herein.

All electrical wiring is to be done in accordance with the local codes, or in the absence of local codes, with: 1) The National Electrical Code ANSI/NFPA No. 70-latest Edition, or 2) CSA STD. C22.1 "Canadian Electrical Code - Part 1". This appliance must be electrically grounded in accordance with these codes.

#### 1.2 Included with the Appliance

Item	Description	Qty
LAARS Wall Mounted, Combination Boiler MFTCW140 / 199	MASCOT FT	1
Installation Instructions and User's Manual	The continues of the co	1

# 1.2 Included with the Appliance (continued)

Items	Descr	iptions	Qty
Condensate Hose			1
Wall Mount Bracket			
2 types of Wall Anchors	4		
Pressure Relief Valve (CH LINE 3/4" 30psi) Model: CASH ACME F-82			1
3" Mesh Screens			2
O-Ring and Gasket Kit			1
Outdoor Sensor with screws and anchors			1
	MFTCW140	MFTCW199	
4.5 GPM Flow Restrictor (dark blue)	* N/A		1
Propane Conversion Orifice			1
1/2" x 3/4" Bell Coupling for Gas Line		N/A	1

<sup>\*</sup>A 3.2 GPM Flow Restrictor (white) has been factory installed. See Section 4.17

# **SECTION 2.**

#### **Product Characteristics**

#### 2.1 Model Nomenclature

The Model Nomenclature is shown on your Rating Plate and consists of a series of letters and numbers (Nomenclature) that further identifies the characteristics of your Mascot FT.

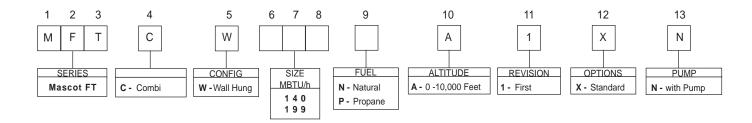


Figure 1. Model Nomenclature


# 2.2 Specifications

Mod	el Name		MFTCW*	140
0 1 1 1 1 1 1 1	MAX		140,000 Bt	tu/h
Gas Input Rate	MIN	28,000 Btu/h		u/h
	35°F Rise	7.1 GPM		Л
Hot Water Capacity	45°F Rise	5.5 GPM		Л
	77°F Rise		3.2 GPN	Л
Ins	stallation	li li	ndoor / Wall hu	ung type
Flu	e System	Sealed Combustio	on Direct / Sing	gle Vent / Concentric Vent
V	ent Run	2"(50ft), 3"(100ft) Schedule 40 CPVC, PP, PVC		40 CPVC, PP, PVC
Coo Curaly Dressure	NG		3.5" WC to 10	.5" WC
Gas Supply Pressure	LP		8.0" WC to 13	3″ WC
	Gas type	NG		LP
	Vent size	2" or 3" VE	ENT	2" or 3" VENT
Manifold Pressure	Max Fire	-0.216" V	NC	-0.216" WC
	Min Fire	0.002" V	vc	0.079" WC
	Main Supply	120V 60Hz / 4A		/ 4A
Power Supply	Maximum Power Consumption	160W		
Igniti	on System	Direct Electronic Ignition / Automatic Flame Sensing		omatic Flame Sensing
Burn	er System	Single Orifice Premixed Fuel Modulation		Fuel Modulation
Gas V	alve System	Combination modulating (Current proportional)		Current proportional)
Minimu	m Flow Rate	0.5 GPM		Л
Dir	nensions	W17.25" - H29.0" - D15.5"		" - D15.5"
,	Weight		110 lbs	
Sub Heat Exchang	Sub Heat Exchanger Water Capacity(DHW)		Under 1 Ga	allon
Main Contro	Main Controller / Control Panel		NGTX-900CP /	P-920C
Domestic Hot V	Vater Pressure, DHW	1	Min 15 ~ Max	150 PSI
Central Heat	Water Pressure, CH	Min 15 ~ Max 30 PSI		30 PSI
	Cold Water Inlet / Hot Water Outlet	3/4" NPT		Т
Connection Sizes	(CH) Space Heating Supply/Return		1" NPT	
	Gas Inlet	1/2" NPT (3/4"	coupling prov	ided with Installation kit)
	Casing	Co	old Rolled Carl	bon Steel
Materials	Heat Exchanger	Primary H Sub Hea	leat Exchanger at Exchanger :	r : Stainless Steel Stainless Steel
Safe	ty Devices	tion Detector, Ex	haust Temper	evice, Gas Valve Opera- ature High Limit Switch, gh Limit Switch

# 2.2 Specifications (continued)

Mod	el Name	MFTCV	V <b>199</b>
0 1 101	MAX	199,000 Btu/h	
Gas Input Rate	MIN	19,900 Btu/h	
	35°F Rise	9.88 GPM	
Hot Water Capacity	45°F Rise	7.7 GPM	
	77°F Rise	4.8 G	PM
Ins	stallation	Indoor / Wall	hung type
Flu	e System	Sealed Combustion Direct / Single Vent / Concentric Vent	
Ve	ent Run	2"(50ft), 3"(100ft) Sched	ule 40 CPVC, PP, PVC
O O	NG	3.5" WC to	10.5" WC
Gas Supply Pressure	LP	8.0" WC to	13″ WC
	Gas type	NG	LP
Manifeld December	Vent size	2" VENT	3" VENT
Manifold Pressure	Max Fire	-0.314"WC	-0.173"WC
	Min Fire	-0.015"WC	-0.015"WC
	Main Supply	120V 60Hz / 4A	
Power Supply	Maximum Power Consumption	160W	
Igniti	on System	Direct Electronic Ignition / Automatic Flame Sensing	
Burn	er System	Single Orifice Premixed Fuel Modulation	
Gas V	alve System	Combination modulating (Current proportional)	
Minimu	m Flow Rate	0.5 GPM	
Dir	nensions	W19.6" - H32.0" - D16.3"	
1	Weight		lbs
Sub Heat Exchang	er Water Capacity(DHW)	Under 1	Gallon
Main Control	ller / Control Panel	NGTX-900C	P / P-920C
Domestic Hot W	/ater Pressure, DHW	Min 15 ~ Max 150 PSI	
Central Heat	Central Heat Water Pressure, CH		ax 30 PSI
	Cold Water Inlet / Hot Water Outlet	3/4" NPT	
Connection Sizes	(CH) Space Heating Supply/Return	1″ NI	PT
	Gas Inlet	3/4″ N	IPT
	Casing	Cold Rolled C	arbon Steel
Materials	Heat Exchanger	Primary Heat Exchanç Sub Heat Exchange	ger : Stainless Steel er : Stainless Steel
Safe	ty Devices	Flame Rod, Overheat Cut Off tion Detector, Exhaust Temp Water Temperature	erature High Limit Switch,


# 2.3 Dimensions MFTCW140

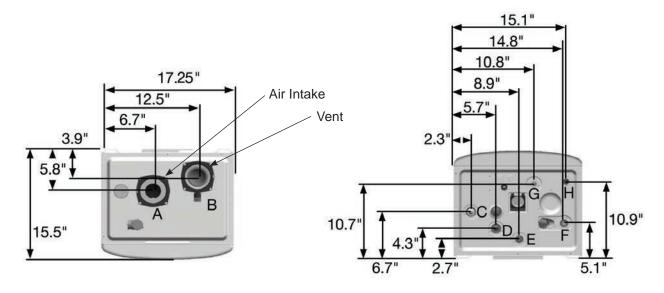




	Description	Diameter
Α	Air Intake collar	3"
В	Vent Pipe Collar	3"
С	'CH' Supply Adapter	1" NPT
D	'CH' Return Adapter	1" NPT
Е	'DHW' Outlet Adapter	3/4" NPT
F	'DHW' Inlet Adapter	3/4" NPT
G	Gas Inlet Adapter	1/2" NPT
Н	Condensate Line	1/2" NPT


# 2.3 Dimensions MFTCW199

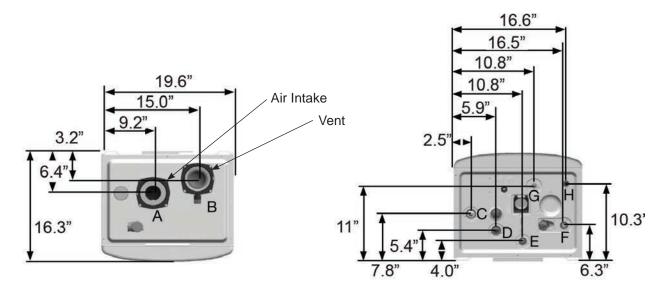

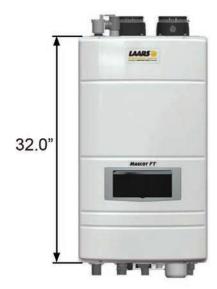


	Description	Diameter
Α	Air Intake collar	3"
В	Vent Pipe Collar	3"
С	'CH' Supply Adapter	1" NPT
D	'CH' Return Adapter	1" NPT
Е	'DHW' Outlet Adapter	3/4" NPT
F	'DHW' Inlet Adapter	3/4" NPT
G	Gas Inlet Adapter	3/4" NPT
Н	Condensate Line	1/2" NPT

# 2.4 Names of Components MFTCW140

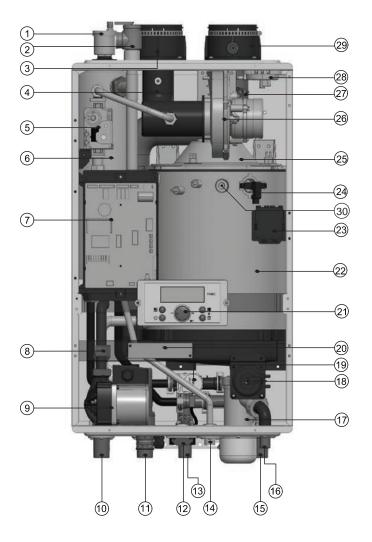

#	Name of Component
1	Air Vent (air eliminator)
2	Pressure Relief Valve
3	Air Intake Collar
4	Air Gas Mixing Pipe
5	Gas Valve
6	DHW Water Tank
7	Main PCB
8	Manual Power Switch (ON / OFF)
9	Recirculation Pump DHW / CH Primary Pump
10	'CH' Supply Connection
11	'CH' Return Connection
12	CH Pressure Gauge
13	DHW Outlet Connection
14	Gas Inlet Connection
15	DHW Inlet Connection (filter and flow restrictor)

#	Name of Component
16	Condensate Connection
17	Condensate Trap
18	Air Pressure Switch (condensate)
19	Mixing Valve
20	Terminal Block
21	Control Panel and Display
22	Heat Exchanger
23	Ignition Trans
24	Flame Detecting Sensor
25	Burner Case
26	BLDC Fan (Blower)
27	Vent Pipe
28	Air Pressure Switch
29	Vent Pipe Collar
30	Sight Glass

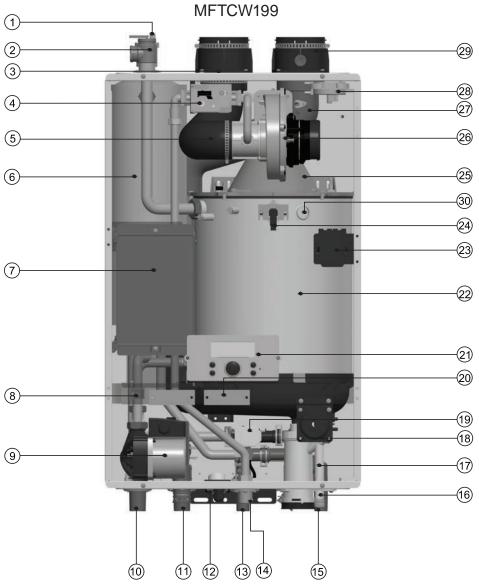


#	Name of Component
1	Air Vent (air eliminator)
2	Pressure Relief Valve
3	Air Intake Collar
4	Gas Valve
5	Air Gas Mixing Pipe
6	DHW Water Tank
7	Main PCB
8	Manual Power Switch (ON / OFF)
9	Recirculation Pump DHW / CH Primary Pump
10	'CH' Supply Connection
11	'CH' Return Connection
12	CH Pressure Gauge
13	DHW Outlet Connection
14	Gas Inlet Adapter
15	DHW Inlet Connection (filter and flow restrictor)

#	Name of Component
16	Condensate Connection
17	Condensate Trap
18	Air Pressure Switch (condensate)
19	Mixing Valve
20	Terminal Block
21	Control Panel and Display
22	Heat Exchanger
23	Ignition Trans
24	Flame Detecting Sensor
25	Burner Case
26	BLDC Fan (Blower)
27	Vent Pipe
28	Air Pressure Sensor
29	Vent Pipe Collar
30	Sight Glass

#### 2.5 Product Flow Paths and Characteristics

#### 2.5.1 Central Heating flow. Combination Boiler Heating Mode.


Water in the heating pipe is used for space heating.

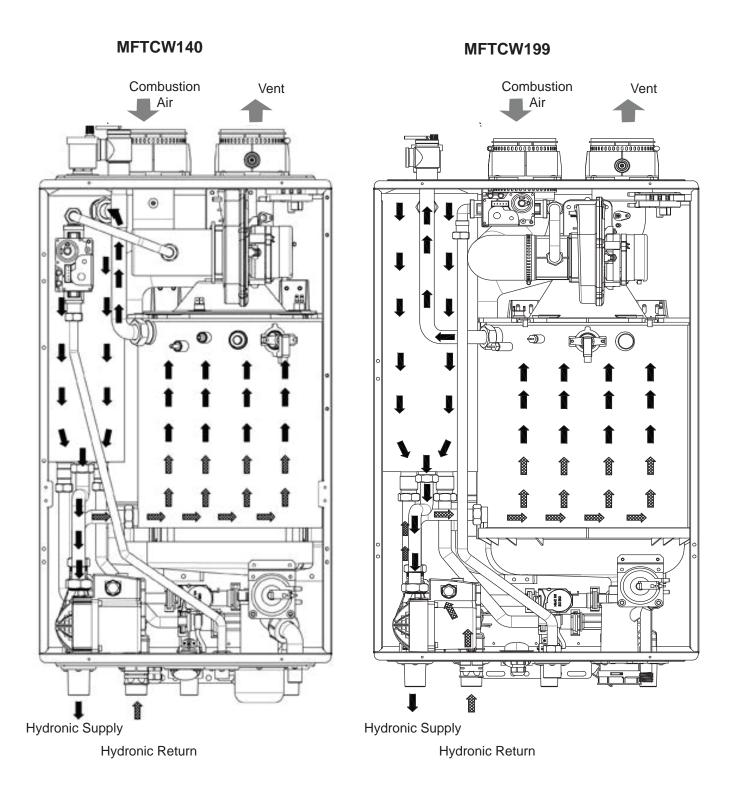

#### 2.5 Product Flow Paths and Characteristics

2.5.2 Domestic Hot Water flow. Combination Boiler Domestic Hot Water Mode.

Cold water passes through the exchanger and is heated via a mini indirect tank. The domestic hot water (DHW) is provided on demand.

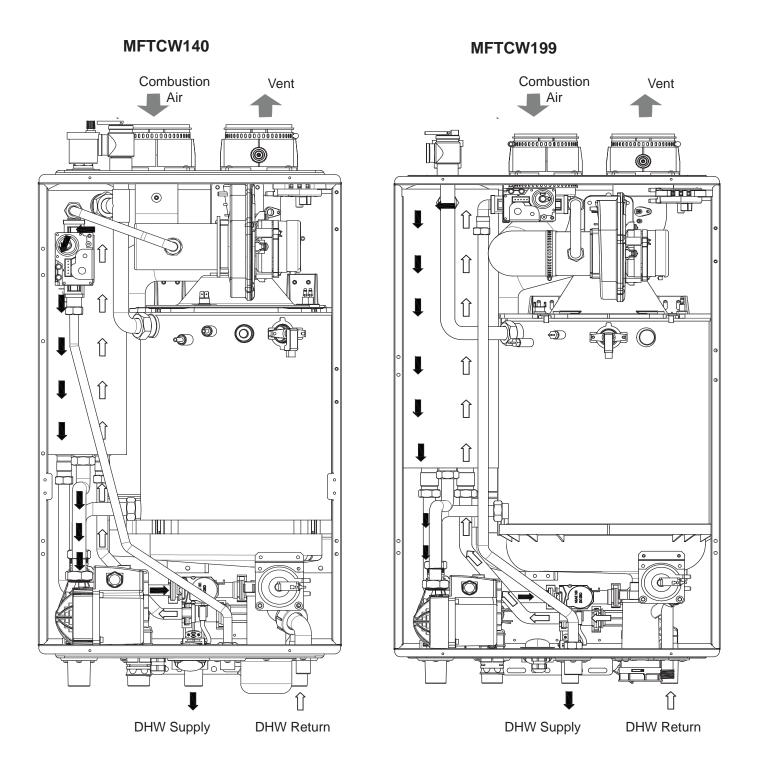

#### **SECTION 3.**

## Safety Regulations

#### 3.1 Safety Symbols

#### WARNING

To avoid product damage, personal injury, or even possible death, carefully read, understand, and follow all the instructions in the Installation and Operation manual before installation, operation and service the Boiler.

Laars cannot anticipate every circumstance that might involve a potential hazard. Therefore, all possible incidents are not included in our warnings. Proper installation, operation, and service are your responsibility. You must make sure that the operation and settings of the Boiler are safe for you and for others.

This manual provides Safety Symbols. When the user fails to adhere to the following requirement, it may cause death, serious injury, and substantial property damage.

For safety symbols, 'DANGER', 'WARNING', CAUTION' are indicated and the definitions for these terms are as follow:

#### ⚠ DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is limited to the most extreme situations.



#### WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



#### **A** CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It is also used to alert against unsafe practices and hazards involving only property damage.

# ▲ WARNING

### FOR YOUR SAFETY READ BEFORE **OPERATING**

If you do not follow these instructions exactly, a fire or explosion could result causing property damage, personal injury or loss of life.

- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

#### WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

This appliance must be installed in accordance with local codes if any; if not, follow ANSI Z224.1/NFPA 54 or CAN/CSA B149.1, Natural Gas and Propane Installation Code, as applicable.

■ This appliance is certified for use at altitudes up to 4,500ft(1,370m) in accordance to the latest CSA/ CGA 2.17-M91 Gas-Fired Appliances for Use at High Altitudes.



#### **⚠** DANGER

■ Vapors from flammable liquids will explode and catch on fire. These will cause death or severe burns.

Do not use or store flammable products such as gasoline, solvents or adhesives in the same room or area near the appliance.

#### Keep flammable products

- ■Far away from boiler
- ■In approved containers
- ■Tightly closed
- ■Out of children's reach

#### **Vapors**

- ■Cannot be seen
- ■are heavier than air
- spread on the floor
- Can spread from other rooms to the main burner by air currents

Do not install the appliance where flammable products will be stored.

Read and follow boiler warnings and instructions thoroughly. If owner's manual is missing, contact the retailer or manufacturer.

■ This combination boiler must be installed by a qualified plumber, a licensed gas fitter, and/or a professional service technician.

Improper installation and/or operation will cause a potentially hazardous situation, such as serious injury or death. Also, it will void the warranty.

- The National Fuel Gas Code NFPA 54 / ANSI Z224.1
- National Electric Code ANSI/NEPA 70
- All applicable local, state, national and provincial codes, regulations and laws.
- Proper care is your responsibility. Carefully read and understand the Operating Information in this manual before operating the Laars Boiler.
- Be aware of the location of the gas shut-off valve and operation method. Close the gas shut-off valve immediately if the appliance is subjected to fire, overheating, flood, physical damage, or any other

damaging condition that might affect the operation of the unit. Boiler must be checked by a qualified technician before resuming operation.

- DO NOT use this Boiler if any part has been under water. Immediately call a qualified technician for inspecting the Boiler and replacing any part of the control system and gas control which have been under water.
- Do not power up the unit until the gas and water supply valves are fully opened. Make sure that the fresh air intake port and exhaust gas port are opened and functional.
- DO NOT attempt to install, repair, or service this Boiler by yourself.

Do not change any part of the Boiler. Contact a qualified technician if the Boiler needs repair or maintenance.

Ask your gas supplier for a list of qualified service providers.

- DO NOT use spray paint, hair spray, or any other flammable spray near Boiler or near the exterior fresh air inlet port. DO NOT place any items in or around the exterior exhaust gas outlet port and/or fresh air inlet port. These could restrict or block the flow in or out of the vent system.
- "Caution: While repairing control, all wires are labeled. You must connect the wires in accordance with the instruction.
   Wiring errors can cause improper and dangerous operation.
- ■"Verify proper operation after servicing operation"
- This consists of the gas ignition system components which are protected from water (dripping, spraying, rain, etc.) during operation and service (circulator replacement, condensate trap, control replacement, etc.).
- After installing the heater, safety devices must be tested.
- This boiler is equipped with a blocked vent shutoff system.

If the error code '41' occurs, follow the instructions below.

- First, turn off the manual gas valve.
- Make sure that there is no foreign object in the vent passage or rodent screen.
- If you do not find any problem, do the following.
- Turn off the error state by pressing the power button of control panel.
- If the error occurs repeatedly, call your service technician or gas supplier.

# **SECTION 3. Safety Regulations**

3.2 Safety Precautions and Proper Use

#### **Before Operation**

#### 1. Check the Gas Type (NG/LP)


When using or moving the unit for the first time, check if gas type matches with the gas type of the Boiler. Check whether the gas type which is supplied is NG (Natural Gas) or LP (Propane) and also check the Boiler gas type.

The gas type is indicated on the rating plate on side of the Boiler.

2. Check the Power (120V 60Hz) Check that the appliance is connected properly.

# Check the Cold Water Inlet valve

Please keep the appliance water inlet valve open at all times. The appliance will not ignite when insufficient water or no water is in the heating pipes. (valve: always open position)

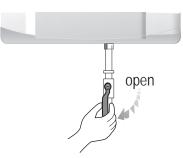

- 4. Check the Gas Valve Check that the manual gas shut-off valve that supplies the Mascot FT is opened.
- 5. Check the area around the appliance and remove any combustible or flammable materials. Remove laundry or any other items that are on or near the boiler or vent pipe.

#### When in Operation



1. Caution for Gas leak

Frequently check for a gas leak at the gas connection portion with soapy water.

Steps to take if you have a Gas leak.

- 1. Shut down the boiler as soon as gas fumes are detected.
- 2. Close the intermediate gas valve.
- 3. Open windows for ventilation.
- 4. Call a qualified service technician for immediate repair.

#### 2. Caution for Ventilation

Make sure that there is sufficient inflow and outflow of air ventilation while using the unit.

If the ventilation is improper, combustion quality may deteriorate inside the appliance and cause shortened life of the appliance.

#### 3. Burn Warning

Be careful not to burn yourself on the flue or pipes. They become extremely hot during operation.



#### **⚠** WARNING

Do not use the appliance for any other purpose than for heating and hot water.

Do not store combustibles or flammable material such as gasoline near the appliance.

Do not store other items on or near this boiler. Do not store combustible (flammable) materials such as papers.

Do not hang clothes on the vent pipe. This may start a fire.

#### **Burn Protection**

Be cautious when opening the hot water tap. The water is very hot. Especially, children or the elderly whose skin is liable to burn must not use the hot water without help of a guardian.



■ After repair of gas pipeline or gas regulator replacement, call A qualified contractor for inspection before starting it up.

#### Carbon monoxide poisoning

If vent pipe fumes enter the room, it could cause poisoning by carbon monoxide gas. Check that the vent pipes are properly connected. Open windows for ventilation. Call a qualified service technician for immediate repair.

#### Gas leakage test.

Gas supply line must be inspected regularly.

#### Do not shut off the Boiler.

When you leave home for a long time, do not shut off Boiler. The Boiler has a freeze protection function. The ceramic heater is installed inside of the heater's internal pipe to protect the heater from freezing.

Do not wipe the appliance or control panel with wet cloth. Electric shock may occur, or internal parts may fail due to the exposure to moisture.

Do not disassemble the Boiler. If repair is required, call your local qualified technician.

# SECTION 4. Installation

#### 4.1 Location and Clearances

The Mascot FT must be mounted to a suitable wall by a qualified heating contractor under the guidelines of a boiler. The wall may be of concrete or wood. Suitable fasteners for concrete or wood must be used. Failure to wall mount this boiler using correct fasteners will affect the performance and life expectancy of the boiler and will void the warranty.

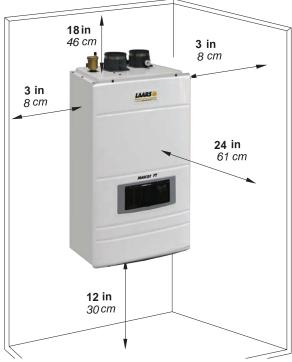


Figure 2. Locating the Appliance.

Minimum clearances to Combustibles.

For Installation from Non-Combustibles and Combustibles		Suggested Service Clearance
TOP of appliance	18 in (46 cm)	18 in (46 cm)
BACK of appliance	<sup>5</sup> / <sub>8</sub> in (1.5 cm)	<sup>5</sup> / <sub>8</sub> in (1.5 cm)
FRONT of appliance	24 in (61 cm)	40 in (101 cm)
SIDE of appliance	3 in (7 cm)	8 in (20 cm)
BOTTOM of appliance	12 in (30 cm)	24 in (61 cm)

Table 1. Minimum Clearances to Combustibles and for Service.

## WARNING

- ■Installations must comply with
- All the local, state, provincial, and national codes laws, regulations and ordinances.
- National Fuel Gas Code, ANSI Z223.1 The latest version
- National Electrical Code.
- A National Standard of Canada CAN/CSA-B149.1
- Check before placing the Combination boiler
- Always check the connected components which are near to the heater. The components are below.
- ■Water piping position / Venting adapter / Gas supply piping / Electrical power / Condensate drain hose.
- Inspect area around Combination boiler. Remove any combustible materials, gasoline and other flammable liquids. Failure to keep Combination boiler area clear and free of combustible materials, gasoline and other flammable liquids and vapors can result in severe personal injury, death or substantial property damage.
- The Combination boiler which has gas control system components must be protected from any possible danger during operation and service.
- If new Combination boiler replaces an existing appliance, check and correct system problems, for example:
- Do not install if: System leaks causing oxygen corrosion or heat exchanger cracks from hard water deposits.
- ■Provide clearances
- If the heater was installed in a narrow space or corner, please ensure that there is sufficient space for service and maintenance access. For regular maintenance, gas and water lines must be accessible
- The boiler must be installed on a wall that can bear its weight.

#### WARNING

- ■CLEARANCES FOR SERVICE ACCESS
- If you do not provide the minimum clearances shown, it might not be possible to service the boiler without removing it from the space.
- Space must be provided with combustion / ventilation air openings correctly sized for all other appliances located in the same space as the boiler. The boiler cover must be securely fastened to prevent it from drawing air from the boiler room. This is particularly important if the boiler is in a room with other appliances. Failure to comply with the above warnings could result in substantial property damage, severe personal injury, or death.

3" to Top of Unit

#### 4.2 Wall Mount Bracket

• 4.2.1 The installation height and location for your Mascot FT depends on your installation scenario. With all clearances considered, and given adequate positioning for air supply and venting, you will need to determine the best position to mount the Wall Mount Bracket. The wall must be concrete, wood, or plywood over studs, and must be strong enough to hold the boiler!

 Start by familiarizing yourself to how the included Wall Mount Bracket hooks underneath the two Hangers that are attached to the back of the boiler. The 'hooks' of the Wall Mount Bracket will be 3" from the Top of the boiler once the boiler is hung.


 Position the Wall Mount Bracket at the location that it will go, being sure that it is level, and then drill 4 holes (0.47"dia) with a 1/2" drill bit, into the wall through the Bracket.

 If mounting to a concrete wall, then use the concrete anchors. If onto wood or 5/8" (16 mm) plywood, then use the wood screws. Do not hang the Mascot FT onto sheetrock unless

it is possible to fasten directly into the structural studs. If the included anchors do not suit your installation, you must use 'Field Supplied' anchors that are appropriate for the wall's construction.

4.2.2 Hang the Boiler

- Lift the boiler up, align the Hangers on the back of the boiler with the hooks on the Wall Mount Bracket, and hang the boiler onto the Wall Mount Bracket. Do a visual inspection to make sure that the boiler is hanging properly onto the hooks of the Wall Mount Bracket.
- Fasten the bottom of the boiler to the wall using 2 suitable wall anchors (field supplied).

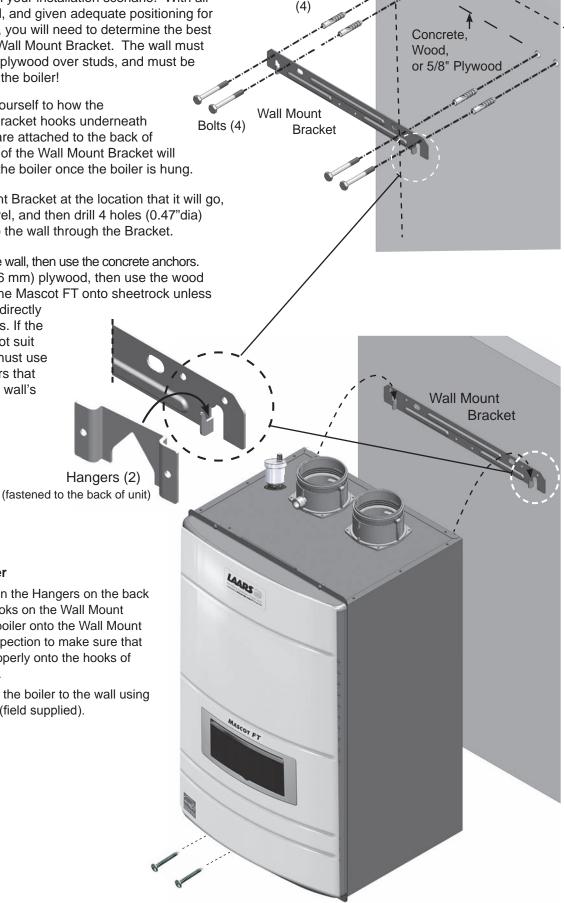

Anchors\*

# SECTION 4. Installation (continued)

#### 4.3 Combustion Air

Mascot FT boilers must have provisions for combustion and ventilation air in accordance with the applicable requirements for Combustion Air Supply and Ventilation in the National Fuel Gas Code, ANSI Z223 1; or in Canada, the Natural Gas and Propane Installation Code, CSA B149.1. All applicable provisions of local building codes must also be adhered to.

A Mascot FT unit can take combustion air from the space in which it is installed, or the combustion air can be ducted directly to the unit. Ventilation air must be provided in either case.

#### 4.3.1 Combustion Air from Room

In the United States, the most common requirements specify that the space shall communicate with the outdoors in accordance with method 1 or 2, which follow. Where ducts are used, they shall be of the same cross-sectional area as the free area of the openings to which they connect.

Method 1: Two permanent openings, one commencing within 12" (300mm) of the top and one commencing within 12" (300mm) of the bottom, of the enclosure shall be provided. The openings shall communicate directly, or by ducts, with the outdoors or spaces that freely communicate with the outdoors. When directly communicating with the outdoors, or when communicating to the outdoors through vertical ducts, each opening shall have a minimum free area of 1 square inch per 4000 Btu/hr (550 square mm/kW) of total input rating of all equipment in the enclosure. When communicating to the outdoors through horizontal ducts, each opening shall have a minimum free area of not less than 1 square inch per 2000 Btu/hr (1100 square mm/kW) of total input rating of all equipment in the enclosure.

Method 2: One permanent opening, commencing within 12" (300mm) of the top of the enclosure, shall be permitted. The opening shall directly communicate with the outdoors or shall communicate through a vertical or horizontal duct to the outdoors or spaces that directly communicate with the outdoors and shall have a minimum free area of 1 square inch per 3000 Btu/hr (734 square mm/kW) of the total input rating of all equipment located in the enclosure. This opening must not be less than the sum of the areas of all vent connectors in the confined space.

Other methods of introducing combustion and ventilation air are acceptable, providing they conform to the requirements in the applicable codes listed above.

In Canada, consult local building and safety codes or, in absence of such requirements, follow CAN/CGA B149.1

#### 4.3.2 Ducted Combustion Air

The combustion air can be taken through the wall, or through the roof. When taken from the wall, it must be taken from out-of-doors by means of the LAARS horizontal wall terminal. When taken from the roof, a field-supplied rain cap or an elbow arrangement must be used to prevent entry of rain water.

Use ABS, PVC, CPVC, polypropylene, or galvanized pipe for the combustion air intake. Route the intake to the boiler as directly as possible. Seal all joints. Provide adequate hangers. The unit must not support the weight of the combustion air intake pipe. Maximum linear pipe length allowed is shown in Table 6. Subtract 5 allowable linear ft. (1.5m) for every elbow used.

The connection for the intake air pipe is at the top of the unit.

In addition to air needed for combustion, air shall also be supplied for ventilation, including air required for comfort and proper working conditions for personnel.

COMBUSTION AIR INSTALLATION STANDARD
--------------------------------------

MATERIAL	UNITED STATES	CANADA
ABS	ANSI/ASTM D1527	
PVC, sch 40	ANSI/ASTM D1785 or D2665	Air pipe material must be chosen
CPVC, sch 40	ANSI/ASTM F441	CPVC, sch 40, ANSI/ASTM, Polypropylene
Polypropylene	UL1738, ULC S636.	based upon the intended application of the boiler.
Single wall galv. steel	26 gauge	

Table 2. Required Combustion Air Pipe Material.

# A NOTICE

The instructions for the installation of the venting system shall specify that the horizontal portions of the venting system shall be supported to prevent sagging; the methods of and intervals for support shall be specified. These instructions shall also specify that the venting system:

Category I, II and IV boilers must be installed so that horizontal sections have a slope of at least 1/4 inch per foot (21 mm/m) to prevent accumulation of condensate; and

For Category II and IV boilers, where necessary, have means provided for drainage of condensate.

#### **▲** CAUTION

- The Mascot FT is standard as a Natural Gas Boiler and must be converted if propane is the desired gas, unless specifically manufactured for propane.
- Adequate drainage
- The appliance should be installed not to damage the adjacent area. If such locations cannot be avoided, it is recommended that a suitable drain pan, adequately drained, be installed under the appliance. The pan must not block combustion air flow.
- ■Connecting the Water Supply
- To conserve water and energy, insulate all water piping—especially the hot and recirculation water lines. Never cover the drain or pressure relief valve. Having a backflow preventer in the cold water supply line will prevent thermal expansion backflow. Contact the water supplier or local plumbing inspector for information about how to control this situation.
- If overheating occurs or the gas supply fails to shut off, turn off the manual gas valve.
- ■This installation must conform with below section
- "Air for Combustion and Ventilation" of the National Fuel Gas Code, ANSI Z224.1/NFPA 54, or Sections 8.2, 8.3 or 8.4 of Natural Gas and Propane Installation Code, CAN/CSA B149.1, or applicable provisions of the local building codes.

# A AVIS

Les instructions d'installation du système d'évacuation doivent préciser que les sections horizontales doivent être supportées pour prévenir le fléchissement. Les méthodes et les intervalles de support doivent être spécifiés. Les instructions doivent aussi indiquer les renseignements suivants:

les chaudières de catégories I, II et IV doivent présenter des tronçons horizontaux dont la pente montante est d'au moins ¼ po par pied (21 mm/m) entre la chaudière et l'évent; les chaudières de catégories II et IV doivent être installées de façon à empêcher l'accumulation de condensat;

et si nécessaire, les chaudières de catégories II et IV doivent être pourvues de dispositifs d'évacuation du condensat.

## 4.4 Venting (Exhaust)

# **A** NOTICE

<u>DO NOT COMMON VENT MASCOT FT UNITS.</u>

Mascot FT units are never permitted to share a vent with Category I appliances.

# **A** AVIS

NE PAS ÉVENT COMMUNE MASCOTTE FT UNITÉS. Mascotte FT unités ne sont jamais autorisés à partager un évent Catégorie I avec les appareils.

The flue temperature of the Mascot FT changes dramatically with changes in operating water temperature. Therefore, it is necessary to assess the application of the boiler to determine the required certified vent class. If the Mascot FT is installed in an application where the ambient temperature is elevated, and/or installed in a closet/alcove, CPVC, polypropylene, or stainless steel material is required. If the system temperatures are unknown at the time of installation, stainless, polypropylene or CPVC material is recommended.

The Mascot FT is a Category IV appliance and may be installed with PVC, CPVC or polypropylene that complies with ULC-S636, ANSI/ASTM D1785 F441 (see Table 3) or a stainless steel venting system that complies with UL 1738 Standard and ULC S636.

# **A** WARNING

Use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenolsulfone) in venting systems shall be prohibited.

# **A** WARNING

Failure to use the appropriate vent material, installation techniques, glues/sealants could lead to vent failure causing property damage, personal injury or death.

### **A** WARNING

All venting must be installed according to this manual and any other applicable local codes, including but not limited to, ANSI Z224.1/NFPA 54, CAN/CSA B149.1 and ULC-S636. Failure to follow this manual and applicable codes may lead to property damage, severe injury, or death.

# **A** WARNING

Use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenolsulfone) in non-metallic venting systems is prohibited and that covering non-metallic vent pipe and fittings with thermal insulation is prohibited.

INSTALLATIONS IN CANADA require the use of venting material certified to ULCS636. All Gas vents connected to the Mascot FT, plastic, stainless steel or otherwise must be certified to this ULC standard. Appropriate selection of vent material is very important for proper performance and safe operation of the Mascot FT.

The flue temperature of the Mascot FT changes dramatically with changes in operating water temperature. Therefore, it is necessary to assess the application of the boiler to determine the required certified vent class. If the Mascot FT is installed in an application where the outlet water temperature exceeds 145°F, and/or installed in a closet, class IIB or higher vent material is required. If the system temperatures are unknown at the time of installation, class IIB or higher venting material is recommended.

IN CANADA all venting used must meet the following requirements:

- 1. ULC-S636 certified and marked
- 2. The first 3 feet of venting must be accessible for visual inspection.
- 3. All components used in the vent system must be from a certified manufacturer.

#### **VENTING INSTALLATION STANDARDS**

MATERIAL	UNITED STATES	CANADA
Stainless Steel	UL 1738	Venting must be ULC-S636 certified for use as
PVC, sch 40	ANSI/ASTM D1785	venting material. The venting material must be chosen
CPVC, sch 40	ANSI/ASTM F441	based upon the intended application of the boiler.
Polypropylene	UL1738 or ULC-S636	

Table 3. Required Exhaust Vent Material.

- 4. Vent system components must not be mixed with alternate manufacturers certified components and/or unlisted components.
- 5. The venting must be installed according to the vent manufacturers installation instructions.

The unit's vent can terminate through the roof, or through an outside wall.

Vent pipe must pitch upward, toward the vent terminal, not less than 1/4" per foot, so that condensate will run back to the Mascot FT to drain. Route vent pipe to the heater as directly as possible. Seal all joints and provide adequate hangers as required in the venting system manufacturer's Installation Instructions. Horizontal portions of the venting system must be supported to prevent sagging and may not have any low sections that could trap condensate. The unit must not support the weight of the vent pipe.

#### **⚠** WARNING


- Failure to vent this Boiler in accordance with these instructions could cause a fire, resulting in severe property damage, personal injury or death.
- Do not interchange vent systems or materials unless it is specified.
- The use of thermal insulation covering pipe and fittings is prohibited.
- Do not apply an electric damper, draft hood or vent damper with this Boiler.
- Do not locate vent termination where exposed to prevailing winds. Moisture and ice may fall on surface around vent termination. To prevent deterioration, surface must be in good repair (sealed, painted, etc.).

#### 4.5 General Location Guideline

- Vent system installation must be in accordance with Local codes or, in the absence of local codes, the National Fuel Gas Code, ANSI Z224.1 /NFPA 54 and/or CSA B149.1, Natural Gas and Propane Installation Code.
- The Boiler is designed to be installed as a Direct Vent (sealed combustion) type. The air for combustion must be supplied directly from the outside to the burner. Also, the flue gases must be vented directly to the outdoors (through wall or roof).
- Do not install venting system components on the exterior of building except as specifically required by these instructions
- Vent terminals must be at least 1 foot from any door, window, or gravity inlet into the building.
- Maintain the correct clearance and orientation between the vent and air intake terminals.
   The vent and air intake terminals must be at the same height and their center lines must be spaced apart 12" minimum.
- The bottom of the vent and air intake terminal must be at least 12" above the normal snow line. In no case should they be less than 12" above grade level.

- Do not install the vent terminal directly over windows or doors.
- Air intake terminal must not terminate in areas that might contain combustion air contaminates, such as near swimming pools.
- For sidewall venting, the minimum horizontal distance between any adjacent individual Module (Boiler) vent terminations is twelve (12) inches. It is better to be far more than 12 inches for avoiding frost damage to building surfaces where vent terminations are placed.
- The minimum horizontal distance between any adjacent individual module (boiler) roof vent endpiece is one (1) foot.

## 4.6 Locations for Vent Pipe Terminator

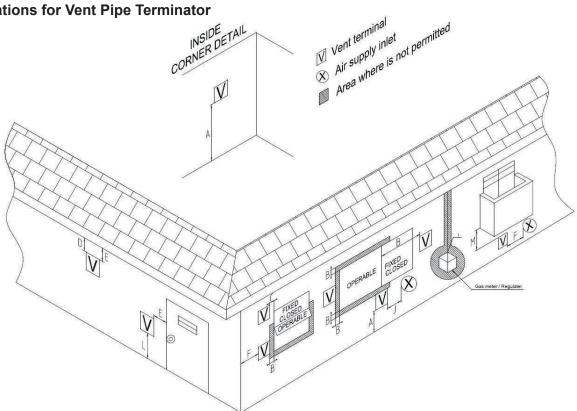

<sup>\*</sup>For clearances not specified in ANSI Z224.1 / NFPA 54 or CAN/CSA-B 149.1, please use clearances in accordance with local installation codes and the requirement of the gas supplier.

## 4.6.1 Direct Venting Clearances

	Description	US Direct Vent Instal- lations	Canadian Direct Vent Installations
Α	Clearance above grade, veranda, porch, deck, or balcony	12 in (30 cm)	12 in (30 cm)
В	Clearance to window or door that may be opening	12 in (30 cm)	36 in (91 cm)
С	Clearance to permanently closed window	*	*
D	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet from the center line of the terminal	*	*
Е	Clearance to unventilated soffit	*	*
F	Clearance to outside corner	*	*
G	Clearance to inside corner	*	*
Н	Clearance to each side of center line extended above meter/ regulator assembly	*	3 ft (91 cm) within a height 15 ft (457 cm) above the meter/ regulator assembly
- 1	Clearance to service regulator vent outlet	*	3 ft (91 cm)
J	Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance	12 in (30 cm)	36 in (91 cm)
K	Clearance to a mechanical air supply inlet	3 ft (91 cm) above if within 10 ft (3 m) horizontally	6 ft (1.83 m)
L	Clearance above paved sidewalk or paved driveway located on public property	*	7 ft (2.13 m)
М	Clearance under veranda, porch, deck, or balcony	*	12 in (30 cm)

Table 4. **Direct Vent Clearances** 

# 4.6.2 Non-Direct Venting (Single Pipe) Clearances

	Description	US Non-Direct	Canadian Non-Direct
Α	Clearance above grade, veranda, porch, deck, or balcony	12 in (30 cm)	12 in (30 cm)
В	Clearance to window or door that may be opening	48 in (120 cm) below or to side of opening; 12 in (30 cm) above opening	36 in (91 cm)
С	Clearance to permanently closed window	*	*
D	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet from the center line of the terminal	*	*
Е	Clearance to unventilated soffit	*	*
F	Clearance to outside corner	*	*
G	Clearance to inside corner	*	*
Н	Clearance to each side of center line extended above meter/ regulator assembly	*	36 in (91 cm) within a height 15 ft (4.57 m) above the meter/ regu- lator assembly
- 1	Clearance to service regulator vent outlet	*	36 in (91 cm)
J	Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance	48 in (120 cm) below or to side of opening; 12 in (30 cm) above opening	36 in (91 cm)
К	Clearance to a mechanical air supply inlet	36 in (91 cm) above if within 10 ft (3 m) horizontally	6 ft (1.83 m)
L	Clearance above paved sidewalk or paved driveway located on public property	*	7 ft (2.13 m)
М	Clearance under veranda, porch, deck, or balcony	*	12 in (30 cm)

Table 5. Non-Direct Vent Clearances

# 4.6.3 Venting Requirements in the Commonwealth of Massachusetts

In Massachusetts the following items are required if the side-wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches. From Massachusetts Rules and regulations 248 CMR 5.08

Installation of Carbon Monoxide Detectors

At the time of installation of the side wall vented gas fueled appliance, the installing plumber or gasfitter shall observe that a hard-wired carbon monoxide detector with an alarm battery back-up is installed on the floor level where the gas appliance is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard-wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side-wall horizontally vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for installation of hard-wired carbon monoxide detectors.

a. In the event that the side-wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard-wired carbon monoxide with alarm and battery back-up may be installed on the next adjacent floor level.

b. In the event that the requirements of the subdivision cannot be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements, provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm be installed.

#### 2. Approved Carbon Monoxide Detectors

Each carbon monoxide detector shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

- 3. Signage. A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print no less than one-half (1/2) inch in size: "GAS VENT DIRECTLY BELOW, KEEP CLEAR OF ALL OBSTRUCTIONS".
- 4. Inspection The state or local gas inspector of the side-wall horizontally vented gas fueled appliance shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a) 1-4.

# **A** NOTICE

<u>DO NOT COMMON VENT MASCOT FT UNITS.</u>
Mascot FT units are never permitted to share a vent with Category I appliances.

#### **Common Vent Test**

NOTE: This section does not describe a method for common venting Mascot FT units. It describes what must be done when an existing unit is **removed** from a common vent system.

# A NOTICE

At the time of removal of an existing boiler, the following steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

- 1. Seal any Not Used openings in the common venting system.
- Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
- 3. Insofar as is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed.
- Place in operation the appliance being inspected. Follow the lighting instructions. Adjust thermostat so the appliance will operate continuously.
- Operate the main burner for 5 minutes then, determine if the cut-draw overflows to the discharge opening. Use the flame of a match or a candle or the smoke of a cigarette, a cigar or a pipe
- 6. Once it has been determined, according to the method indicated above, that each device connected to the drainage system is placed in the open air in an adequate manner. Install the doors and windows, fans, the registers of chimneys and gas appliances to their original position
- 7. Any malfunction of the venting system should be corrected so that the installation conforms to the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and (or) the installation codes CAN/CSA-B149.1. If the size of a section of the evacuation system must be changed, the system should be modified to comply with the minimum values of the relevant tables of appendix F of the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and (or) the installation codes CAN/CSA-B149.1

### **A** AVIS

NE PAS ÉVENT COMMUNE MASCOTTE FT UNITÉS. Mascotte FT unités ne sont jamais autorisés à partager un évent Catégorie I avec les appareils.

### **A** AVIS

Au moment du retrait d'une chaudière existante, les mesures suivantes doivent être prises pour chaque appareil toujours raccordé au système d'évacuation commun et qui fonctionne alors que d'autres appareils toujours raccordés au système d'évacuation ne fonctionnent pas:

- Sceller toutes les ouvertures non utilisées du système d'évacuation.
- 2. Inspecter de façon visuelle le système d'évacuation pour déterminer la grosseur et l'inclinaison horizontale qui conviennent et s'assurer que le système est exempt d'obstruction, d'étranglement, de fuite, de corrosion et autres défaillances qui pourraient présenter des risques.
- 3. Dans la mesure du possible, fermer toutes les portes et les fenêtres du bâtiment et toutes les portes entre l'espace où les appareils toujours raccordés au système d'évacuation sont installés et les autres espaces du bâtiment. Mettre en marche les sécheuses, tous les appareils non raccordés au système d'évacuation commun et tous les ventilateurs d'extraction comme les hottes de cuisinière et les ventilateurs des salles de bain. S'assurer que ces ventilateurs fonctionnent à la vitesse maximale. Ne pas faire fonctionner les ventilateurs d'été. Fermer les registres des cheminées.
- 4. Mettre l'appareil inspecté en marche. Suivre les instructions d'allumage. Régler le thermostat de façon que l'appareil fonctionne de façon continue.
- 5. Faire fonctionner le brûleur principal pendant 5 min ensuite, déterminer si le coupe-tirage déborde à l'ouverture de décharge. Utiliser la flamme d'une allumette ou d'une chandelle ou la fumée d'une cigarette, d'un cigare ou d'une pipe.
- 6. Une fois qu'il a été déterminé, selon la méthode indiquée cidessus, que chaque appareil raccordé au système d'évacuation est mis à l'air libre de façon adéquate. Remettre les portes et les fenêtres, les ventilateurs, les registres de cheminées et les appareils au gaz à leur position originale.
- 7. Tout mauvais fonctionnement du système d'évacuation commun devrait être corrigé de façon que l'installation soit conforme au National Fuel Gas Code, ANSI Z223.1/NFPA 54 et (ou) aux codes d'installation CAN/CSA-B149.1. Si la grosseur d'une section du système d'évacuation doit être modifiée, le système devrait être modifié pour respecter les valeurs minimales des tableaux pertinents de l'appendice F du National Fuel Gas Code, ANSI Z223.1/NFPA 54 et (ou) les codes d'installation CAN/CSA-B149.1

#### 4.7 Air Supply and Vent Connections at the Appliance

#### 4.7.1 Vent / Air Pipe Lengths

Combination Boiler Model	3" Combustion	Air / Vent Pipe	2" Combustion Air / Vent Pipe	
Combination Boiler woder	Max	Elbow Max	Max	Elbow Max
MFTCW140/199	100´ (30M)	6	50 <b>′*</b> (15M <b>*</b> )	4

Table 6. Maximum Vent / Air Pipe Lengths for either 3" or 2 " Pipes

\*Propane models are limited to 25 equivalent feet of 2" vent

Note: For additional elbows, reduce maximum allowable length

- 5 feet (1.5M) for each additional 3-inch 90-degree elbow
- 2.5 feet (0.75M) for each additional 3-inch 45-degree elbow
- 8 feet (2.4M) for each additional 2-inch 90-degree elbow
- 4 feet (1.2M) for each additional 2-inch 45-degree elbow
- The thickness of the wall vents installed : Min 4" ~ Max 20"

NOTE: When using a 2" vent pipe, DIP Switch 4 must be in the OFF position. For 3" Pipe vent, the default setting for DIP 4 is ON.

Refer to Section 4.19

#### 4.7.2 Direct Venting


The boiler uses 3" or 2" diameter exhaust and 3" or 2"diameter intake air ducts. To ensure the draw of air directly from and exhaust of air directly to the outside of the building, create an airtight seal from the boiler collar to the vent termination.

(For installations in Canada) field-supplied plastic vent piping must comply with CAN/CSA B149.1 (latest edition) and be certified by the Standard For Type BH Gas Venting Systems, ULC-S636. Components of this listed system must not be interchanged with other vent systems or unlisted pipes or fittings. All plastic components and specified primers and glues of the certified vent system must be from a single system manufacturer and must not be intermixed with another system manufacturer's parts.


# ■ Tightening — Boiler Collar (Socket) to Vent Pipe & Inlet Pipe


- Clean and dry your selected PVC, CPVC vent pipe and Laars Boiler collar (socket).
- You can select to the size of vent pipe(2" & 3"), according to the installation conditions.
- Push the pipe into the collar (socket) until it touches the bottom of the socket fitting.
- For 2" installations, install a field supplied 3" to 2" adaptor. Adaptor must be installed in vertical section of piping only.

#### 3" pipe

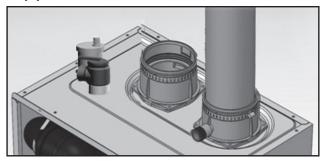

#### 2" pipe connected, using an adapter

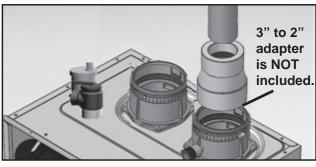

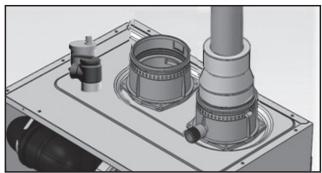

#### 4.7.3 Indoor Combustion Air

Read and Follow Sections 4.3 Guidelines First.

- 1. Insert the termination end cap into the intake air duct.
- 2. Provide two openings to allow for circulation of combustion air as specified by ANSI Z224.1/NFPA 54. In Canada refer to CAN/CSA B-149.1

Model	MFTCW140	MFTCW199
Maximum Input (BTU/H)	140,000	199,000
Indoor make up air is provided, a minimum free area of 1 in 2 per 1,000 BTU/H	140 in2 13 1/4" (W) x 13 1/4" (H)	199 in2 13 1/4" (W) x 13 1/4" (H)

NOTE: The Mascot FT needs fresh air for safe operation and must be installed so there are provisions for adequate combustion and ventilation air.




#### 4.8 Vent / Air Pipe Termination

Note: For using pipe more than 1 elbow, reduce maximum allowable length

- 5 feet (1.5M) for each additional 3-inch 90-degree elbow
- 2.5 feet (0.75M) for each additional 3-inch 45-degree elbow
- 8 feet (2.4M) for each additional 2-inch 90-degree elbow
- 4 feet (1.2M) for each additional 2-inch 45-degree elbow
- The thickness of the wall vents installed : Min 4" ~ Max 20"

#### Vent Termination

- 1. Rodent Screen Installation
- Install Rodent Screen and Vent Terminal (additional purchase), see Figure for appropriate configuration.
- After connecting vent/air inlet terminal, it is required to install screen for the terminal to prevent incoming of rodent, which might cause damage to the unit. (Extra purchase accessory 2/3" screen vent 1/4" mesh)

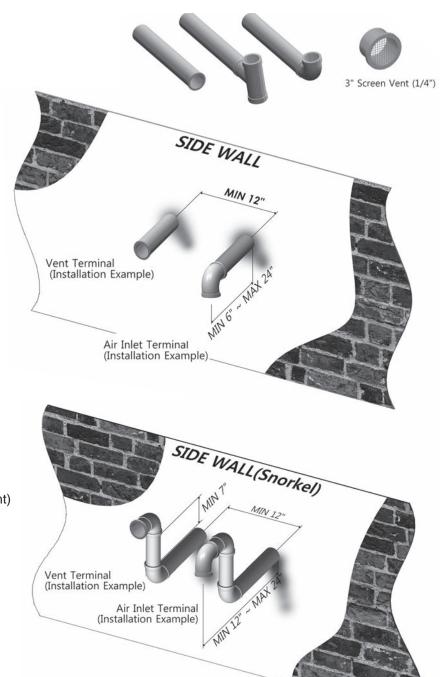


#### **Horizontal Vent Termination**


• Direct Vent - Sidewall Terminations

#### Horizontal Vent Termination (cont)

• Direct Vent - Optional Sidewall Snorkel Terminations

# 4.8 Vent Pipe Termination (cont)

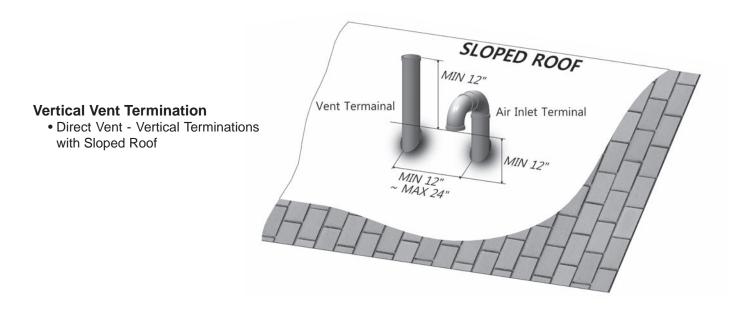

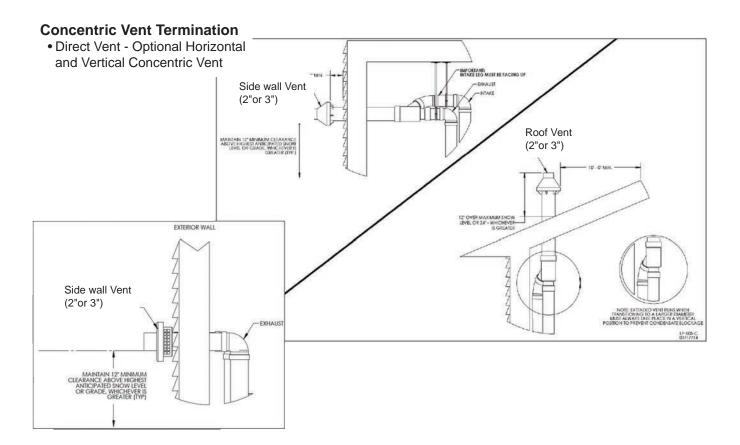

# 4.9 Gas Supply and Piping

Gas piping should be supported by suitable hangers or floor stands, not the appliance.

Review the following instructions before proceeding with the installation.

- Verify that the appliance is fitted for the proper type of gas by checking the rating plate. Mascot FT will function properly at elevations up to 10,000 feet (3050 m). Refer to Section 4.12 for High Altitude Settings.
- 2. The maximum inlet gas pressure must not exceed 13" W.C. (3.2kPa). The minimum inlet gas pressure is 3.5" W.C. (1.0kPa).
- 3. Refer to Table 8, Table 7 and Table 9 to size piping.
- Run gas supply line in accordance with all applicable codes.
- Locate and install manual shutoff valves in accordance with state and local requirements.
- A sediment trap must be provided upstream of the gas controls.
- 7. All threaded joints should be coated with piping compound resistant to action of liquefied petroleum gas.
- 8. The appliance and its individual shutoff valve must be disconnected from the gas supply piping during any pressure testing of that system at test pressures in excess of 1/2 PSIG (3.45kPa).
- The unit must be isolated from the gas supply system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 PSIG (3.45kPa).
- 10. The appliance and its gas connection must be leak tested before placing it in operation.
- 11. Purge all air from gas lines.

# **A** CAUTION

PRV (included) must be installed immediately at the top of boiler outlet to PRV, with no valves between. Refer to Section 4.15

# **A** ATTENTION

PRV (inclus) doit être installé immédiatement en haut de la chaudière sortie de PRV, sans les vannes entre. Se reporter à la Section 4.15

# **A** WARNING:

Open flame can cause gas to ignite and result in property damage, severe injury, or loss of life.

**NOTE**: The Mascot FT appliance and all other gas appliances sharing the gas supply line must be firing at maximum capacity to properly measure the inlet supply pressure. The pressure can be measured at the supply pressure port on the gas valve. Low gas pressure could be an indication of an undersized gas meter, undersized gas supply lines and/or an obstructed gas supply line.

SCHED 40 METAL PIPE CAPACITY FOR 1.50 SPECIFIC GRAVITY UNDILUTED PROPANE						
NOMINAL PIPE SIZE @ 11" W.C. INLET AND 0.5" W.C. PRESSURE DROP						
SIZE	1/2"	3/4"	1"			
LENGTH HOUR	MAXIMUM	1 CAPACITY	IN THOUSANDS	OF BTU PER		
20	200	418	787			
40	137	287	541			
60	-	231	434			
80	-	197	372			
100	-	175	330			

**NOTES:** 1. Follow all local and national propane gas codes for line sizing and equipment requirements. 2. Verify that inlet gas pressure remains between 4 and 13 inches of water column before and during operation. Source: ANSI Z223.1-80 National Fuel Gas Code.

Table 7. Nominal Pipe Size, Propane

TAL PIPE CAPACIT	Y FOR 0.60	SPECIFIC GRAVITY NATURAL GAS
NOMINAL PIPE SI	ZE @ 0.30"	W.C. PRESSURE DROP
3/4"	1"	
CUBIC FE	ET OF GA	S PER HOUR
190	350	
130	245	
105	195	
90	170	
	NOMINAL PIPE SI 3/4" CUBIC FE 190 130	NOMINAL PIPE SIZE ® 0.30"  3/4" 1"  CUBIC FEET OF GA  190 350  130 245  105 195

Table 8. Nominal Pipe Size, Natural Gas


EQUIVALENT LENGTHS OF STRAIGHT PIPE FOR TYPICAL SCH 40 FITTINGS							
	NOMINAL PIPE SIZE						
FITTING	1/2"	3/4"	1"				
	LI	INEAR FEE	Т				
90° ELBOW	3.6	4.4	5.2				
TEE	4.2	5.3	6.6				

Table 9. Equivalent Pipe Lengths

#### 4.9 Gas Supply and Piping (cont)

- The gas connection fitting is, 3/4" female NPT on MFTCW140 models 3/4" female NPT on MFTCW199 models
- The supply line must be sized for the maximum output of the combination boiler model being installed. If there are additional gas appliances from the main supply line, you must measure sizes of the supply line according to the COMBINED total maximum BTUH draw for the appliances as if they were all operating at the same time.
- Measure the length of the gas supply line from the gas meter to the Combination boiler.
   Use the tables in this manual or refer to the gas line manufacturers sizing information to determine the correct supply pipe size.


- The gas shut-off valve in the gas supply line should be installed close to the unit.
- To facilitate any future maintenance, it is also recommended that an approved gas union fitting be installed in the supply line between the shut-off valve and the 3/4″ female NPT connection on the Combination boiler.
  - Install an approved gas line pipe to gas line connection under the Combination boiler.
     Include manual shut off valve and gas union connection, as shown.
- Test gas pressure to make sure it meets the minimum standards and does not exceed the maximum standards for the combination boiler.
- 3) Leak test the gas line pipe before placing the unit in operation. Use approved leak detector liquid solutions only to check for leaks.
- Do Not Operate the combination boiler until all connections have been completed, checked for leaks, and the heat exchanger is filled with water.

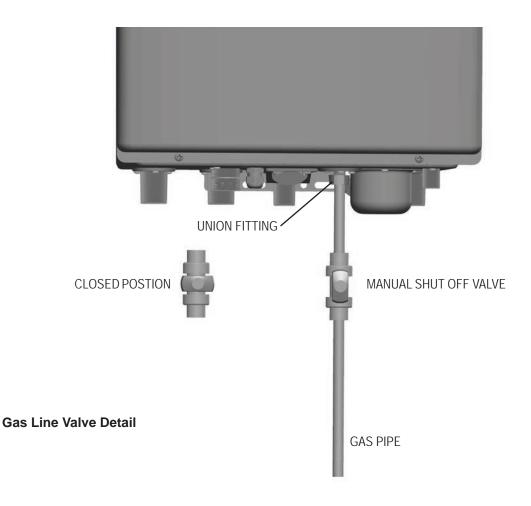

# **SECTION 4. Installation**

# 4.9 Gas Supply and Piping (cont)

# Suggested Natural Gas (NG) Layout Capacity: Not less than 'total capacity of connected appliances'

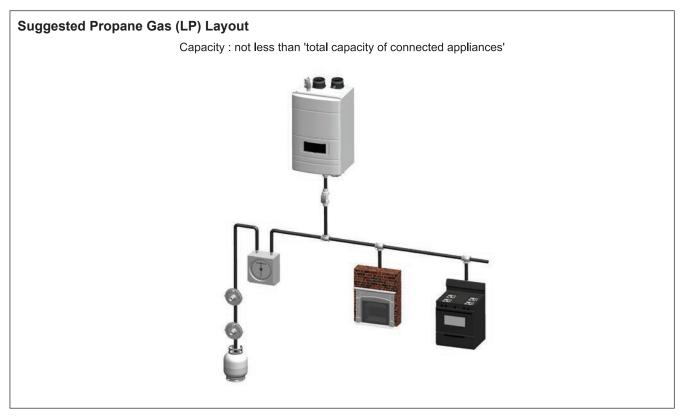

- The combination boiler must be installed downstream of the gas meter for adequate gas supply.
- The gas piping must not be less than 1/2" for MFTCW140 models and 3/4" female NPT on MFTCW199 models.

# **SECTION 4. Installation** 4.10 Gas Supply Pressure


Refer to the illustration.

Offset Adjustment.

Do Not Adjust without using a combustion analyzer to verify adjustment. Adjust ONLY when in MIN Fire and when using a combustion analyzer. See Section 4.13 for step by step details.

Gas Outlet Pressure Port

Inlet Gas Pressure Port

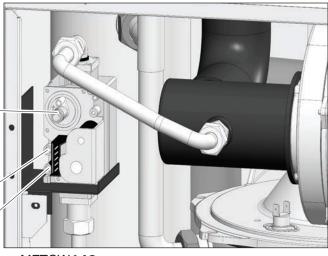

**MFTCW140** 

#### **MFTCW199**


Gas Outlet Pressure Port

Inlet Gas Pressure Port

## Offset Adjustment.

Do Not Adjust without using a combustion analyzer to verify adjustment. Adjust ONLY when in MIN Fire and when using a combustion analyzer.

See Section 4.13 for step by step details.

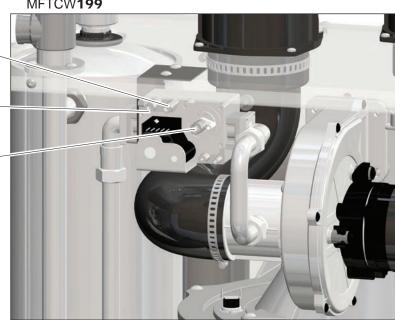

■The Maximum and Minimum gas line pressures must be

LP Gas		Natural Gas	
Maximum Pressure	13.0" WC	Maximum Pressure	10.5" WC
Minimum Pressure	8.0" WC	Minimum Pressure	3.5" WC

# ⚠ CAUTION

- The appliance and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of the system at test pressures in excess of 1/2 psi (3.5 kPa).
- The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).
- Loosen the pressure port bolts before you check the gas inlet pressure.

# 4.11 Gas Setup and Adjustment

For the Step by step process to measure  ${\rm CO_2}$  values on the Mascot FT Section 4.13 of this Installation Manual.

# ⚠ WARNING

Installer is required to verify combustion settings as part of the installation process. Standard Factory Setting is for MAX Fire. 9.0% CO2 @ 0-2,000 ft altitude (Natural Gas).

CO <sub>2</sub> value		Natural Gas (NG)		Propane Gas (LP)	
		2" VENT	3" VENT	2" VENT	3" VENT
MFTCW (ALL Sizes)	MAX FIRE	8.5 - 10.5%		9.5	- 11%
MFTCW (ALL Sizes)	MIN FIRE	8 - 10%		9 - 1	10.5 %

Table 10. CO<sub>2</sub> Values

Manifold pressure		'NG' type combustibility	'LP' type combustibility
		2"/3" VENT	2"/3" VENT
MFTCW140	MAX FIRE	-0.216" WC	-0.216" WC
IMF I CVV 140	MIN FIRE	0.002" WC	0.079" WC
METCW/100	MAX FIRE	-0.314"WC	-0.173"WC
MFTCW199	MIN FIRE	-0.015"WC	-0.015"WC

**Table 11. Manifold Pressures** 

#### 4.12 High Altitude Installations

The Mascot FT is shipped with a Natural Gas Nozzle or Orifice that is designed for altitudes up to 3,000 ft. Yet the Mascot FT may be installed (without modification) at elevations up to 10,000 ft, as the unit will de-rate at high altitudes. Mascot FT's that have been converted to propane will also de-rate at high altitudes up to 10,000 ft.

To order a specialized 'High Altitude' Gas Line Nozzle or Orifice to allow full rate operation, please visit

#### www.laars.com/support/sales-reps.aspx

to get the contact info for your nearest Laars Sales Representative.


The Mascot FT does have some settings within the Control Display that can be adjusted to suit your installation altitude. Gas Line Nozzles are used in the 140 MBH model





A Gas Line Orifice used in the 199 MBH model

See Section 4.13 for instructions to change out the Gas Line Orifice in the Mascot FT.

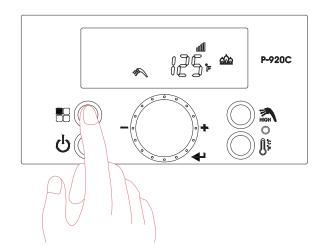

- High Altitude settings (2,000 ~ 10,000 ft)
- 1. With the Power U turned OFF, press the 'Modes button' for 5 seconds to get into the Installer Parameters Mode.

- 2. Turn the dial (E) until '28:HA' appears.
- 3. Press the dial (E).
- 4. Set the high altitude value by turning the dial. Refer to table.
- 5. Press the dial again (E) to save the setting.

#	Altitude of Installation
0	0~1999 ft (0~609 m)
1	2,000~4,499 ft (610~1,645 m)
2	4,500~7,699 ft (1,646~2,346 m)
4	7,700~10,000 ft (2,347~3,048 m)

6. Press the 'Modes button' of for one second, to Save the number and to go back to initial status.

#### 4.13 Natural Gas to Propane Conversion

The Laars Mascot FT condensing gas boiler is configured for Natural Gas (NG) from the factory. If your gas supply is Propane Gas (LP), your boiler can be converted to burn propane gas as follows:

### **▲** NOTICE

The Natural Gas to Propane Conversion Kit included with the Mascot FT, is intended only for altitudes less than 3000 ft. If your installation altitude is greater than 3000 ft, then please refer to Section 4.12 of the Installation and Operation Instructions. The Kit is supplied in a bag attached to the combination boiler. If your Mascot FT does not have the bag containing the conversion kit, a replacement kit can be obtained. Contact the manufacturer at the address below and request a replacement conversion kit.

#### **⚠** WARNING

This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. The information in these instructions must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.


Installation must conform to local codes and the latest edition of the National Fuel Gas Code, ANSI Z223.1 and CAN-B149.1. Failure to follow instructions could result in serious injury or property damage.

The qualified agency performing this work assumes responsibility for gas conversion.

#### ⚠ CAUTION

This combination boiler has already been set to burn natural gas, but can be converted to burn LP gas. Before placing the combination boiler into operation, verify that the type of gas supplied to your combination boiler.

#### Laars Kit Document #4288

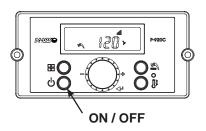



To convert from natural gas to propane gas

## Steps 1 thru 25


- **1.** Turn **OFF** the Mascot FT. The **ON / OFF** button is located at the bottom left of the Control Display.
- Turn OFF the GAS and WATER supply to the Mascot FT (valves are located on the plumbing pipes.)
- **3.** Using a Phillips screwdriver, remove the 4 screws on the front cover. See Figure A.
- **4.** Locate the Gas Inlet Pipe at the top left of the unit as shown in Figure A, and loosen the Brass Fittings at both ends of the Gas Inlet Pipe.
- 5. Completely unthread the brass fitting on the blower end of the Gas Inlet Pipe and then carefully swing the Gas Inlet Pipe to the left or right, just enough so that it is out of the way. See Figure B.
- 6. Remove the existing natural gas nozzle or orifice. If your unit is a 199, note that the flat side of the orifice is towards the blower. Save the packing for re-use. See Figure C.
- **7.** Install the new LP (propane) nozzle or orifice. Re-use the packing from previous.
- **8.** Return the Gas Inlet Pipe to its original position and tighten both of the brass fittings.

Model	Natural Gas (NG) part #	Propane Gas (LP) part #	
MFTCW140	FT1412N	FT1412P	Nozzle
MFTCW199	FT1780	FT1802	Orifice

Table A. Gas Conversion Parts



#### 4.13 Natural Gas to Propane Conversion

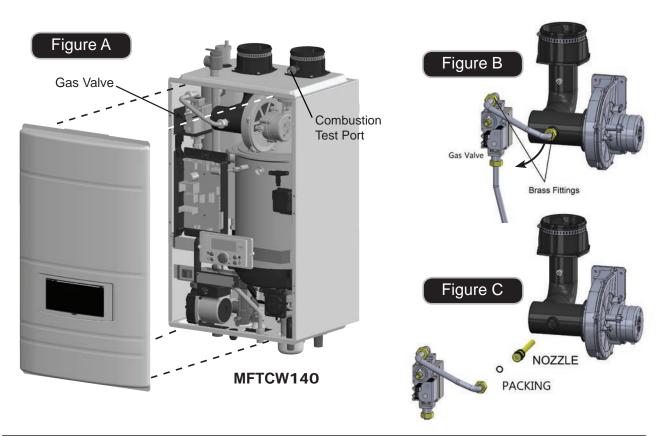




## **A** WARNING

This conversion shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, an explosion or production of carbon monoxide may result causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper and complete installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instruction supplied with the kit.


#### **A** AVERTISSEMENT

Ce conversion doit être installé par un organisme de service conformément aux instructions du fabricant et tous les codes et les exigences de l'autorité compétente. Si les informations contenues dans ces instructions n'est pas suivi à la lettre, un incendie, une explosion ou de la production de monoxyde de carbone mais résultat causant des dommages matériels, des blessures ou des pertes de vie. Le service est responsable pour la bonne et complète l'installation de ce kit. L'installation n'est pas correcte et complète jusqu'à ce que le fonctionnement de l'appareil converti est vérifiée comme spécifié dans le manuel d'instruction fourni avec le kit.

#### 4.13 Natural Gas to Propane Conversion

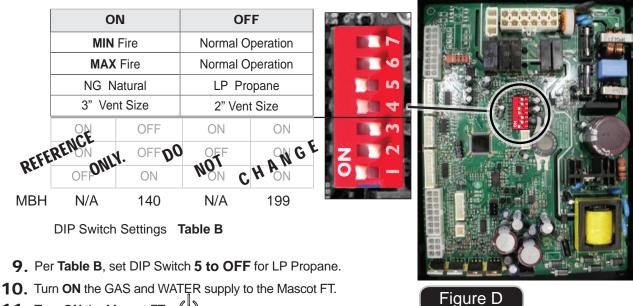

- 11. Turn ON the Mascot FT.
- 12. Connect a manometer to the manifold pressure port. For dual port manometers, use the positive pressure side. Check for proper manifold gas pressure. Refer to Table D.
- 13. Establish a call for heat. You may need to disconnect the outdoor reset if you are making this gas conversion during warm weather.
- **14.** Setup your combustion analyser and place the sensor into the combustion test port
- 15. Per Table B for Max Fire, change dip switch 6 to ON and 7 to OFF. The unit will cycle up to MAX fire.
- 16. WAIT for your combustion analyser to stabilize. This may take up to 3 minutes depending on your combustion analyser. Then check the CO<sub>2</sub> measurement for MAX fire. Refer to Table C for acceptable MAX fire combustion readings Do NOT attempt to adjust CO2 at MAX Fire. ONLY in MIN Fire, SO...
- 17. Per Table B for MIN Fire, change dip switch 6 to OFF and 7 to ON. The unit will cycle down to MIN Fire.
- 18. WAIT for your combustion analyser to stabilize. Then check the CO<sub>2</sub> measurement for MIN fire. Refer to Table C for acceptable MIN fire combustion readings
- 19. Open the Gas Valve Adjustment Port by removing the cap screw with a 4mm Allen wrench.
- 20. Then use the 4 mm Allen wrench to make a minor adjustment (1/8 turn) to either increase or decrease CO<sub>2</sub>.
- 21. It may be necessary to go back and forth between HI Fire and LOW Fire several times (and making

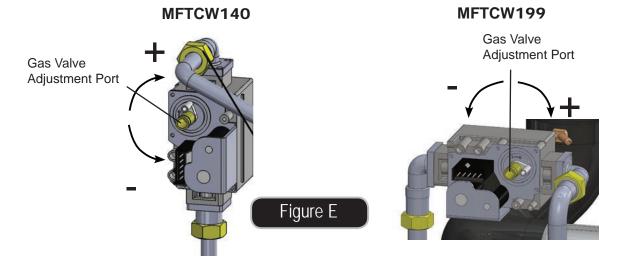

#### 4.13 Natural Gas to Propane Conversion

NOTE: Installer is required to verify combustion settings as part of the installation process. CO should not exceed 200 ppm.

CO <sub>2</sub> value		Natural Gas (NG)		Propane Gas (LP)		
		2" VENT	3" VENT	2" VENT	3" VENT	
MFTCW (ALL Sizes)	MAX FIRE	8.5 - 10.5%		9.5 - 11%		
	MIN FIRE	8 - 10%		8 - 10%		9 - 1

#### **Table C**

Manifold pressure		'NG' type combustibility	'LP' type combustibility
		2"/3" VENT	2"/3" VENT
MFTCW140	MAX FIRE	-0.216" WC	-0.216" WC
	MIN FIRE	0.002" WC	0.079" WC
MFTCW199	MAX FIRE	-0.314"WC	-0.173"WC
	MIN FIRE	-0.015"WC	-0.015"WC

#### Table D

adjustments only at LOW Fire), before CO<sub>2</sub> at both are within acceptable levels. Be sure to put the adjustment port cap screw back onto the valve when done.

- **22.** Once the CO<sub>2</sub> and manifold pressure measurements for both MIN and MAX Fire are acceptable per Table C, set DIP switches 6 and 7 to the OFF position for Nominal Fire (normal operation).
- **23.** Write in the correct Conversion Date and the Technicians Name to the included gas conversion sticker. See Figure F. Then apply that sticker adjacent to the rating plate.
- **24.** Remove your combustion analyser from the Test Port and be sure to thread the Test Port plug back into position.
- **25.** Re-connect outdoor reset if it was disconnected, put the boiler cover back on and assemble/tighten the 4 screws that hold the cover in place.

This unit was converted with kit #	_by		
Cette unité a été convert en utilisant le kit numéro (nom et société_ responsable)		par_	

Figure F (Conversion label)



#### 4.14 Plumbing Guidelines


- External Plumbing and Water Connection Guidelines
  - Ensure pipe material meets local codes and industry standards.
  - The pipe end must be clean and free of debris.
  - Do not apply torch heat within 12" of the bottom connections of the unit.
  - The size of the DHW pipe should be 3/4" diameter and central heating water pipe should be 1" diameter.
  - Isolation valves(Shutoff valve) will be used.
  - All piping should be insulated.
- Applicable Backflow Preventer
  - Apply a backflow preventer valve in the DHW supply inlet (water Inlet) to the unit as required by local codes.



Use at least the MINIMUM pipe size for the entire boiler loop piping (connecting boiler to and from the primary/secondary connection). Use only primary/secondary piping as shown. Failure to follow these guidelines could result in system problems.


■ CH pipe minimum size : 1"

■ DWH pipe minimum size : 3/4"

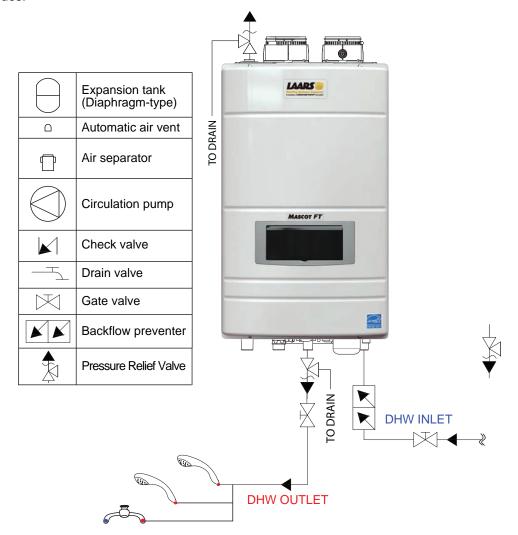


## 4.14 Plumbing Guidelines

- Zoning with circulation pump
- Each heating zone of a pump based system has its own circulator pump which runs when the zone needs it.
- Each zone thermostat goes to a controller which controls the pumps..

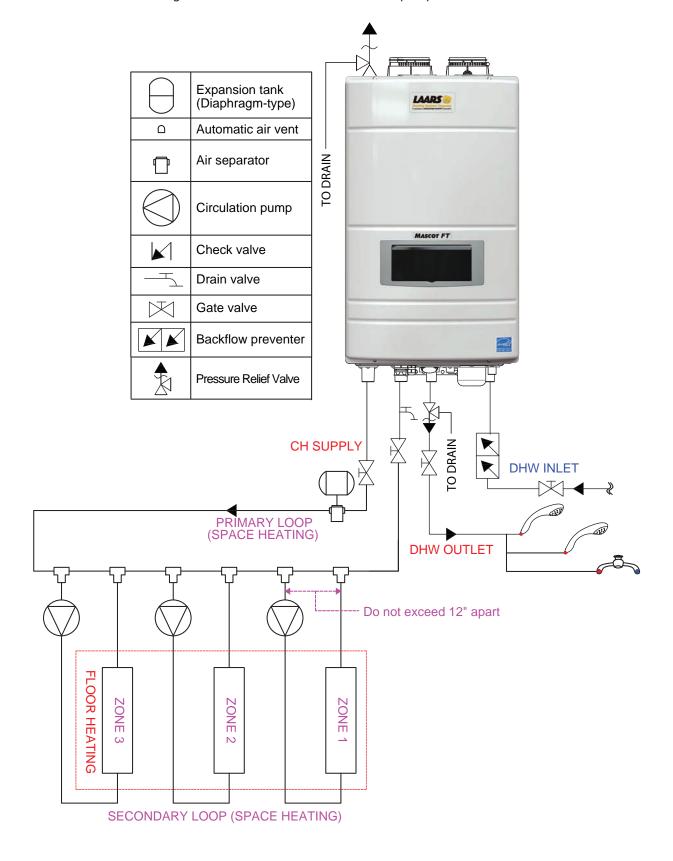

## 4.14 Plumbing Guidelines

- Zoning with zone valve
- In a valve based system, there is one circulator pump at the boiler and each heating zone has a zone valve which opens when the zone.
- Each thermostat is wired directly to the corresponding zone valve. Contacts in the zone valves provide a proper signal to the boiler when the valve is opened.

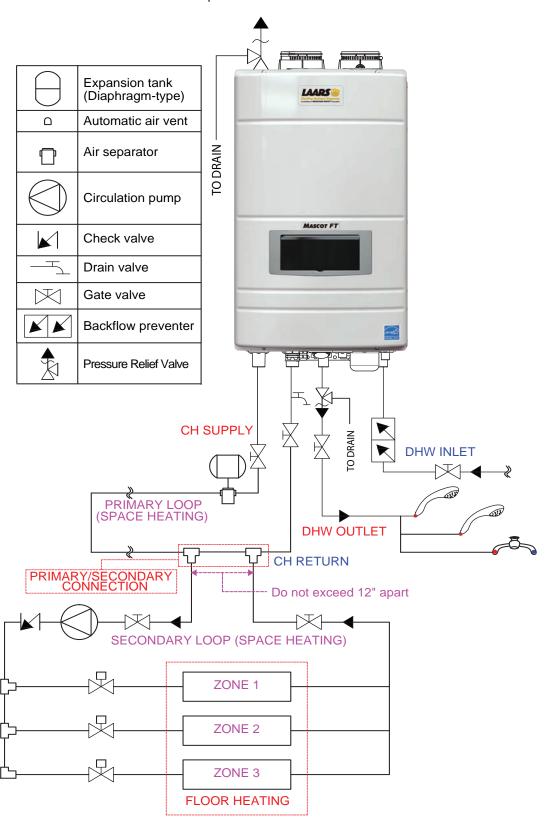

#### 4.15 Pressure Relief Valve

External pressure relief valves must be installed. Observe the following. Failure to comply with the guidelines on installing the pressure relief valve and discharge piping can result in personal injury, death or substantial property damage.

#### **⚠** WARNING

Do not operate this appliance before the pressure relief valve supplied is installed with sufficient relieving capacity in accordance with the ASME Rating Plate on the boiler.


- This hot water boiler is provided with 30 psi safety relief valve that complies with the ANSI/ASME Boiler and Pressure Vessel Code, Section IV ("Heating Boilers). (Model: CASE ACME F-82)
- This safety relief valve (30 psi) is shipped loose for field installation.
- An approved ASME HV Pressure Relief Valve must be installed on the DHW supply line as close to the unit as possible. Valve size 3/4", maximum 150 psi. Not included with boiler.
- For safety, the relief valve(s) must be installed into it's designed location and not be removed or plugged. Failure to comply with the guidelines on installing the pressure relief valves and discharge piping can result in personal injury, death or substantial property damage.
- Direct the discharge piping of the pressure relief valve so that hot water will not splash on anyone or any nearby equipment. Attach the discharge line to the pressure relief valve and run the end of the line within 6-12" (150-300mm) of the floor.

## **⚠** WARNING

- DO NOT install a CH pipe line relief valve with a pressure higher than 30psi and DHW pipe line relief valve with a pressure higher than 150psi. This is the maximum allowable relief valve setting for the combination boiler.
- Test the operation of the valve after filling and pressurizing system by lifting the lever. Make sure the valve discharges freely. If the valve fails to operate correctly, replace it with a new relief valve. Ensure that the discharge capacity of the pressure relief valve is equal to or greater than the maximum pressure rating of the combination boiler.

- Ensure that the maximum BTU/H rating on the pressure relief valve is equal to or greater than the maximum input BTU/H rating of the combination boiler.
- Pressure Relief Valve must be installed on the CH supply line & DHW outlet line as close to the unit as possible. (CH supply line: maximum 30psi, DHW outlet line: maximum 150psi). No other valves should be placed between the pressure relief valve and the appliance.
- This appliance has a high-temperature shut off switch built in as a standard safety feature . Therefore a "pressure only" relief valve is required.

3/4" 30psi Relief Valve

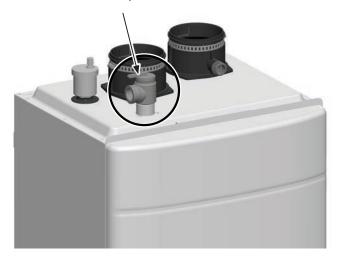

#### 4.16 Disposal of Condensate

- High efficiency gas condensing Boilers create condensation when operating. Condensation has acidic (pH) of approximately 4-5.
- Condensate must be drained in accordance with all local regulations. Follow your local code with regards to the disposal of condensation.

#### One of 4 disposal methods must be followed

- 1. to floor drain
- 2. to neutralizer (optional kit)
- 3. to laundry tub
- 4. to condensate pump (field supplied)
- ■If a neutralizer is installed, periodic replacement of the lime stone (or neutralizing agent) will be required. The rate of depletion of the lime stone varies upon usage of the boiler. During the first year of operation, please check the neutralizer every few months for depletion.
- Apply only corrosion-resistant materials for the condensate drain lines such as 1/2″ PVC, CPVC, Polypropylene pipe or included plastic hose.

## **A** NOTICE

For Category II and IV boilers, be installed so as to prevent accumulation of condensate; and

For Category II and IV boilers, where necessary, have means provided for drainage of condensate.

## A AVIS


les chaudières de catégories II et IV doivent être installées de façon à empêcher l'accumulation de condensat; et


si nécessaire, les chaudières de catégories II et IV doivent être pourvues de dispositifs d'évacuation du condensat.

## **A** CAUTION

Condensate is mildly acidic (pH=5), and may harm some floor drains and/or pipes, particularly those that are metal. Ensure that the drain, drainpipe, and anything that will come in contact with the condensate can withstand the acidity, or neutralize the condensate before disposal. Damage caused by failure to install a neutralizer kit or to adequately treat condensate will not be the manufacturer's responsibility.

Contact Laars to order Neutralizer Kit# A2123601

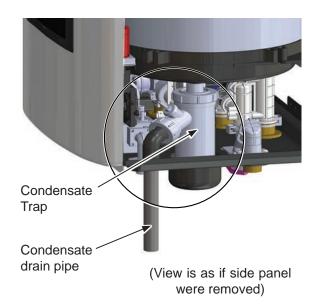

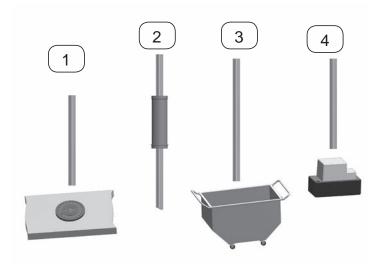

#### 4.17 DHW Flow Restrictors

#### Only on the MFTCW140

A flow restrictor, rated at 3.2 GPM and white in color, is pre-installed into the Mascot FT at the DHW inlet adapter. An additional flow restrictor, rated at 4.5 GPM, is blue in color and is packaged with the Product Accessories. See Section 1. If 3.2 GPM is not sufficient for your installation, replace the factory installed white flow restrictor with the blue flow restrictor by following these instructions.


To replace the Flow Restrictor.


- Being sure that the unit of completely Off and drained, locate the DHW inlet adapter on the bottom of the appliance.
- 2. Pull the two pins to release the DHW inlet filter. See Illustration. The flow restrictor is attached to the top of the filter assembly.
- Remove the installed white flow restrictor and replace it with the blue flow restrictor included with the Product Accessories.
- 4. Reinstall the DHW inlet filter.
- 5. Re-insert the two pins.
- Refill and restart your Mascot FT as per the Installation Instructions.

## **⚠** WARNING

If the appliance has been filled and operational, then the gas, water and power must be completely shut off, and the unit must be drained before proceeding with this instruction. See Section 8 of this installation book.

Failure to do so could result in substantial property damage, sever personal injury, or death.

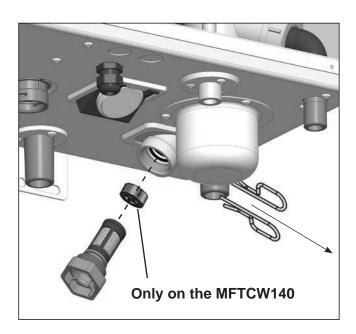

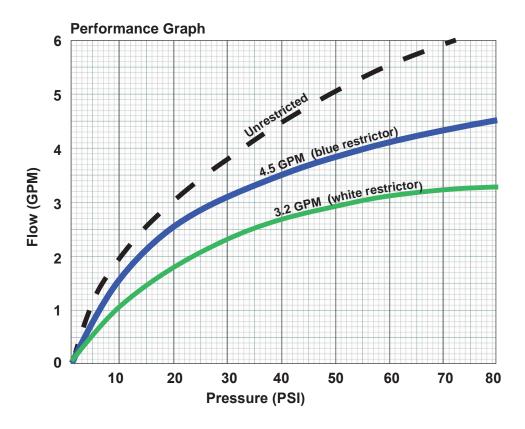


#### 4.18 Electrical Wiring Connections

#### MFTCW140



Manual Switch

**Terminal Block** 

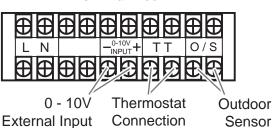


### **⚠** WARNING


- Install wiring and electrically ground boiler in accordance with authority having jurisdiction or, in the absence of such requirements, follow the National Electrical Code, NFPA 70, and/or CSA C22.1 Electrical Code-Part 1 in Canada.
- ELECTRICAL SHOCK HAZARD For your safety, turn off electrical power supply at service entrance panel before making any electrical connections to avoid possible electric shock hazard. Failure to do so can cause severe personal injury or death.
- This appliance must be electrically grounded. Ensure the electrical receptacle that the combination boiler will be plugged into, is properly grounded; if wiring directly.
- Do not attach the ground wire to either the gas or the water piping as plastic pipe or dielectric unions may isolate the Combination boiler electrically.
- The wiring diagrams contained in this manual are for reference purposes only.
- Refer to these diagrams and diagrams from external controls used with this appliance. Read, understand, and follow all wiring instructions.
- Do not disconnect the power supply when the unit is in normal operation. Damage caused by freezing is not covered under the warranty.
- Manual(Rocker) switch maximum allowable current for each circulator is 16 amps at 125VAC. (Housing: Nylon #66 UL 94V-2, Rocker: Nylon #66 UL 94V-2, Terminal: Copper Alloy)
- Terminal block (External power connector) : DFT-20A-10P (20 amps at 300VAC)

### 4.18 Electrical Wiring Connections (cont)

#### **MFTCW199**

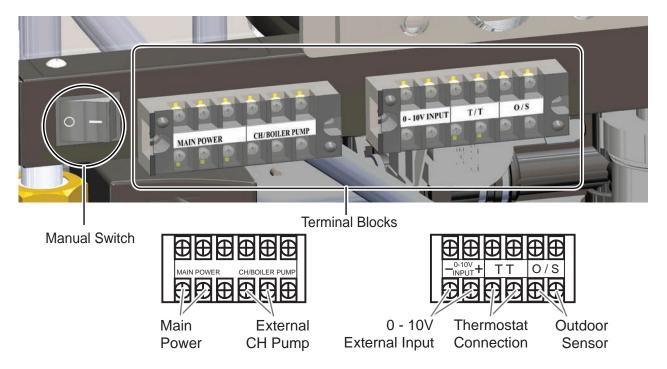


#### 4.19 DIP Switches

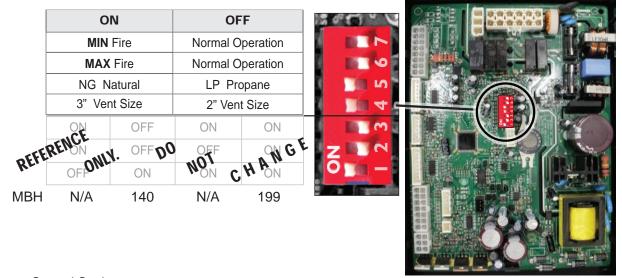


#### System Control Setting

Maximum flame detecting voltage	2.4V
Pre-purge time (Tp)	Maximum 10s, minimum 1s
Safety Time (igniting time) (Ts)	3s
Igniting interval time	10s
Post-purge time (Tip)	120S (1st : 60s + 2nd 60s)
Over-heating 1,2,3 protection detection time	<3s
Pump1 post circulating time (T1pv)	60s
Pump2 post circulating time (T1pv)	60s
High & Low Water Level detection time	<6s
High & Low Water Level Recover time	<68

#### 4.20 Control Board, Electrical Diagram

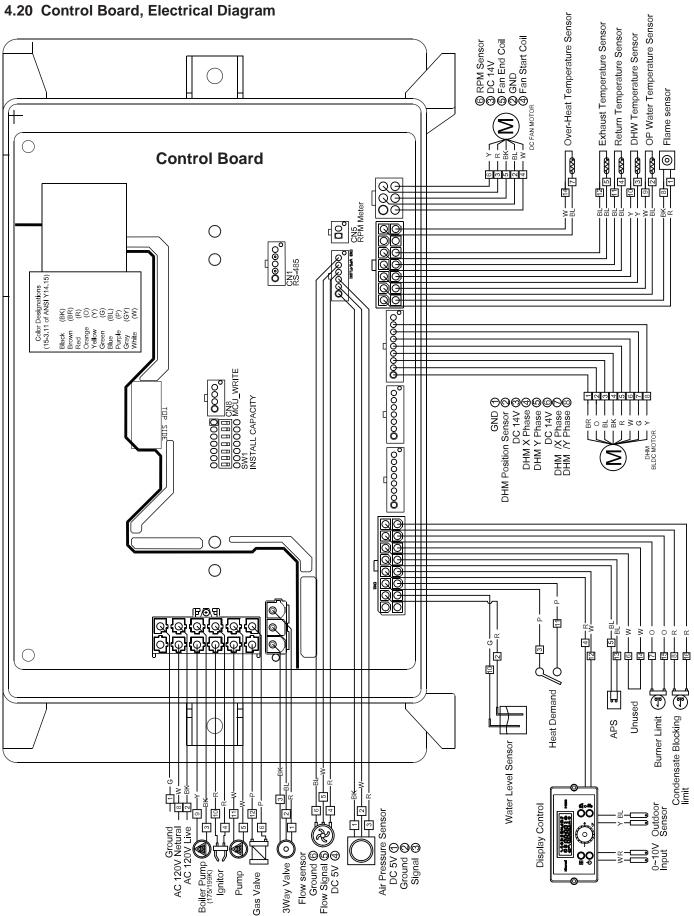

## 4.21 Ladder Diagram

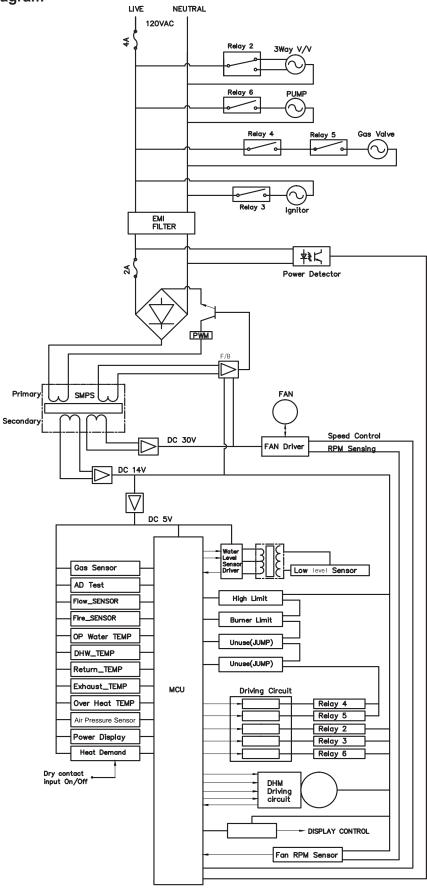

## 4.22 Electrical Connections


Connector				
#, Location, Type	PIN	Label	Description	HT SELV
	1	-	GROUND	HT (120V~)
	2	L	Power Supply Line	HT (120V~)
	3	CP1	Not Used	HT (120V~)
	4	IT	Igniter	HT (120V~)
CN9	5	L(HT)	Pump : CH	HT (120V~)
65001WS-12	6	GV	Gas Valve	HT (120V~)
	7	-	-	-
	8	N	Power Supply Neutral	HT (120V~)
	9-12	~ N ~	AC Power COM Line	HT (120V~)
CN6	1	CP3/3Way	3 Way Valve	HT (120V~)
LW6A4-03	3	CF 3/3 vvay		HT (120V~)
CN1	1		RS485 +	SELV (5V)
SMW250-5D	2	RS-485	GND	SELV (5V)
	3		RS485 -	SELV (5V)
	1		Not Used	-
	2		GND	SELV (30V)
CN4	3	FAN	VDD	SELV (14V)
LWD1140-06D	4		Fan power(start coil)	SELV (30V)
	5		Fan power(end coil)	SELV (30V)
	6		Fan speed feedback signal	SELV (14V)
	1		GND	SELV (5V)
CN8	2	MCU ISP	ISP /Reset port	SELV (5V)
SMW250-04D	3	IVICO ISP	ISP TOOL0 Data port	SELV (5V)
	4		VCC	SELV (5V)
	1 8	HWL	Not Used	SELV (12V~)
	2	LWL	Low Water Level Leakage Sensor	SELV (12V~)
	3 11	HD	Central Heating Demand	SELV (5V)
	4	TH	Connect to the Display Control(Thermostat)	SELV (14V)
CN11	12 5		Control(Thermostat)	
LWD1140-16	13	APS	Jump	SELV (14V)
	6 14	EL	Jump	SELV (14V)
	7 15	BL	Burner Limit	SELV (14V)
	8 16	HL	Condensate Block	SELV (14V)

4.22 Electrical Connections

Connector					
#, Location, Type	PIN	Label	Description	HT SELV	
	1	F.S	Flame Detect Sensor	SELV (5V)	
	8	1.0	Figure Detect delisor	OLLV (OV)	
	2	OP.S	Operating water temperature sensor	SELV (5V)	
	9	01.0	operating water temperature sensor	OLLV (OV)	
	3	DH.S	DHW temperature sensor	SELV (5V)	
	10	516	21.11 temperature concer	0221 (01)	
CN7	4	I.S	Return temperature sensor	SELV (5V)	
LWD1140-14	11			0==: (0:)	
	5	BG.S	Venting (Exhaust) temperature sensor	SELV (5V)	
	12	20.0	9 (	0==: (0:)	
	6	ST.S	Not Used	SELV (5V)	
	13	01.0			
	7	SP.S	Over-Heat temperature sensor	SELV (5V)	
	14	01.0		0221 (01)	
	1		GND	SELV (14V)	
	2		DHM Stepper motor position	SELV (14V)	
	3		VDD	SELV (14V)	
	4		DHM Stepper motor coil X phase	SELV (14V)	
CN14 SMW250-09D	5	DHM	DHM Stepper motor coil Y phase	SELV (14V)	
3WW230 03B	6		VDD	SELV (14V)	
	7		DHM Stepper motor coil /X phase	SELV (14V)	
	8		DHM power IWM Stepper motor coil /Y phase	SELV (14V)	
	9		Unuse	-	
	1		VCC	SELV (5V)	
	2	APS SENSOR	GND	SELV (5V)	
CN3	3		Voltage Input	SELV (5V)	
SMW250-06D	4		VCC	SELV (5V)	
	5	FLUX1	Water Flow Sensor	SELV (5V)	
	6		GND	SELV (5V)	
CN5	1	RPM	FAN RPM Check	SELV (5V)	
SMW250-10D	2	TXI IVI	GND	SELV (5V)	

5.1 Control Dial and Buttons

### The Control Display

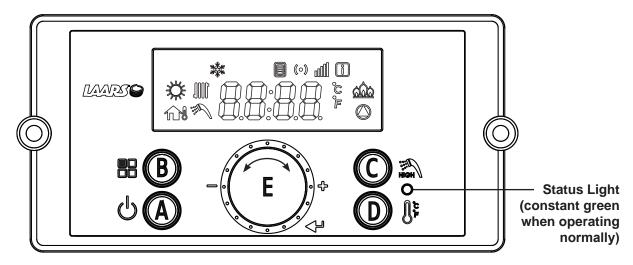

**The Control Display** has a Control Dial (E), 4 buttons (A, B, C, D), and a Liquid Crystal Display (with 72 back-lit segments). This section of this manual gives instruction on how to navigate into the many functions of the Mascot FT and to change temperature set points, set system variables and controller parameters.

Puttons		Hana		Functionality			
	Buttons		PRESS (Tap)	PRESS and HOLD (5 seconds)			
Α	O	Display Power	Turns Control Display ON/OFF				
В		Modes	Tap to return to menu	(If Display Power was On ) <b>Status Display Mode</b> (If Display Power was Off ) <b>Installer Mode</b>			
С	ET (	Hot Water	DHW Set-Point LOW Range 95 - 120°F (35 - 49°C)	DHW Set-Point HIGH Range 121 - 140°F (49.5 - 60°C)			
D	J\$	Central Heat	CH set-point mode (boiler only)	Toggle (°C / °F)			
Е		Scroll / Select	Turn to scroll, tap to select (clockwise or counterclockwise)				


#### • Temperature Specifications

Operating ambient Temperature Range : -10 to  $60^{\circ}$ C.

Operating Relative Humidity up to: 90% at 40°C.

Shipping & Storage Temperature Range of : -20 to 80°C.

5.2 LCD Overview

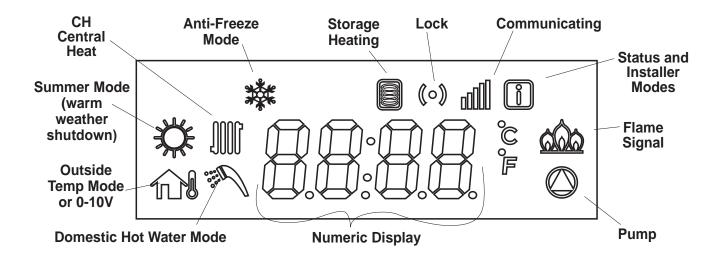

CH mode	Central Heat mode icon can be adjusted	
Anti-freeze mode	Anti-freeze mode icon	
Storage Heating mode	Stored Water Being Heated, can be adjusted	
Lock mode	Buttons-locked mode icon	
Communication	Communication icon	
Summer mode	Only DHW Mode, can be adjusted (warm weather shutdown)	
Status and Installer mode	The Status Mode or the Installer Mode is Active (all parameters)	
Flame signal	Flame Signal icon	
Pump icon	Water pump operation (CH or DHW) icon	
Numeric Display	Number and character display, to display all parameters	
DHW mode	Combination boiler Set Point, can be adjusted	
Outside temp or 0-10 V mode	Operating by outside temperature or 0-10V	

The LCD will illuminate when a user action is detected (a button is pressed) and will turn back off after 20 seconds.

\* NOTE: The display will not allow changes when the lock mode (o) is activated. To exit the Lock mode, press the 🔀 button.


## **A** WARNING

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that may have been under water.

#### 5.3 Operating Mode


■ Operating Mode

After the Power is turned on, and/or the Control Display is turned on (1), the Control Display will go through a 'Start Up' checklist and briefly show a sequence of diagnostic codes before entering into the 'Operating Mode. It will then display the following information.

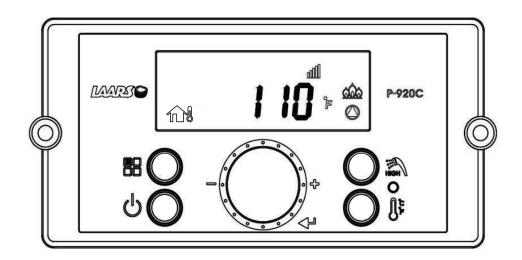

Indicate	Example
Current Operating Temperature	110°F
Temperature sign Celsius or Fahrenheit letter	°C or °F
Display and Controller are communicating	all
If flame detected	රුවිය
If pump is operating	
Outdoor sensor or 0-10V	<b>1</b>

#### 5.4 Status Display Mode

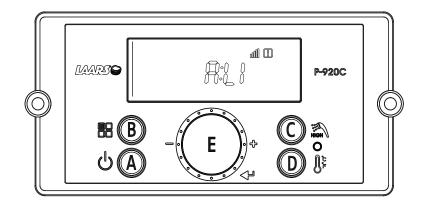

Digital I	Digital Display Status Display Parameter			Description			
O:ot		Outdoor temper	ature	Current Outdoor temperature			
A: Li or /	A: Li or A: GA Flow unit			Current flow value(Li: L/m, GA: GPM)			
b: It		CH Return Wate	er Temperature	Current Return Wa	ter Sensor Tempera	ture	
C: Fr		Fan rpm		Current fan rpm va	lue		
d: Lc		Lock mode		Lock mode ON/OF	F		
E: oP		OP temperature		Current OP temper	rature		
F: dH		DHW temperatu	re	Current DHW temp	perature		
H: Eh		Exhaust temper	ature	Current Exhaust te	mperature		
I : St		N/A		Not Used (Default	is 0)		
J: oH		Overheat tempe	rature	Current Overheat temperature			
	1: PH	1: PH	Supply power time	Supply power time x 100 hour			
	2: rh	Burner operation time	Burner operation time x 1 hour				
L: rt	3: rH	Burner Opera- tion Time	Burner operation time	Burner operation ti	ime x 1,000 hour		
	4: It		Ignition cycles	Ignition cycles x 10 times			
	5: IH		Ignition cycles	Ignition cycles x 10	cycles x 10,000 times		
				1st Icon	2nd Icon	3rd Icon	
P: Ou		Displays output condition for internal primary pump and three way valve.  Off  On		Not Used	Internal CH Pump	3 Way Valve	

## To change any of the above listed Status Parameters,

Press and Hold Button B 🔡 to get into the Status Display Mode.


Rotate Dial E until you find the Parameter that you wish to change. Tap Dial E to enter that Parameter.


Adjust to the setting that you require and then press (tap) Dial E to save and to Exit.

#### 5.5 DHW Set Point Change Mode

■ DHW Set Point Change Modes The display shows the following information when changing water heating temperature set points.

Changing between Celsius and Fahrenheit When the button D is pressed (for more than 5 seconds), temperature unit will toggle between °C and °F.

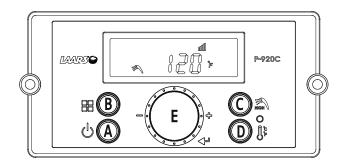

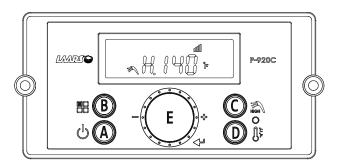

Indicate	Example
Current DHW set-point temperature	120°F
Temperature sign Celsius or Fahrenheit letter	°C or °F
If display is communicating with the main controller normally, the communication icon will be indicated.	affl
When DHW set-point range is high: from 121°F (49.5°C) to 140°F (60.0°C)	H . 140°F
1 0 0	

<sup>\*</sup> Default DHW set-point is 120°F (49°C)

## • DHW 95-120°F (35 - 49°C) LOW range (Default)

- **-To change LOW range**, press the C Button. The DHW icon and current DHW LOW will flash (a flashing value means it can be changed).
  - -Turn dial E clockwise to increase and counterclockwise to decrease until desired temperature is reached. -Press dial E to save setpoint changes.

#### DHW 121 - 140°F (49.5 - 60°C) HIGH range

- **-To change HIGH range**, press and **HOLD** the C button for more than 5 seconds. The DHW icon and current DHW HIGH will flash (a flashing value means it can be changed).
  - -Turn dial E clockwise to increase and counterclockwise to decrease until desired temperature is reached.
  - -Press dial E to save setpoint changes and to Exit.


### **A** DANGER

Scalding may occur within 5 seconds at a setting of 140°F (60°C). Water temperatures over 125°F can cause severe burns, or death from scalding. Children, disabled, and elderly are at highest risk of being scalded. Read all instructions before setting temperature at appliance. Feel water before bathing or showering.



5.6 CH Set Point Change Mode

Changing between Celsius and Fahrenheit When the button D be is pressed (for more than 5 seconds), temperature unit will toggle between °C and °F.

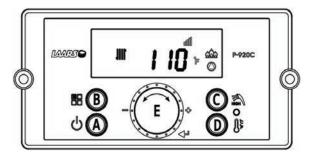

Indicate	Example
Current Operating Temperature	110°F
Temperature sign Celsius or Fahrenheit letter	°C or °F
Display and Controller are communicating	all
If flame detected	<u>6</u> 00
If pump is operating	
When changing CH Setpoint, the CH Icon will flash	

Default CH set-point is 120°F (49°C)


CH set-point range is 86 - 180°F (30.0 ~ 82.0°C)

To change CH Setpoint, press the D button. The CH Icon and current CH Setpoint will flash.

Turn the E dial clockwise to increase, and counterclockwise to decrease CH setpoint, until desired temperature is reached.

Press E dial to save changes and to Exit.

### 5.7 Storage Mode

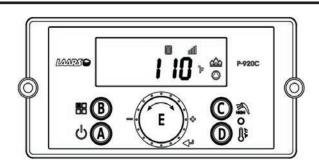

Indicate	Example
Current Operating Temperature	110°F
Temperature sign Celsius or Fahrenheit letter	°C or °F
Display and Controller are communicating	all
If flame detected	<u>ട</u> ്ട
Storage mode indication	
If Pump is operating	

To change Storage Mode Temp, First turn OFF the power to the Control Display.


Then Press and Hold Button B 📅 to get into the Installer Mode.

Rotate Dial E until you find **5:St** Tap Dial E to enter Storage Mode. Storage Mode indicates that the boiler is heating the water held in the internal storage tank. When Storage Mode is active, the display will appear as shown.

Turn the E dial clockwise to increase, and counterclockwise to decrease setting.

Press E dial to save changes and to Exit.

#### 5.8 Installer Mode

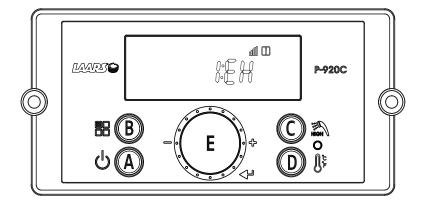

These changes are to be made only by a qualified technician.

To change any of the Installer Parameters, Start by turning OFF the Power to the Display Control.

Then, with the power OFF, Press and HOLD (more than 5 seconds) the Button B to get into the Installer Mode.

Rotate Dial E until you find the Installer Parameter (full list on facing page) that you wish to change. Tap Dial E to enter that Parameter.

Adjust to the setting that you require and then press (tap) Dial E to save and to Exit.

Finish by pressing button B

## 5.8 Installer Mode

Index	Parameter	Description
1: EH		Description  History fault code (EQ. EQ.)
2: cE	History entry	History fault code (E0~E9)
3: In	Clear Error History	Clearing of error History buffer  System initialize to default
4: Fu	System initialize Flow unit	gallon / liter
5: St	Heat storage function	Heat storage function On/Off
6: OH	Maximum Outdoor Temperature	When used with an outdoor sensor, sets the maximum outdoor design temperature for the system design. Warm weather shut down will disable the appliance if the programmed outdoor temperature is exceeded. Maximum outdoor temperature must be set 9°F above the minimum outdoor temperature. Range: (Minimum Outdoor Temperature + 9°F) to 110°F Default 68°F (20°C)
7: OL	Minimum Outdoor Temperature	Sets the minimum outdoor design temperature for the system. Minimum outdoor temperature must be set 9°F below the maximum outdoor temperature.  Range: -4°F to (Maximum Outdoor Temperature - 9°F)
8: FH	Max fan	Adjusts Maximum Fan Speed Range: -30 - +30
9: FL	Min fan	Adjusts Minimum Fan Speed Range: -30 -+30
10: dr	Delete running time	Delete running time
11: dl	Delete igniting times	Delete igniting times
12: bt	Outside Unit Function Delay Time (boost time)	When heating in the outside unit function for the first time, there will be a delay. (0~120 min, Default 0)
13: Ft	Delay time for heating burner operation	Burner does not operate during the delay time when the burner is turned off due to the temperature during heating operation. (0~20 min, Default 1 min)
14: bo	Setting temperature of burner ON.	Heating temperature setting during heating operation – Operate in burner ON temperature setting Range: -12.7°C(9°F)~-2.7°C(27°F), Default 2.7°C(27°F)
15: OF	Warm Weather Shutdown	This warm weather temperature setting will shut down CH Mode 10°C(50°F)~43°C(110°F), Default 38°C (100°F)
16:cH	Setting for Heating Maximum Temperature	Range:[Minimum Temperature -12.7°C(9°F)]~82°C(180°F), Default 82°C(180°F)
17:cL	Setting for Heating Minimum Temperature	Range: 30°C(86°F)~[Maximum Temperature-12.7°C(-9°F)],Default 30°C(86°F)
18:dH	Setting for Hot Water Maximum Temperature	49°C(120°F)~60°C(140°F), Default 60°C(140°F)
19:cb	Heating Combustion Rate	50%~100%, Default 100%
20:db	Hot Water Combustion Rate	50%~100%, Default 100%
21:PP	Pump Post-Purge Time	(Heating Pump) 1min ~ 60min, Default 40min
22:Po	Pump on Time	(Heating Pump Repeat ON Time) 1 min ~60 min, Default 5 min
23:PF	Pump off Time	(Heating Pump Repeat Off Time) 0min ~60 min, Default 10 min
24:SF	Heat storage off Temperature	60°C(140°F)~75°C(167°F),Default(70°C)158°F
25:So	Heat storage on Temperature.	(off Temperature-Setting Temperature) -12.7°C(9°F)~2.2°C(36°F), Default (-2.7°C) 27°F
26:dt	Delay time when switching from DHW mode to CH mode	Range: 0 – 2 minutes, Default 2min
27:PE	Internal CH Pump Post- Purge Time, T/T Satisfied	Allows the user to set the appliance pump post purge time once the appliance CH setpoint and thermostat are satisfied. Range: 1-5 minutes, Default 1min
28: HA	High Altitude setting	(Normal)0<1<2<4 (High)
29: AP	Internal CH Pump and 3-way valve Pump Test Mode	This function sets the time to run both the Internal CH and 3-way valve pumps to purge air from the system. Range: 1 – 30 minutes ,Default 5min
	Internal CH Pump and 3-way valve Pump Test Mode	Turn this function on to activate Internal CH and 3-way valve pump testing. Only works in installation mode. Turns off when in normal mode. Default OFF
30: dP	DHW Timeout Feature	Range: 0~12 time, '0' OFF, Default: 4 time

#### 5.9 Outdoor Reset Adjustment


Outdoor Reset varies the control setpoint based on the outdoor temperature. The reset function works as shown in Figure 'CH Outdoor Reset'. When the outdoor air temperature reaches 6:OH "high outdoor temperature setpoint", the control point setting is adjusted to 17:cL "low boiler temperature setpoint". When the outdoor air temperature reaches 7:OL "low outdoor temperature setpoint" the control setpoint is adjusted to 16:cH "high boiler temperature".

Default outdoor reset setpoint is 100°F (38°C)

The Outdoor Temperature Mode Icon on the display will flash if an Outdoor Sensor or 0-10 Volt is not connected to the appliance.

To check the CH Target Temperature while using

Outdoor Temperature Mode, press the button while the appliance is operational and the display panel is powered on.

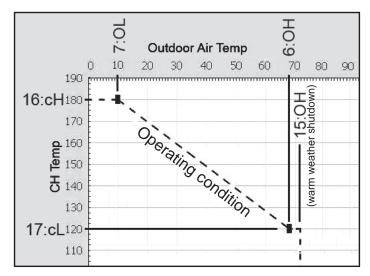

**CH Outdoor Reset** 

Connect to terminal strip as outlined 4.17 Electrical Connections.

NOTE: 0 - 10VDC terminals may not be used for both outdoor reset and 0 - 10VDC temp setpoint simultaneously.

#### 5.10 External Set Point Temperature Control

A signal from a building management system may be connected to the appliance to enable remote control. This signal should be a 0-10 volt DC signal. When this input is enabled, a building control system can be used to control the set point temperature of the appliance.

The control interprets the 0-10 volt signal as follows; when the signal is between 0 and 1.5 volts, the appliance will be in standby mode, not firing.


When the signal rises above 1.5 volts, the appliance will ignite. As the signal continues to rise towards its maximum of 10 volts, the appliance will increase in set point temperature. Adjust 16:cH and 17:cL to set MIN and MAX boiler water temperatures respectively.

Connect a building management system or other auxiliary control signal to the terminals marked for this purpose on the appliance terminal block (shown in Piping Diagrams, this manual). Caution should be used to ensure that the 0-10 VOLT + connection does not become connected to ground.

Connect to terminal strip as outlined 4.17 Electrical Connections.

NOTE: 0 - 10VDC terminals may not be used for both outdoor reset and 0 - 10VDC temp setpoint simultaneously.

## 5.11 Error Mode

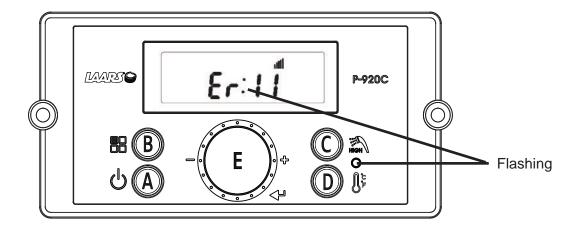

Indicate	Example
Error ' Er : ' will flash	Er:11
Error Code	Er:11
Display and Controller are communicating	addl

NOTE: When communication between the Control Display and the main controller is lost, the will not be displayed.

## **SECTION 6. Error Codes**

Error Code	Error Code Description	Possible Remedies	Recover methods
10	Flame has Extinguished 8 (Eight) Times	Press the Power button to clear the Error Code.  If Error happens again:  1. Monitor the gas pressure to the appliance while in operation. Ensure pressure is between 3.5 and 14" WC.  2. Check gas valve wire. Ensure connection is secure.  3. Check flame detection sensor. Ensure connections are secure. Normal operating settings are more than 2.5DC before ignition, less than 2.5DC after ignition.  4. Check vent terminations. Ensure there are no blockages.  5. Assure that the flame is stable when lit.  6. If the problem persists, replace the main control.	Hard Lock
11	Ignition has Failed 10 (Ten) Times	Press the Power button to clear the Error Code.  If Error happens again:  1. Monitor the gas pressure to the appliance while in operation. Ensure pressure is between 3.5 and 14" WC.  2. Check gas valve wire. Ensure connection is secure.  3. Check flame detection sensor. Ensure connections are secure. Normal operating settings are more than 2.5DC before ignition, less than 2.5DC after ignition.  4. Check igniter transformer for proper connection.  5. Clean the spark igniter with steel wool to remove oxides. Ensure proper separation (3-4 mm).  6. Replace the spark igniter if damaged.  7. Assure that the flame is stable when lit.  8. If the problem persists, replace the main control.	Hard Lock
16	Operating Temperature Sensor detects Water Temperature Greater than 203°F (95°C)	Press the Power button to clear the Error Code.  If Error happens again:  1. Check if dip switch Max Fire setting is ON. Switches 6 and 7 should be OFF for normal operation.  2. Check if CH inlet pipe is blocked. Ensure there is enough water flowing to the appliance.  3. Check Operating Temperature sensor at CH heat exchanger outlet. If resistance is zero, replace the sensor.  4. If the problem persists, replace the main control	Hard Lock
20	Condensate – Closed is Normal, Open is Fault (Condensate Drain Trap)	Press the Power button to clear the Error Code.  1. Check Condensate and main controller connections. Ensure all are secure.  2. Check Condensate sensor resistance. If resistance is zero, replace the switch.  3. Check Condensate hose. Ensure it is connected and in good condition.  4. Check condensate line and termination for blockages.  5. Check Vent Pipe for blockages.  6. If the problem persists, replace the main control.	Hard Lock
28	Overheat Sensor Open or Short	This Error Code will go away when CH temperature decreases.  If Error happens again:  1. Check overheat temperature sensor. Ensure connections are secure.  2. Check overheat sensor resistance. If resistance is zero, replace the sensor.  3. If the problem persists, replace the main control.	Soft Lock
32	DHW Sensor Open or Short	This Error Code will go away when outlet DHW temperature decreases.  If Error happens again:  1. Check DHW outlet temperature sensor. Ensure connections are secure.  2. Check sensor resistance. If resistance is zero, replace the sensor.  3. If the problem persists, replace the main control.	Soft Lock
33	CH Temperature Sensor Open or Short	This Error Code will go away when CH temperature decreases.  If Error happens again:  1. Check CH temperature sensor. Ensure connections are secure.  2. Check CH sensor resistance. If resistance is zero, replace the sensor.  3. If the problem persists, replace the main control.	Soft Lock

# SECTION 6. Error Codes (continued)


Error Code	Error Code Description	Possible Remedies	Recover methods
35	Venting (Exhaust) Sensor Open or Short	This Error Code will go away when exhaust temperature decreases. If Error happens again:  1. Check Venting (exhaust) temperature sensor. Ensure connections are secure. 2. Check sensor resistance. If resistance is zero, replace the sensor. 3. Check vent pipes for blockage. 4. If the problem persists, replace the main control	Soft Lock
36	Abnormal Supply Voltage	Supply voltage is too low to operate. This Error Code will go away when supply voltage returns to normal operating range.  If Error happens again:  1. Ensure appliance is properly wired to a power source meeting the requirements on the rating plate.  2. If problem persists, replace the main control	Soft Lock
37	Abnormal Supply Frequency	Supply frequency is too high to operate. This Error Code will go away when supply frequency returns to normal operating range.  If Error happens again:  1. Ensure appliance is properly wired to a power source meeting the requirements on the rating plate.  2. If problem persists, replace the main control.	Soft Lock
38	Error Appears When Control Stores Data, but Data is not Saved	Press the Power button to clear the Error Code. Replace the main control.	Hard Lock
40	Gas Leakage is Detected for Greater than 5 seconds, or three times within 10 minutes	IMPORTANT: If you smell gas, STOP! Follow the instructions on page 2, this manual, and call a qualified service technician or the fuel gas utility. Press the Power button to clear the Error Code.  If Error happens again:  1. Check the appliance cover. Ensure it is secure.  2. Check gas connections for leakage with a soapy solution. Fix any leaks.  3. Check condition of the burner assembly.  4. If the problem persists, replace the main control.	Hard Lock
41	Fan Speed too High with Flame On	Press the Power button to clear the Error Code. If Error happens again: 1. Check the vent connections for blockages. 2. Check the burner assembly. 3. Check fan operation. If fan appears to be operating normally but RPMs are too high, replace the fan. 4. If the problem persists, replace the main control.	Hard Lock
42	Jumped Wire Disconnected	Press the Power button to clear the Error Code. If Error happens again: 1. Ensure the jumped wire is properly connected. 2. If the problem persists, replace the main control.	Soft Lock
43	Burner Overheat Switch Open	Press the Power button to clear the Error Code.  If Error happens again:  1. Check burner overheat switch connections. Ensure connections are secure.  2. Check switch resistance. If resistance is zero, replace the switch.  3. If the problem persists, replace the main control.	Hard Lock
44	Air Pressure Sensor (APS) Fault	Press the power button to reset If error happens again: 1. Check the vent pipe for blockages. 2. Check the vent pipe for blockages. 3. If error do not clear, replace the APS 4. If the problem persists, replace the main control.	Hard Lock
45	Air Pressure Sensor (APS) Open	Check the aps connection.  1.If APS is closed and connections are secure, check APS connection.  2. If the problem is not happen, replace the APS  3. If the problem persists, replace the main control.	Soft Lock
61	Fan Speed Feedback Signal Abnormal	This Error Code will go away when the condition is remedied.  If Error happens again:  1. Check the connections to the fan. Ensure all are secure.  2. If the fan does not rotate during the ignition sequence, check for AC8V~26.5V power at the fan connection. If AC8V~26.5V power is present at the control, replace the fan. If the blower does not have AC8V~26.5V power, check power at the control. If AC8V~26.5V power is not present at the control, replace the control.  3. If the problem persists, replace the main control.	Soft Lock

# **SECTION 6. Error Codes** (continued)

Error Code	Error Code Description	Possible Remedies	Recover methods
66	Mixing Valve Initial Value Error (Mixing Valve Cannot Return to Initial Position)	This Error Code will go away when the condition is remedied. If Error happens again:  1. Turn power OFF and ON at the main power switch internal to the appliance.  2. Check wiring connections to mixing valve. Ensure all are secure.  3. Replace mixing valve.  4. If the problem persists, replace the main control.	Soft Lock
68	Mixing Valve Operation Error (Mixing Valve Stuck in Initial Position)	This Error Code will go away when the condition is remedied. If Error happens again:  1. Turn power OFF and ON at the main power switch internal to the appliance.  2. Check wiring connections to mixing valve. Ensure all are secure.  3. Replace mixing valve.  4. If the problem persists, replace the main control.	Soft Lock
70	Register, Ram, Rom, I/O Port, AD Abnormal, Important EPROM Data or Safe Data Abnormal	This Error Code will go away when the condition is remedied. If Error happens again:  1. Turn power OFF and ON at the main power switch internal to the appliance.  2. If the problem persists, replace the main control.	Soft Lock
72	Flame Signal Detected before Ignition	This Error Code will go away when the condition is remedied. If Error happens again:  1. Check the appliance cover. Ensure it is secure. Flame detection sensor can detect an external light source.  2. Check flame detection sensor. Ensure connections are secure. Normal operating settings are more than 2.5DC before ignition, less than 2.5DC after ignition.  3. If the problem persists, replace the main control.	Soft Lock
76	Poor Communication	This Error Code will go away when the condition is remedied. If Error happens again: 1. Check connections from main control to display panel. 2. If the problem persists, replace the display and/or the main control.	Soft Lock
80	Low Water Level Sensor (Low Water Level Detected Four (4) Consecutive times)	This Error Code will go away when the condition is remedied. If Error happens again:  1. Ensure all valves are open to the appliance and there are no leaks.  2. Ensure all air has been purged from the system.  3. Check wiring connections to low water level sensor. Ensure all are secure.  4. Check low water level sensor resistance. If resistance is zero, replace the sensor.  5. If the problem persists, replace the main control.	Soft Lock
81	Low Water Level Circuit	This Error Code will go away when the condition is remedied. If Error happens again:  1. Ensure all valves are open to the appliance and there are no leaks.  2. Check wiring connections to low water level sensor. Ensure all are secure.  3. Check low water level sensor resistance. If resistance is zero, replace the sensor.  4. If the problem persists, replace the main control.	Soft Lock
85	Freeze Protection (Appliance has detected water temperature below 34°F(1°C)	This Error Code will go away when the freezing condition is remedied. If Error happens again:  1. Ensure appliance is located in a mechanical room protected from freezing conditions.  2. Ensure all valves are open to the appliance, there are no leaks.  2. Check wiring connections to low water level sensor. Ensure all are secure.  3. Check low water level sensor resistance. If resistance is zero, replace the sensor.  4. If the problem persists, replace the main control.	Soft Lock
94	Exhaust Sensor detects Vent Temperature is Greater than 1900F (880C)	This Error Code will go away when the condition is remedied. If Error happens again:  1. Check if dip switch Max Fire setting is ON. Switches 6 and 7 should be OFF for normal operation.  2. Check exhaust temperature sensor. Ensure connections are secure.  3. Check sensor resistance. If resistance is zero, replace the sensor.  4. Check exhaust vent for blockage.  5. If the problem persists, replace the control.  6. If the problem persists, replace the heat exchanger.	Soft Lock


### 6.2 Fault Tree Analysis

#### 1. Flame detection

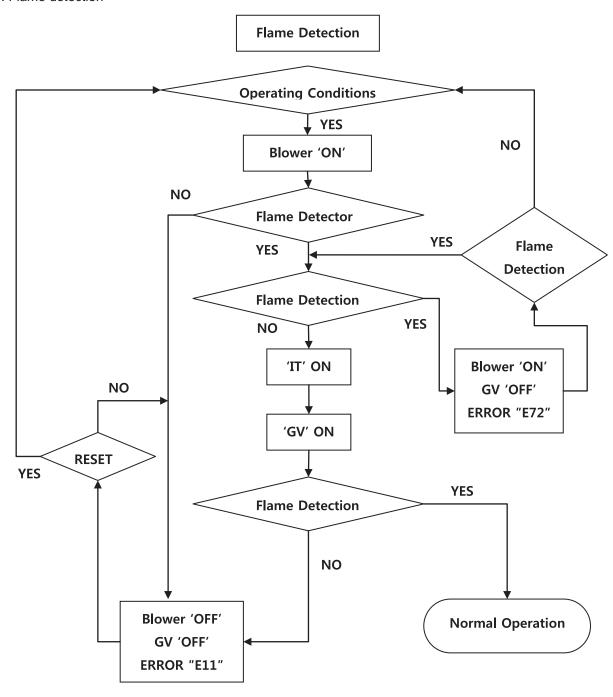


## 6.2 Fault Tree Analysis

#### 2. Gas Detection

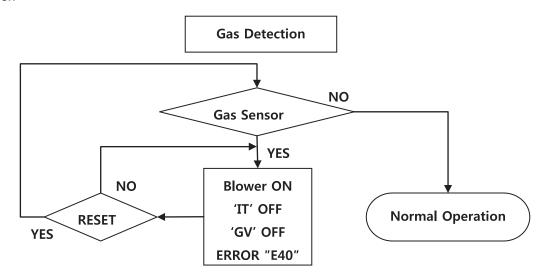

3. 'Storage', 'DHW', 'OP', 'CH overheat', 'Exhaust heat' Sensor detects

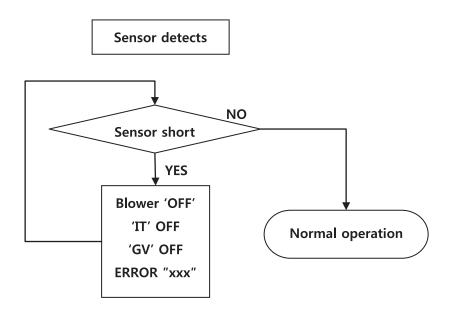

Error code	contents
E32	DHW NTC open or short
E33	OP NTC open or short
E35	Exhaust NTC open or short

# **SECTION 7. Trouble Shooting**

7.1 Diagnostics

Question	Answer
	Make sure that the ON/OFF button on the Control Panel has been turned ON.
	If the monitor on the Control Panel is blank, make sure the power cord is plugged and 4A fuses on the main controller in the units are good.
Burner dose not ignite when the hot water is	Make sure that there is water supplied to the unit. The unit activates once the inlet water flow is over 0 gpm.
opened.	Make sure the cold and hot water lines are not plumbed in reverse side.
	Make sure that the cold water and gas supply lines are opened.
	Make sure that the water lines are not frozen.
	Check that the setting temperature on the unit is not too low
	Make sure that the filter in the cold water supply line is not clogged with debris.
Water is not hot enough.	Make sure that the gas supply type is correct.
	Check the supply and manifold gas pressures are in accordance with specifications.
	Make sure that the water flow sensor with three wires has been properly connected on the top of heat exchanger.
	Make sure that the setting temperature on the unit is not too hot.
Water is too hot.	Make sure that the filter in the cold water supply line is not clogged with debris.
	Make sure that the gas supply type is correct.
	Make sure that the filter in the cold water supply line is clean.
Hot water temperature fluctuates at the opened tap.	Make sure that the gas supply type is correct.
	Check the supply gas pressure is sufficient.
The blower is still operating after the combustion stops.	This is normal because the blower keeps operating for 1 minute to vent (exhaust) the flue gas from the chamber once the combustion has stopped.
Temperature Rise too Quickly	Occurs when supply water temperature in heat exchanger rises faster than 2°F per second during the first two minutes the burner is on. Automatically resets after a few minute delay or using manual reset on control panel. See message displayed TEMPERATURE SENSOR and follow procedure for loose connections.
Abaramal as a fact	A leak of combustion gas between sealed chamber and exhaust tube inside the unit. Call a qualified service technician for evaluation.
Abnormal sounds come from unit during operation.	Improper venting termination, make sure that the venting termination complies with specification.
uon.	Check the supply gas pressure is sufficient. Insufficient gas pressure will cause unstable burner flame and noise.

## 7.2 Suggested Corrective Actions

This controller is able to record information about the boiler's condition at the time of the five previous faults or errors. Refer to the Section '5.10 Error Mode' of this manual.

Display	Condition	Diagnostic	Corrective Action(s)
Nothing shown on display control panel and blower running at full speed.	Control is not receiving power.	Check wiring for short circuit or incorrect wiring.	Correct wiring per wiring diagram including connection of transformer to the control.
		Check transformer connection to the control per wiring diagram. Check for 12V output of transformer.	Replace transformer if it is receiving 120V, but not outputting 12Vac.
	Control is not receiving 120V power.	Check service switch and/or circuit breaker to boiler turned is on.	Turn on service switch to power boiler.
		Is there 120 Volts at the service switch?	Troubleshoot and correct the power supply to the manual switch.
Nothing is shown in display control panel and no other boiler		Is the ON/OFF POWER SWITCH (inside boiler case) turned on?	Turn ON the manual power switch inside the boiler case.
components are operating.		Check for 120 volts at the line voltage terminal block located inside the boiler case.	Correct wiring inside the boiler case using the wiring diagram in this manual.
		Inspect the fuse. Replace if necessary.	Replace the fuse with proper part found in the replacement part section of this manual. If fuse blows again recheck wiring per diagram.
Nothing is shown on control panel, but boiler is operating.	Occurs when the communication is lost from the control to the display.	Check for loose connections and proper pin alignment/ engagement on the Control's plug.	Check for continuity on the wire harness from the display to the control. See repair parts section for proper replacement part.
		Cycle power off and on using boiler power switch and check for operation.	Replace with new display module. See repair parts section for proper replacement part.

## **SECTION 7. Trouble Shooting**

## 7.2 Suggested Corrective Actions (continued)

Fault	Condition	Diagnostic	Corrective Action(s)
	Occurs when a temperature sensor has electrically shorted (SHORT) or has become disconnected	Reset using manual reset screen on control panel. (Power button)	Check all the temperature readings of the boiler on the DIAGNOSTICS - TEMPERATURES menu to determine if any sensors are currently displayed as SHORT or OPEN.
TEMPERATURE SENSOR			Check wire harness for loose connections and pin engagement at sensor Connection and Control module.
	(OPEN).		If problem persists after checking items above replace Control. Refer to repair parts section for kit number.
	Occurs when	Reset using manual reset screen on control panel. (Power button)	Burner may be operating too hot due to incorrect combustion. Inspect flame and conduct combustion test.
FLAME FAULT	detected when there should be no flame.		Check for flame at burner via flame current with burner off. Turn boiler off and watch flame through observation port. If flame continues after shutdown replace gas valve.
	Blower unable to reach required speed or does not reach 0 RPM when turned off.	Reset using manual reset screen on control panel. (Power button)	Check wire harness for loose connections and pin engagement at blower. Connections.
			Boiler in standby mode and blower not running. If BLOWER SPEED is not 0 RPM then replace blower.
BLOWER FAULT			If blower does not rotate during ignition sequence check for 120V power at blower connection. If 120Vac power at blower motor and it doesn't start replace blower. Check power at Control. If 120Vac is not present at Control when boiler is powered replace Control.
	Even if boiler went through 8 ignitron attempts, but cannot detect flame	Power off and on.	Dirty burner and/or heat exchanger will cause high back pressure and poor ignition. Visual inspection of flue ways often will not be able to diagnose condition.
IGNITION FAULT			Check incoming gas pressure with boiler off and at Max fire. Adjust within limits on rating label.
			Check for flue pipe and intake pipe restrictions or blockage
			Check burner fasteners and gaskets
			Check air intake pipe and proper propane orifice
GAS VALVE FAULT	The Control has detected a problem with it	Reset using manual reset screen on control	Check wire harness connections between gas valve and Control.
	gas valve output circuit.	panel. (Power button)	If lockout re-occurs replace Control.

#### **SECTION 8. Maintenance**

#### ■ Regular Maintenance

- This Manual should be placed in a safe and dry location near the Combination boiler. Maintenance instructions should be carried out by the following guidelines.
- Maintenance procedures [ Daily ]

#### - Check that the boiler casing is closed.

Check if there is any problem with the Combination boiler casing and the two upper and lower screws are tightened well. Combination boiler casing must be closed while it is running.

## **⚠** WARNING


To prevent potential severe personal injury, death or substantial property damage, remove all contaminated materials.

If contaminants are found:

Remove products immediately from the area. In order to check the status of Combination boiler, call a qualified service technician to inspect the Combination boiler for possible damage from acid corrosion.

## **⚠** WARNING

DO NOT store combustible materials, gasoline or any other flammable vapors or liquids near the Water Heater. Remove them immediately or store them other places.

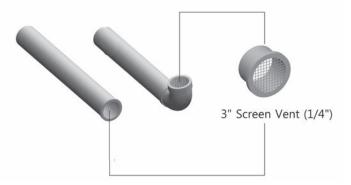

#### 8.1 Annual startup & general maintenance

#### - Check the power source.

Make sure that the power cord is correctly connected. The main power line is connected to the manual switch box inside a Combination boiler. (Power line through the strain relief in the bottom of the combination boiler casing and fix it.)

#### - Check the status of the control panel Check status of the power supply. Please check for any debris on the button.

■ Maintenance procedures [ Monthly ]

#### - Check the vent pipe.

Visually inspect the flue gas vent piping for detecting any signs of blockage, leakage or deterioration of the piping. Please contact a qualified service technician immediately if you find any problem.

#### - Check the air inlet pipe.

Visually inspect the air inlet to be sure it is unobstructed. Inspect entire length of air piping for ensuring that piping is intact and all joints are properly sealed. Call your qualified service technician if you notice any problems.

#### - Check the relief valve.

Inspect the Combination boiler relief valve and the relief valve discharge pipe for any signs of weeping or leakage. If the relief valve often weeps, immediately contact your qualified service technician for inspecting the Combination boiler and system.

#### - Check the condensate outlet.

While the Combination boiler is running, check the discharge end of the condensate drain tubing. Make sure that no flue gas is escaping from the condensate drain tubing.

If flue gas is continuously escaping, it is a serious problem. Call your qualified service technician for inspecting the Combination boiler and condensate line. Also, refill the condensate trap if problem persists regularly.


# - Check the vent terminal screen vent (rodent screen).

If you encounter a problem of combustion specifications, visually inspect the terminal screen. And then replace it with spare parts or clean the screens.

### **SECTION 8. Maintenance**

#### - Check the air vent

If the air vent valve seems to work freely without leaking, replace cap "A" by twisting all the way on. Loosen cap "A" one turn to allow vent to operate. If vent does not operate correctly, replace the vent.

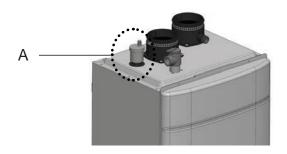

Maintenance procedures [Every 6 Months]

### - Check the boiler piping (gas and water)

Visually inspect for leaks around internal water piping. Also inspect external water piping, circulators, relief valve and fittings. Immediately call a qualified service technician to repair any leaks. Leaks must be fixed by a qualified service technician immediately.

Failure to comply with this instruction could result in severe personal injury, death or substantial property damage.

#### - Check the pressure relief valve

### **⚠** WARNING

Leaks must be fixed by a qualified service technician immediately. Failure to comply with this instruction could result in severe personal injury, death or substantial property damage. This discharge line must be installed by a qualified heating installer or a service technician.

Before proceeding, verify that relief valve outlet has been piped to a safe place of discharge, avoiding any possibility of scalding from hot water. If water flows freely, release the lever and allow the valve to seat. Watch the end of the relief valve discharge pipe to ensure that the valve does not weep after the line has had time to drain. If the valve weeps, lift the seat again to attempt to clean the valve

seat. If the valve continues to weep, contact your qualified service technician for inspecting the valve and system. If water does not flow from the valve even though you have lifted the lever completely, the valve or discharge line may be blocked. Shut down the Combination boiler immediately. Call your qualified service technician to inspect the combination boiler and system.

8.1 Annual startup & general maintenance

#### - Check the burner state

You can clean the exterior of burner. However, if you need to clean the inside of the burner stage, you should call a qualified service technician.


### 8.2 Flushing the Combination Boiler

Flushing the Heat Exchanger is a complicated procedure that should only be done by an authorized technician or licensed professional. Keep in mind that improper maintenance can void your warranty.




- 1. Disconnect electric power to the combination boiler.
- 2. Close the shutoff valves on both hot water outlet and cold water inlet lines. (V1 & V2)
- 3. Connect one hose "D1" to the valve "V3" and place the free end in the bucket. Connect one of the hoses "D3" to the circulation pump outlet and the cold water inlet line at the valve "V4". Connect other hose "D2" to the circulation pump inlet and place the free end in the bucket.

- 4. Pour the cleaning solution into the bucket. Place the drain hose (D1) and the hose (D2) to the pump inlet into the cleaning solution.
- 5. Open service valves (V3 & V4) on the hot water outlet and cold water inlet lines.
- 6. Turn on the circulation pump (Operate the pump and allow the cleaning solution to circulate through the combination boiler for at least 1 hour at a rate of 4 gallons per minute.)
- 7. Rinse the cleaning solution from the combination boiler as follows:
  - Remove the free end of the drain hose (D1) from the bucket.
  - Close service valve, (V4), and open shut off valve, (V2).
  - Do not open shut off valve, (V1).
  - Allow water to flow through the combination boiler for 5 minutes.
  - Close shut off valve (V2).
- 8. Disconnect all hoses.
- 9. Remove the cold water inlet filter from the combination boiler and clean out any residues.
- 10. Reinsert the filter and ensure the filter cap is securely tightened.
- 11. Connect electrical power to the combination boiler.

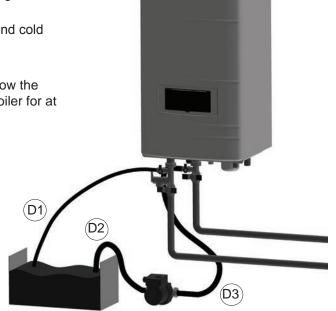


### 8.3 Draining and Cleaning

- 1. Place a bucket under the appliance to collect the residual water inside the combination boiler.
- 2. Press the Power button on the front control panel to turn OFF the electrical power to the combination boiler.
- 3. Turn off the gas valve.
- 4. Close water supply valve on the inlet to the appliance. If there is no valve, turn off main water valve.
- 5. Open the hot water faucets completely.
- 6. Remove the cold water inlet filter and 'CH' return filter.

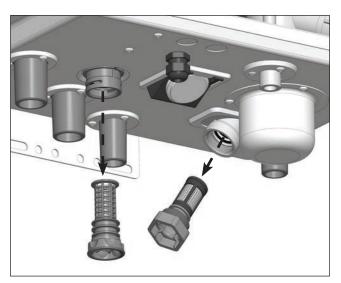



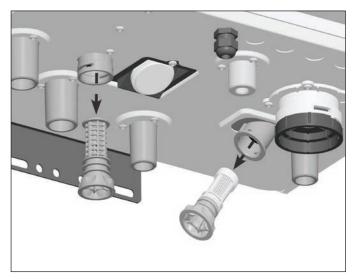

**MFTCW199** 

7. Clean them with a toothbrush and clean running water.



8. To refill the combination boiler, reassemble the filters back into the combination boiler and reverse steps 6 back to 1.

### Section 9 - Installation Check

#### 9.1 Quick View

### Before Installing

- Make sure that there is enough space for installing Water and gas line. Verify vent/air termination is located as required.
- All models need for propane Conversion which requires a separate gas conversion manual.

### Install Water Piping

- Boiler loop piping must be sized to the minimums listed in the Boiler manual. Using smaller piping will cause performance problems.(page 34)

### Install Vent & Air Piping

- Slide the air inlet pipe and vent pipe into the Boiler pipe connector.
- Make sure the terminations are placed as required in the manual and that air intakes are at least 12 inches above normal snow line.
- Refer to the material check list in this guide for a list of items needed.

### Install Condensate Piping / Tubing & Components

- Fill out the material check list in this guide to ensure you have the tubing or PVC pipe and all components needed for the condensate piping.
- Connect internal components that are supplied with the Boiler.

### Install Gas Piping

- Install a union and shutoff valve.

#### Wire the Boiler

- Connect power wiring and control wiring per boiler manual wiring diagram. (Section 4.19)

#### Start up, Adjust & Test

- Follow the Boiler manual instructions to clean the system if needed, then fill and check water chemistry.

#### 9.2 Final Check Lists

- Final check : Installation Conditions.
- Is the Boiler properly mounted on the wall?
- Is there space for a drain which is close to the Boiler?
- Are there any combustible materials near the Boiler and vent pipe?
- Is the air supply sufficient for proper operation of the Boiler?
- Are the proper service clearances maintained?
- Is the distance between the Boiler and point of vent termination minimized?
- Is the proper distance from windows, doors, and other intake vents maintained?

### ■ Final check : Gas pipe installation

- Is the gas supply line equipped with a manual shut off valve?
- Is the gas supply line a minimum of 3/4" inner diameter?
- Is the gas supply line length and diameter adequate to deliver the required BTU's?
- Has the gas supply line pressure been measured?
- Does the supply gas type match the type indicated on the boiler rating plate?

#### ■ Final check: Air/Vent pipe installation


- Has the Boiler been vented with 3" or 2" PVC, CPVC, Polypropylene or BH Special Gas Vent (S636 PVC, CPVC) for Category IV appliances in accordance with this manual and/or vour local code?
- Is the vent termination at least 12" above the exterior grade?
- Is the total vent length within the maximum vent length restriction?
- Have you checked the air/vent piping for leaks?
- Have you properly supported the vent termination?
- Are all vent runs properly supported?
- Is the vent sloped upward toward the vent termination at a rate of 1/4" per foot (2% grade)?

#### ■ Final check : Condensate drain installation


- Have you installed a condensate drain line from the Boiler to a drain or laundry tub?
- Final check : Setting the DIP switches
- Are all DIP switches correctly set on the main board?


### 9.2 Final Check Lists (continued)

- Final check : Connecting the power supply
- Please check that the power is 120V AC.
- Have you checked the polarity of the electrical connection?
- Final check : Pressure relief valve
- Have you installed an approved pressure relief valve on the boiler?
- Is the pressure relief valve of CH Plumbing at least 1" in diameter?
- Is the pressure relief valve of DHW Plumbing at least 3/4" in diameter?
- Have you installed the pressure relief valve on the hot water outlet pipe near the Boiler?
- Final check : Burner flames
- The burner flame must be checked periodically for a constant proper blue color.
- If the flame does not appear normal, the burner may need to be cleaned.
- If the burner needs to be cleaned, it must be performed by a qualified service technician.

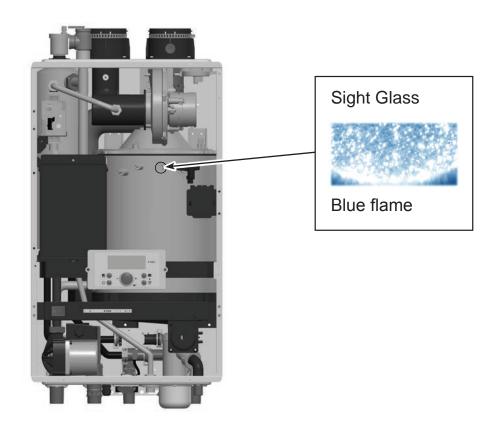

# **SECTION 10. Parts List and Illustrations**




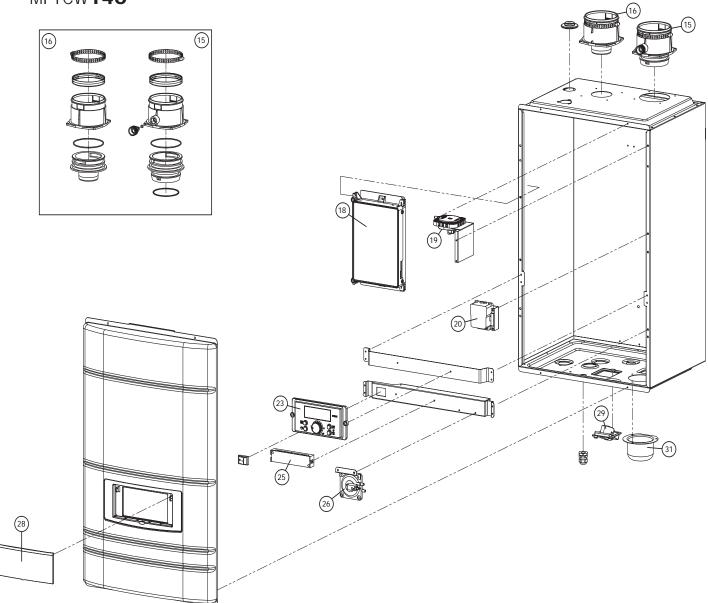


IOM Ref Part Number Description

15	FT1002	Exhaust Duct Assembly
16	FT1010	Air Intake Duct Assembly
18	FT1014	Control
19	FT1015	Air pressure switch
20	FT1016	Ignition transformer
23	FT1019	Display Panel
25	FT1021	Terminal Block
26	FT1022	Condensate Blockage, Air Pressure switch
28	FT1024	Display cover window
29	FT1025	Pressure gauge
31	FT1027	Condensate trap cover

IOM Ref	Part Number	Description
A1	FT1100	DHW Hydro block Assembly
33	FT1517	DHW Outlet Pipe
35	FT1519	DHW nipple
36	FT1112	Outlet sensor
38	FT1521	DHW Inlet Pipe
39	FT1115	Flow sensor
40	FT1116	Mixing valve
43	FT1119	Flow restrictor
44	FT1120	DHW filter mash
45	FT1121	DHW filter Cap
47	FT1122	DHW connector
A2	FT1200	CH hydro Block Assembly
55	FT1526	CH return pipe
56	FT1219	CH return sensor
57	FT1220	3-way valve
58	FT1527	CH supply pipe
	ET4222	Dump

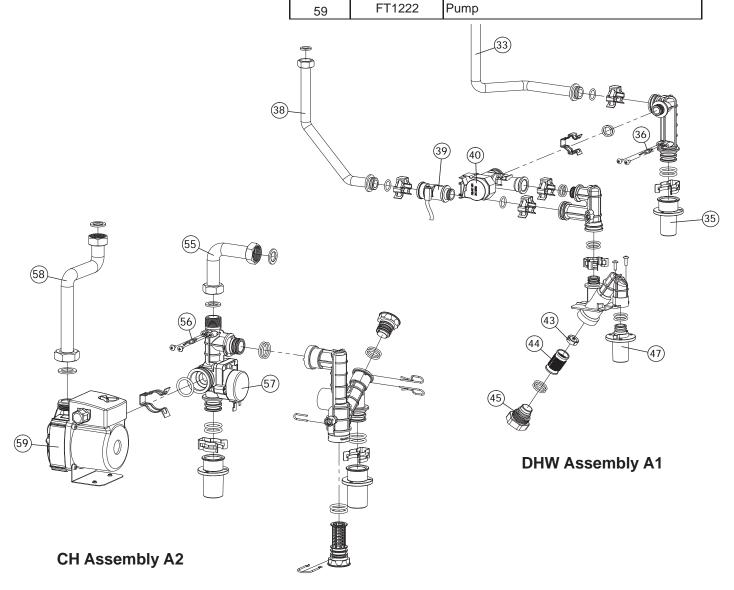


### **Heat Exchanger & Tank**

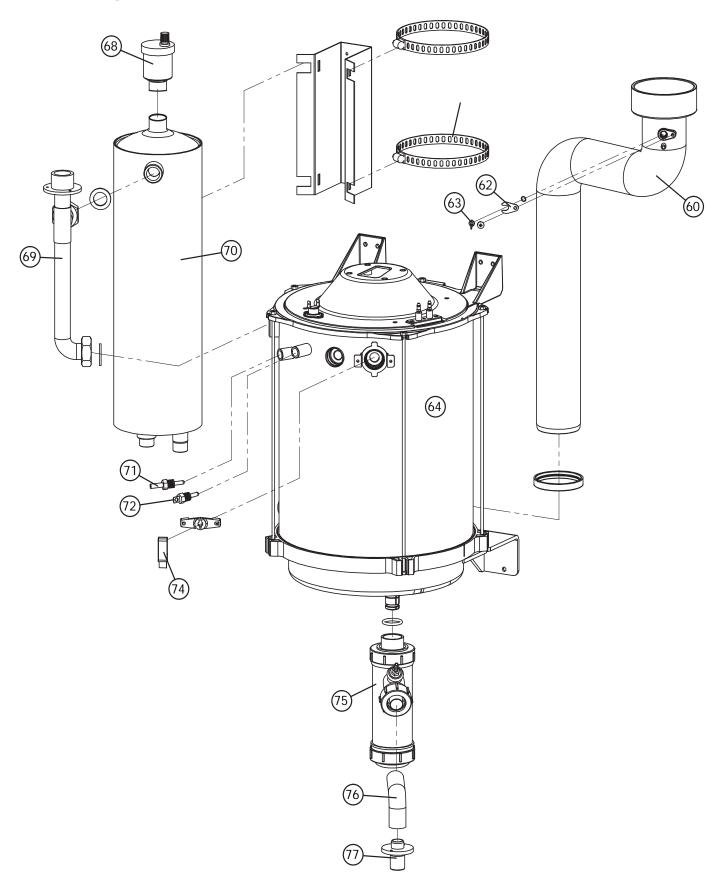


IOM Ref Part Number Description

60	FT1304	Exhaust Pipe
62	FT1306	Exhaust sensor BK
63	FT1307	Exhaust overheat sensor
64	FT1068	Heat Exchanger Assembly
65	FT1309	Burner Assembly
65-1	FT1310	Over heat Sensor
65-4	FT1313	Burner
65-6	FT1315	Igniter
65-7	FT1316	Ignitor gasket
65-8	FT1665	Refractory
68	FT1321	Air vent
69	FT1322	CH supply upper pipe
70	FT1323	DHW tank
71	FT1324	Temperature sensor
72	FT1325	Low level sensor
74	FT1327	Flame detector sensor
75	FT1328	Condensate trap
76	FT1329	Condensate trap hose
77	FT1330	Condensate trap connector

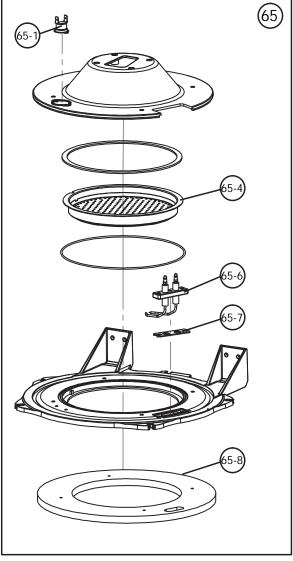

### **Blower and Gas Valve**

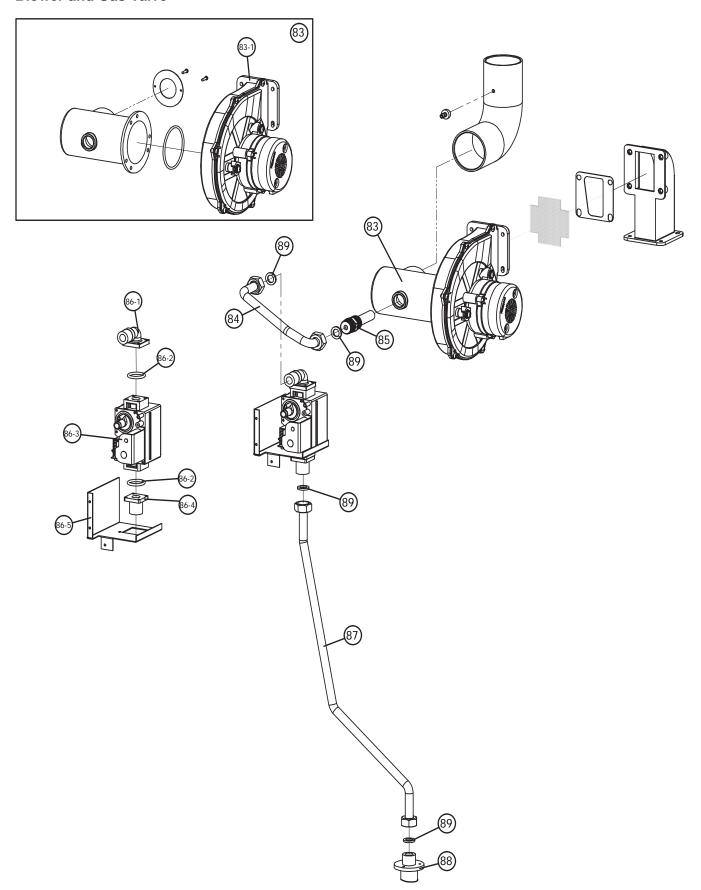


IOM Ref	Part Number	Description
---------	-------------	-------------

83	FT1405	Blower Assembly
83-1	FT1406	Blower
83-2	FT1409	Housing, Gas Mixer
83-3	FT1716	O-Ring, Fan Sealing
85	FT1412N	Nozzle (natural, NG)
85	FT1412P	Nozzle (propane, LP)
86_1	FT1728	Gas valve outlet adaptor
86_2	FT1415	Gas valve O-Ring
86_3	FT1416	Gas valve
86_4	FT1538	Gas valve inlet adaptor
86_5	FT1418	Gas valve BK
87	FT1419	Gas pipe (down)
88	FT1420	Gas inlet adaptor
89	FT1421	Packing


### **OPTIONAL ITEMS**

90	FT1500	Pressure Relief Valve
91	FT1501	Outdoor Temp. Sensor
92	FT1502	Bird Screen 3"
93	FT1503	Gas Reducing Coupling
94	FT1504	Spare Parts Kit
95	FT1505	Condensate Hose
96	FT1506	Restrictor(5L)
97	FT1507	Wall Hung Bracket
98	FT1508	Bird Screen 2"
99	FT1509	Heat Exchanger Long Bolt

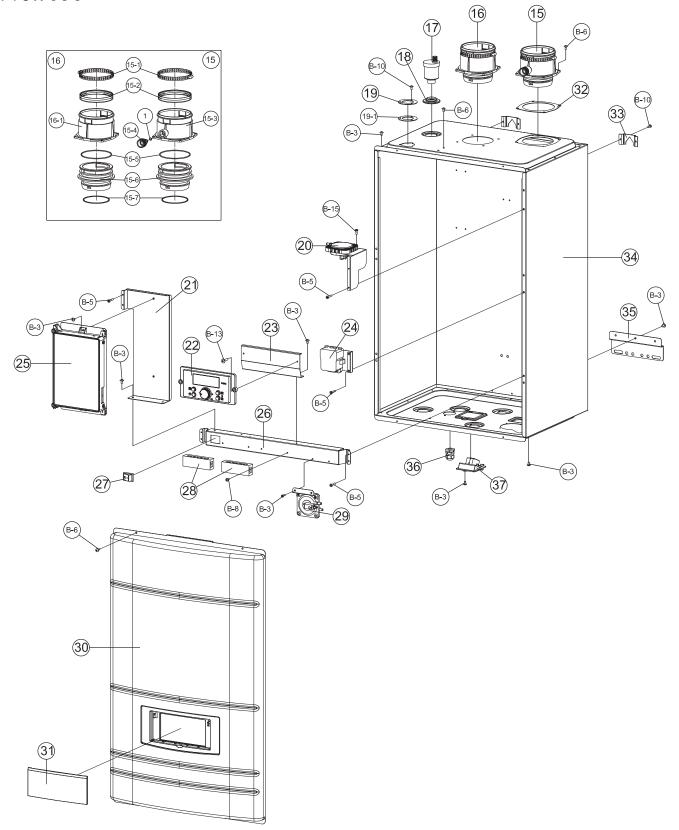

IOM Ref Part Number Description

IOW KEI	rait Nullibei	Description
1	FT1601	O-Ring P7
B-3	FT1614	M4*8 TH+ tapping
B-5	FT1544	M4*10 FH+ tapping
B-6	FT1719	M4*10 TH+ tapping
B-8	FT1545	M4*10 Plat Head
B-10	FT1534	M4*12 TH+ M/S
B-13	FT1547	M4*16 TH+ tapping
B-15	FT1814	M4*20 TH+ tapping
15	FT1002	Exhaust Vent Duct Ass'y
15-1	FT1603	Stainless band Φ100
15-2	FT1604	Exhaust packing
15-3	FT1605	Exhaust vent duct
15-4	FT1606	Exhaust testing cap
15-5	FT1607	O-Ring P85
15-6	FT1608	Exhust adaptor
15-7	FT1609	O-Ring P75
16	FT1800	Air Inlet Duct Ass'y
16-1	FT1611	Air inlet Duct
17	FT1321	Air vent
18	FT1548	Air vent rubber cap
19	FT1797	Gasket BK
19-1	FT1013	Safety valve rubber pad
20	FT1804	Air Pressure sensor
21	FT1751	Control BK
22	FT1801	Control Display (P-920C)
23	FT1752	Panel BK
24	ST1006	Ignition transformer
25	FT1014	PCB(NGTX-920CP)
26	FT1795	Bracket
27	FT1020	Power switch
28	FT1827	Terminal Blocks
29	FT1022	Condensate blockage, Air press switch
30	FT1790	Front cover
31	FT1024	Display cover window
32	FT1771	Intake/exhaust sealing pad
33	FT1055	Wall mount bracket (top)
34	FT1791	Casing ASS'Y
35	FT1057	Wall mount bracket (lower)
36	FT1633	Wire adaptor
37	FT1025	Pressure gauge
-	· — —	

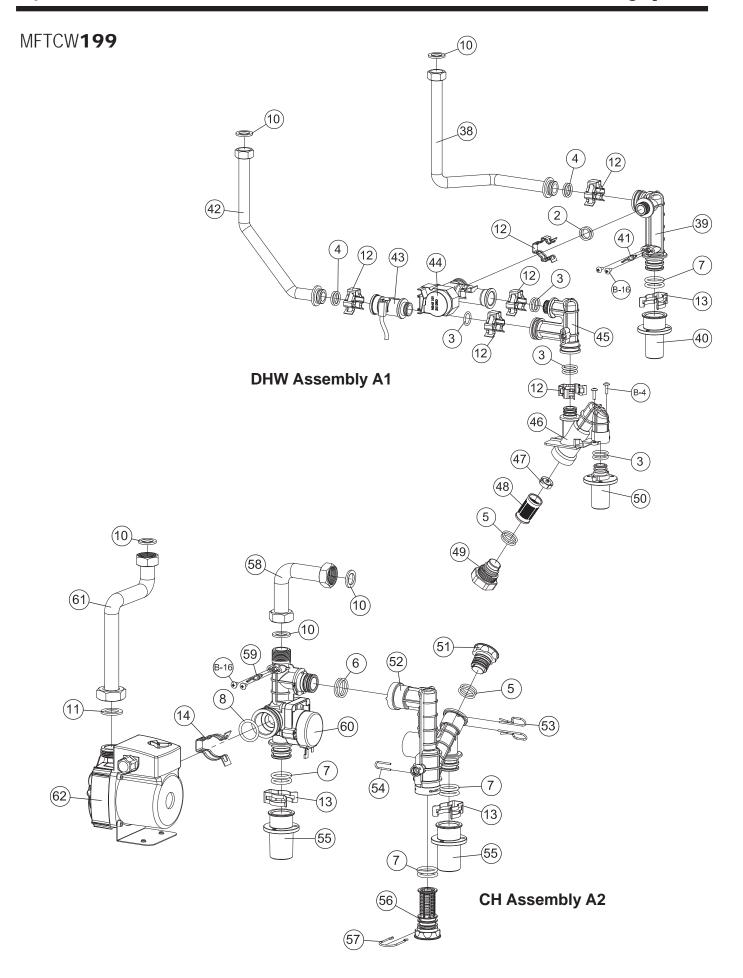

IOM Ref Part Number Description

2	FT1685	O-Ring P15
3	FT1643	O-Ring P16
4	FT1687	O-Ring P18
5	FT1513	O-Ring P20
6	FT1644	O-Ring P22
7	FT1515	O-Ring P22A
8	FT1516	O-Ring P25
10	FT1646	3/4" packing
11	FT1691	1" packing
12	FT1208	Water flow sensor clip
13	FT1107	Pipe clip
14	FT1108	Pump clip
B-4	FT1520	M4*8 TH+ M/S
B-16	FT1817	M4*9 PH.PW+ Self Tapping


# **DHW Assembly A1**

38       FT1805       DHW pipe         39       FT1518       DHW 'T' pipe         40       FT1519       DHW nipple         41       FT1112       Outlet sensor         42       FT1806       DHW inlet pipe
40 FT1519 DHW nipple 41 FT1112 Outlet sensor
41 FT1112 Outlet sensor
42 FT1806 DHW inlet nine
TI 11000 Brive linet pipe
43 FT1115 Flow sensor
44 FT1116 Mixing valve
45 FT1522 DHW inlet block
46 FT1549 DHW inlet filter body
47 FT1822 Flow restrictor
48 FT1120 DHW inlet mash
49 FT1121 DHW filter Cap
50 FT1122 DHW nipple

### **CH Assembly A2**

51	FT1121	Return block cap
52	FT1523	Return block
53	FT1524	'R' clip
54	FT1525	Pressure gauge clip
55	FT1215	CH return, supply connector
56	FT1216	CH filter
57	FT1217	U Clip
58	FT1807	CH return pipe
59	FT1219	CH return sensor
60	FT1220	3way valve
61	FT1808	CH supply pipe
62	FT1798	Pump (top case+bk)

### **Heat Exchanger & Tank**

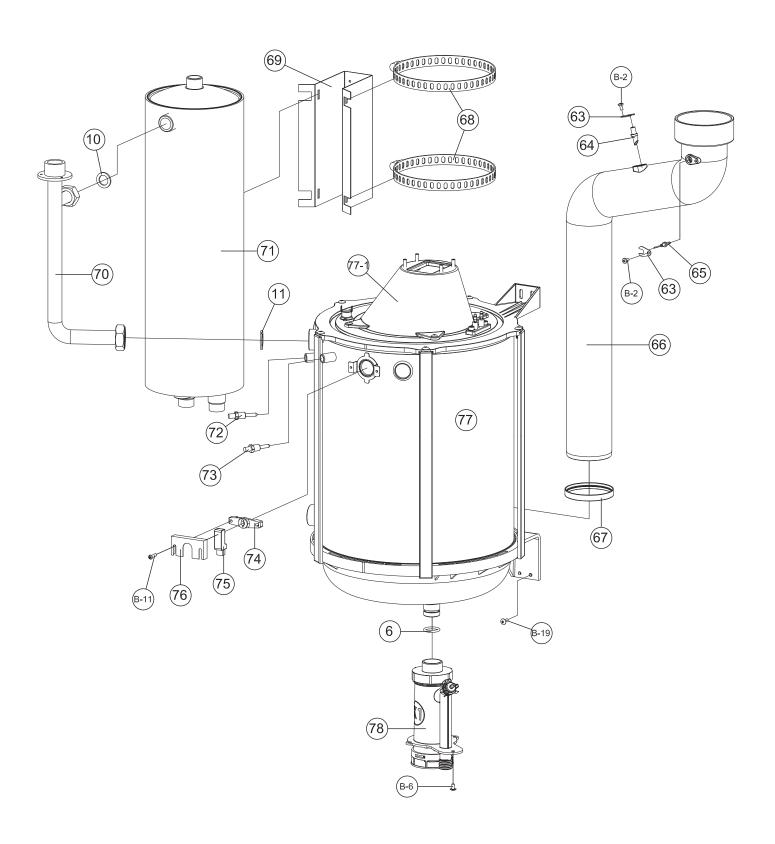

O-Ring p22


# MFTCW**199**

6 10


IOM Ref Part Number Description

FT1644

O	111077	O King pzz
10	FT1646	3/4" Packing
11	FT1691	1" Packing
B-1	FT1062	M3*6 PH+ M/S
B-2	FT1063	M4*8 BH+ tapping
B-6	FT1719	M4*10 TH+ tapping
B-17	FT1816	M5*10 TH+ M/S
B-18	FT1820	M5*12 BH+ tapping
B-19	FT1815	M5*12 BH+ M/S
B-21	FT1818	M4*13.5 Wrench Bolt + Spring Washe Flat Washer
63	FT1306	Exhaust sensor BK
64	FT1784	Exhaust-adaptor
65	FT1307	Exhaust sensor
66	FT1823	Exhaust pipe
67	FT1825	Inner pipe_bottom packing
68	FT1813	Stainless band
69	FT1793	DHW tank BK
70	FT1809	CH supply pipe (top)
71	FT1794	DHW tank ASS'Y
72	FT1324	Temperature sensor
73	FT1325	Low level sensor
74	FT1669	Photo sensor BK
75	FT1327	Photo sensor
76	FT1069	Photo sensor cover
77	FT1792	Heat exchanger ASS'Y
77-1	FT1796	Burner ASS'Y
77-2	FT1760	Burner case(top)
77-3	FT1824	Burner gasket
77-4	FT1838	Burner
77-5	FT1763	Igniter
77-6	FT1663	Igniter gasket
77-7	FT1310	Overheat sensor
77-8	FT1764	Burner case (bottom)
77-9	FT1826	Refractory FT-175W thru FT-199W
78	FT1783	Condensate trap ASS'Y

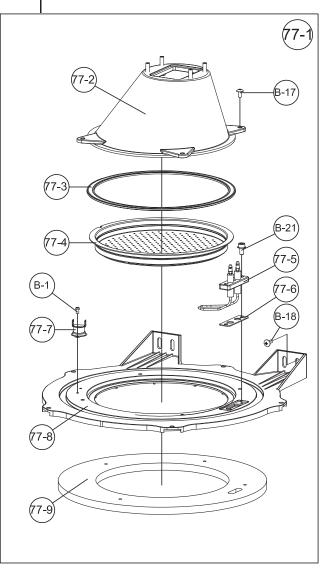


### **Blower and Gas Valve**

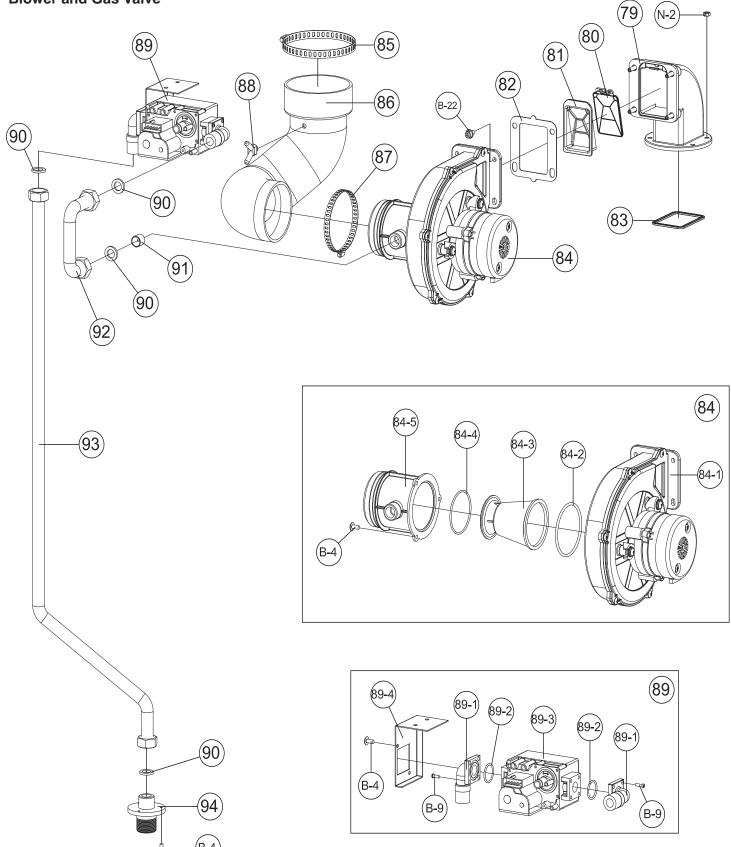

IOM Ref Part Number Description

N-2	FT1074	M5 NUT
B-4	FT1779	M4*8 TH+ M/S
B-9	FT1076	M4*12 PH+ M/S
B-22	FT1819	M5*15 Wrench Bolt + Flat Washer
79	FT1769	Fan guide
80	FT1770	Damper packing
81	FT1081	Damper body
82	FT1082	Fan rubber pad
83	FT1772	Fan guide packing
84	FT1799	Fan ASS'Y
84-1	FT1803	Fan
84-2	ST1038	Fan sealing O-ring
84-3	FT1773	AGM VENTURI
84-4	FT1774	AGM O-ring
84-5	FT1775	AGM BODY
85	FT1603	Stainless band Ø100
86	FT1812	Air intake hose
87	FT1777	stainless Ø89
88	FT1821	Air intake orifice
89	FT1778	Gas valve ASS'Y
89-1	FT1728	Gas valve outlet
89-2	FT1727	Gas valve O-ring
89-3	FT1750	Gas valve
89-4	FT1779	Gas valve BK
90	FT1421	1/2" Packing
91	FT1780	Orifice (natural)
91	FT1802	Orifice (propane)
92	FT1810	Gas pipe (up)
93	FT1811	Gas pipe (down)
94	FT1087	Gas inlet nipple

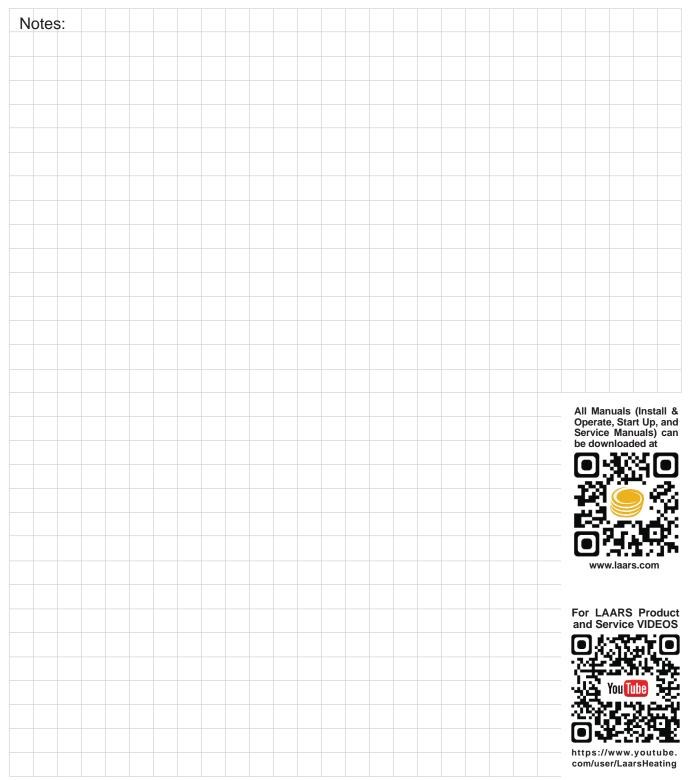

Dimensions and specifications subject to change without notice in accordance with our policy of continuous product improvement.







