
### **MODEL: 94 DURATUB®**

# CABINET STYLE SINGLE LAUNDRY TUB W/HANDIFLO® WASTE HOSE CONNECTOR



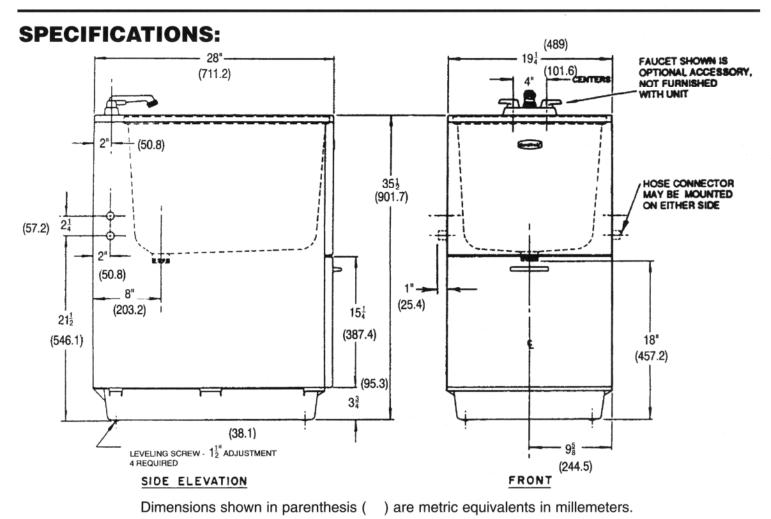

### **INSTALLATION:**

- 1. Determine which side of the cabinet the wash machine waste hose will be connected. Next, examine the pre-connected Hose (23) at the back of the tub. If the hose is going in the "right" direction, go onto Step 2. If not, loosen the Hose Clamp (24) and rotate the hose to the opposite side. Retighten hose clamp.
- 2. Remove Screw (22) and Speed Nut (10) from the Hose Mounting Plate (21). Insert tube of mounting plate through bottom hole in side of cabinet. Insert screw from the outside of panel, through mounting plate, into speed nut and tighten securely. Check Handiflo<sup>®</sup> hose to mounting plate connection, tighten securely.

Numbers in parenthesis refer to KEY NOS. in parts list.



#### CAUTION -

Do not subject tub or cabinet to direct torch flame while making sweat/solder connections —use compression fittings whenever possible. Check local plumbing codes for faucet and drain connection compliance.

- 3. Refer to the Faucet/Owners Manual for installing and connecting the faucet. If the cabinet will be placed flush against the wall use flexible supply lines or CPVC tubing and fittings.
- 4. Mount the faucet on the back ledge of Rim (2). Bring the supply lines from the faucet through the hole in the Back Panel (19). Move the cabinet into position and complete the faucet connection after leveling the cabinet with Leveling Screws (15) provided; lock in place with Nuts (14). (See Figure 1).
- 5. Make final sanitary drain connections in full compliance with local code requirements.


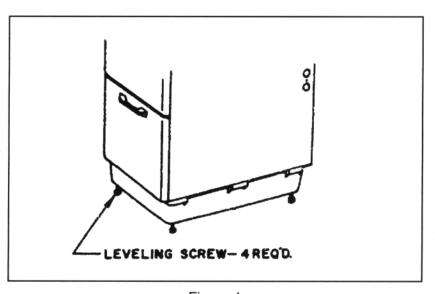


Figure 1

#### CARE AND MAINTENANCE

Most stains that you may acquire in your Duratub® Cabinet Style Laundry Tub may be removed with common household cleanser or liquid cleaner. Stubborn stains in the tub compartment may be removed with a bleach solution — follow bleach manufacturers' recommended procedures pertaining to safety, handling and use of their product. Use mild soap to clean the painted surfaces. Do not use abrasive powders or steel wool! Paint, tar or stains on the cabinet shold be removed with an automotive "Bug and Tar" remover. A periodic coating of a quality automotive polish will help retain the fine finish of the cabinet.

## **PARTS ILLUSTRATION**

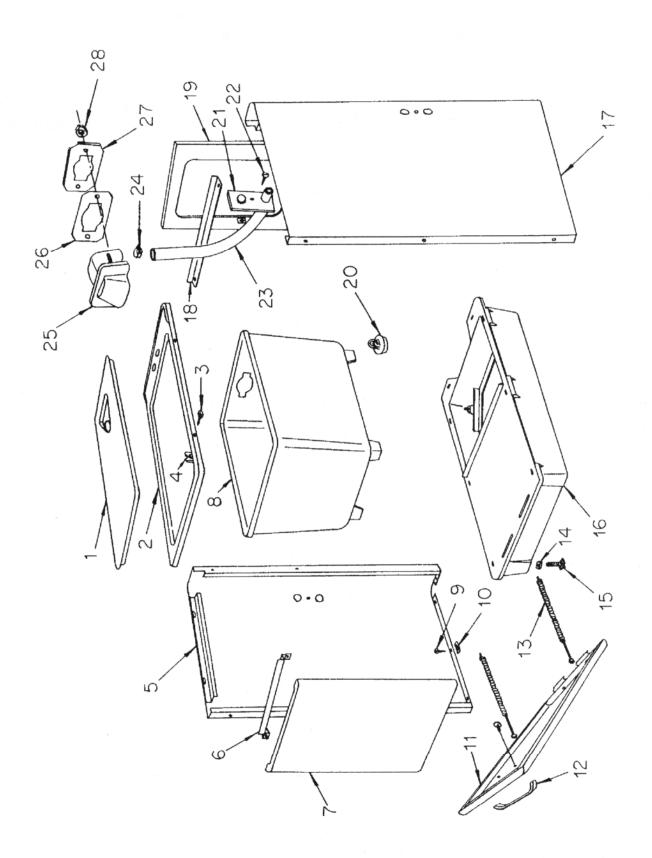

### **MODEL: 94 DURATUB®**

## CABINET STYLE SINGLE LAUNDRY TUB W/HANDIFLO® WASTE HOSE CONNECTOR

PARTS LIST		
	PART NO.	
KEY NUMBER	WHITE CABINET	DESCRIPTION
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28	92.200 91.201 91.818 91.807 95.302 95.306 95.308 92.101 91.804 91.805 95.310 95.803 95.600 91.801 10.207 93.404 95.301 91.307 91.309 23.303 94.703 91.803 93.702 93.701 94.700A 94.302 92.706 94.802	Cover-Molded Rim Oval Head Screw, No. 8a x 1/2" (6 Required) Speed Nut (10 Required) Side Panel, Left Hand Top Front Panel Brace Top Front Panel Co-Polymer Tub Slotted Round Head Screw No. 10 x 1/2" (18 Required) Speed Nut (15 Required) Door Panel Assembly Door Handle with Screws Retainer Spring (2 Required) Nut, 1/4"-20 (4 Required) Leveling Screw, 1/4"-20 x 1-1/2" (4 Required) Base Assembly Side Panel, Right Hand Rear Angle Tub Support Back Panel Stopper, 1-1/2" Diameter Hose Mounting Plate Slotted Truss Head Screw, No. 10A x 1/2" Rubber Hose Hose Clamp (2 Required) Handiflo® Assembly Gasket Mounting Plate Hex Nut, 1/4"-20 (2 Required)