




Americh Tub PVC Waste and Overflow

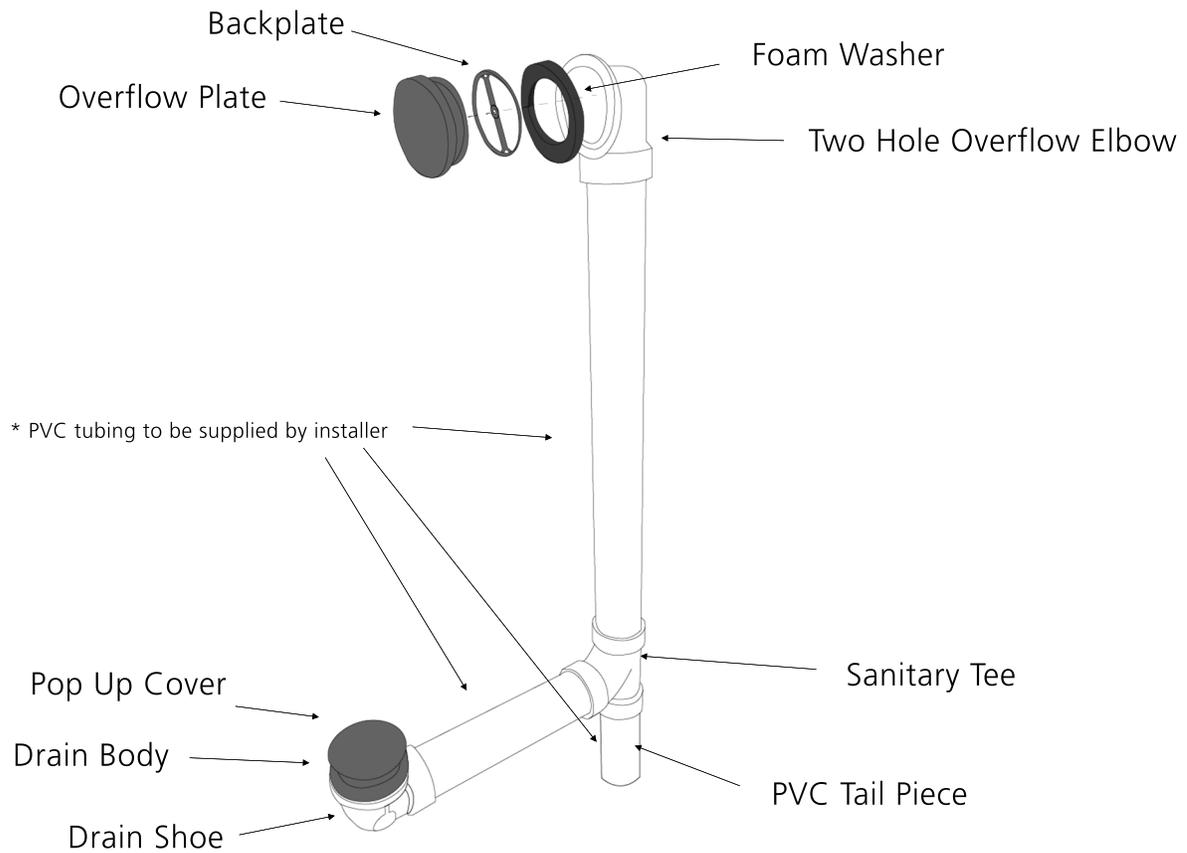

IMPORTANT

1. Follow all Federal, State, and local building and plumbing codes.
2. Follow all Americh Owner's operation manual for proper installation.
3. Proper installation of the waste and overflow is the responsibility of the installer. Water test the waste and overflow for leaks before installing bathtub.

www.americh.com