



- INSTALLATION INSTRUCTIONS -
PORCELAIN-FINISHED STEEL SHOWER BASE

Caution: This new fixture has a durable finish; however, extra care should be exercised during installation, when rough handling and dropped tools may cause damage.

1. Inspect product, and if necessary, report damage to the distributor, requesting their advice on how to proceed.
2. Protect the shower pan during installation and construction by using this corrugated container as indicated. Cut along the dotted lines and place the cut out corrugated protector into the center of the shower pan.
3. Measure product dimensions, and then frame construction area to suit, using 2x4 or 2x2 stringer to support the back ledge.

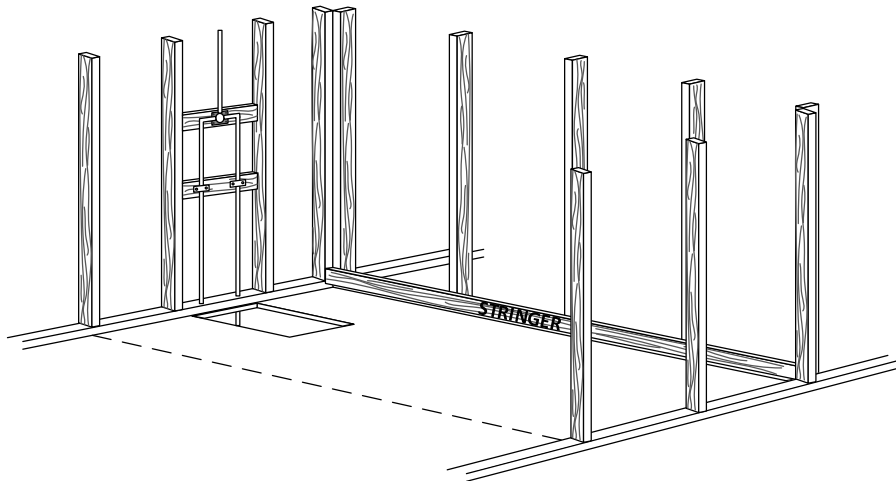

4. Test-fit the product in position, checking for level front to back and left to right, as well as alignment of plumbing attachments. If necessary, use small shims in conjunction with the support pad, to achieve good level.
5. Once fit, level, and aligned, use roofing nails or drywall screws with washers just above the tile flange, securing flange to wall studs as detailed:

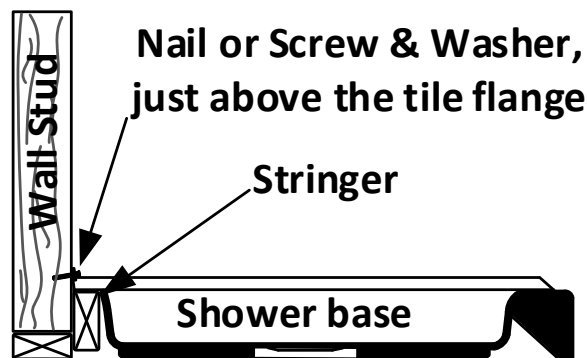

6. Drain assembly, faucet and the shower head should be installed to manufacturer's specifications. Over tightening the drain can damage the shower pan. Caulking should be used to seal the gap between apron panel and floor.

~ CARE AND CLEANING ~

Clean with warm water, soft cloth or nylon brush, and a mild detergent like "ZUD" or "Barkeepers Friend" according to cleanser directions.
NEVER use abrasive scouring powders, cleaners or pads.