



■ K6002 PARTS BREAKDOWN & INSTALL SET-UP

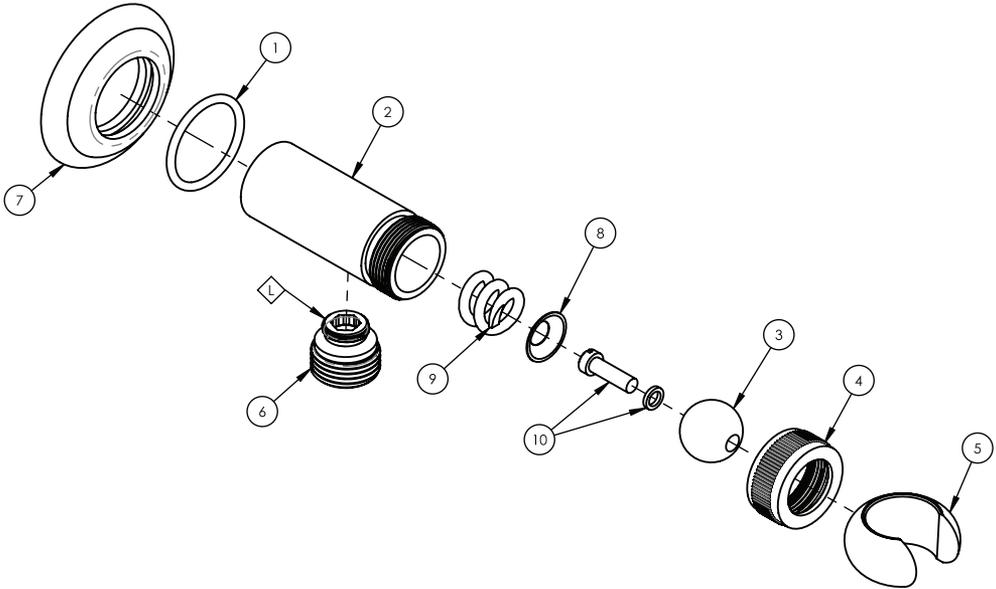


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	90121	O-RING, 1-1/16"ID X 3/32"THK, AS-568-121	1	
2	P18006/00	K6002 BODY ONLY	1	
3	P18007	K6001, K6002 BALL JOINT	1	
4	P18008/00	COLLAR NUT, K6001 K6002	1	
5	P18009	K6001, K6002, HOOK ONLY	1	
6	P18011/00	CONNECTOR OUTLET 1/2", HOUSING OV10	1	
7	P18012/00	K6008,K6002,K6001 FLANGE	1	
8	P18015	SLIDE BAR COUNTERSUNK WASHER	1	
9	P18016	SLIDE BAR SPRING	1	
10	P36010	10/32 X 1/2" SLOT FILLM/S BRASS FOR K6001 & K6002	1	

Determine the location of the wall bracket. Install a cross beam and secure a brass 90° elbow (*not supplied*). Connect elbow to water supply using copper supply lines and 1/2" made adaptors. Attach a 1/2" brass nipple to elbow. Check all connections for leaks. The wall is ready to be closed.

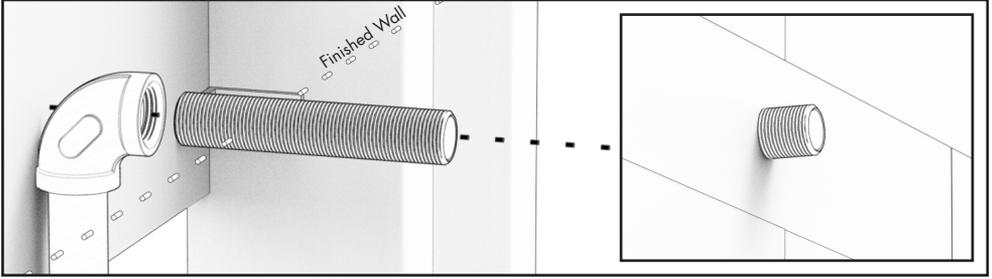

Slide **Flange** with **O-ring** onto the assembled bracket body and hook. Apply **Teflon tape** to the threads of the brass nipple. Attach the **bracket with flange to the brass nipple**. Check connection for leaks.

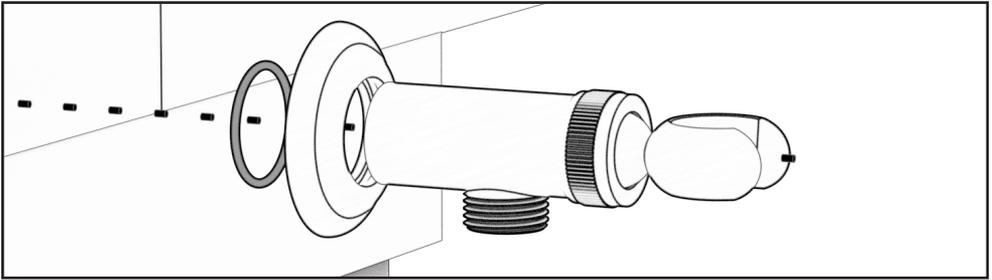

Slide Flange against the wall. **NOTE: the hook is tapered to accept the cone fitting of hand shower hose. If the hose will not slide into the hook, rotate the hook assembly 180°.**

