









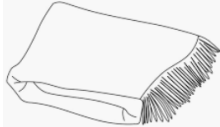

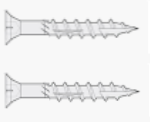





Installation of Schmidlin URBAN CLASSIC
bathtub with integrated apron

Important Notice

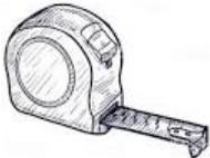
Please read carefully these installation instructions prior to installing the Schmidlin bathtub. Not every possible circumstance can be anticipated that might involve a potential hazard during the usage of the Schmidlin products. **WARNING:** Risk of personal injury and possible drowning. Imprudent use of the bathtub may result in the risk of injury or drowning. Do not leave children unattended by an adult during a bath. Elderly and handicapped persons and persons restricted in their movement should take special care when using a bath.

Required Tools


				
Drill	Screw driver	Flat nose pliers	Pipe wrench	Tape measure
				
4' level	Wood shims	Plumbers putty	Blanket	
				
Utility knife	Drywall screws	Deck screws	Tape	Overflow drain

Schmidlin URBAN CLASSIC bathtub
Installation


1. Schmidlin bathtub with integral support pad for easy installation

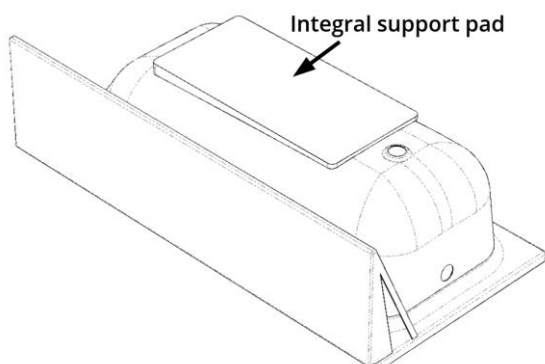


2. Use level to make sure surface is even

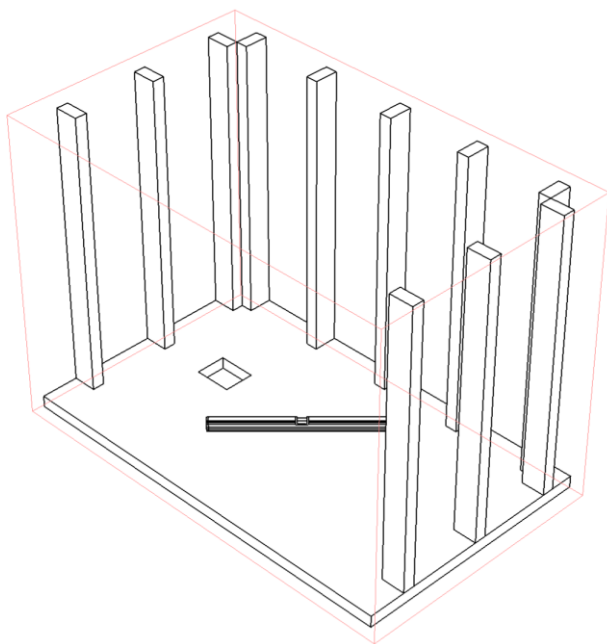


3. Use plumbers' putty to fix floor damages

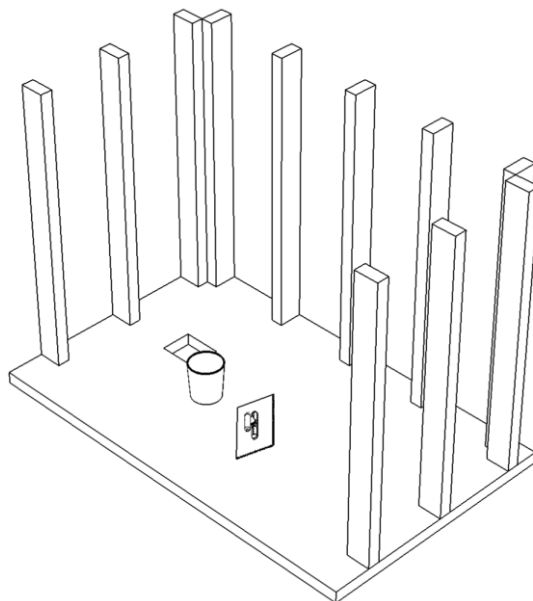


5. Level tub with wooden shims

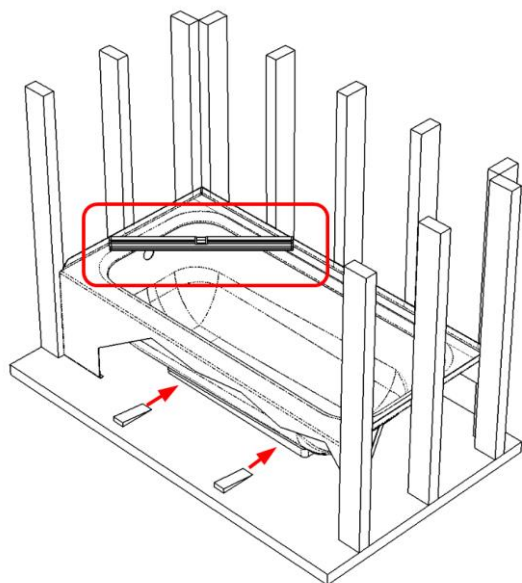


6. Install tub and mark top of tile flange with pen

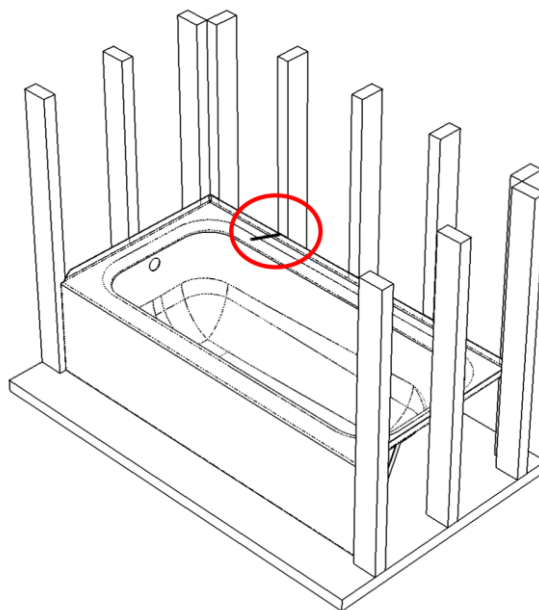


7. Measure tile flange height and mark distance from top marking on studs

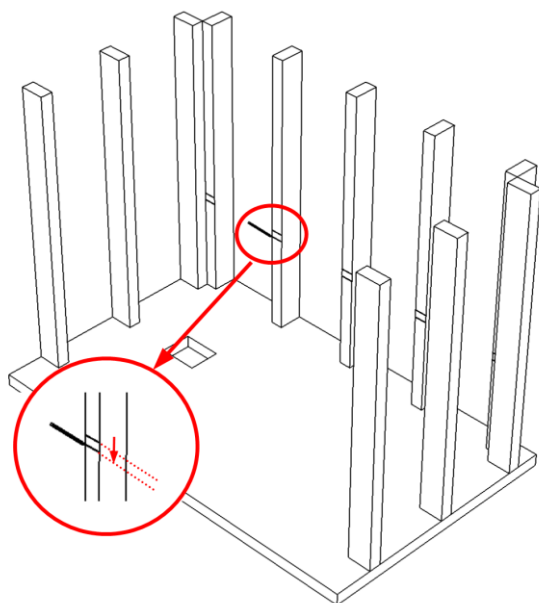


8. Install wooden support bar on backwall

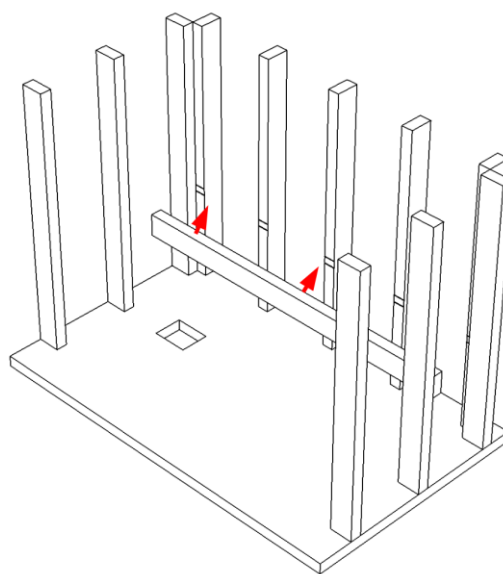


9. Make sure bar is installed at lower marking

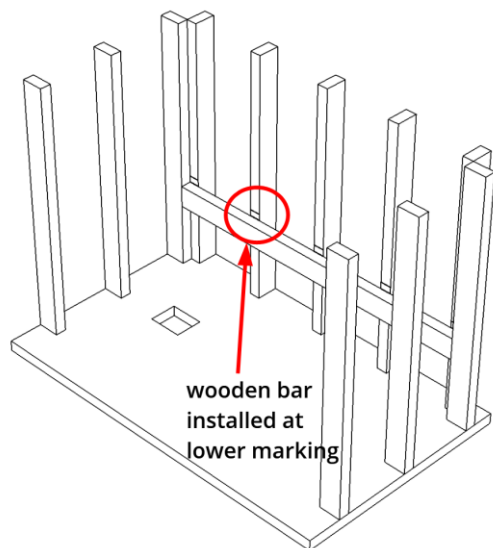

10. Install overflow drain kit on tub

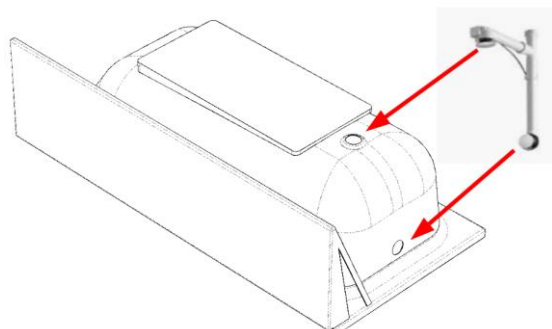

11. Install tub in alcove

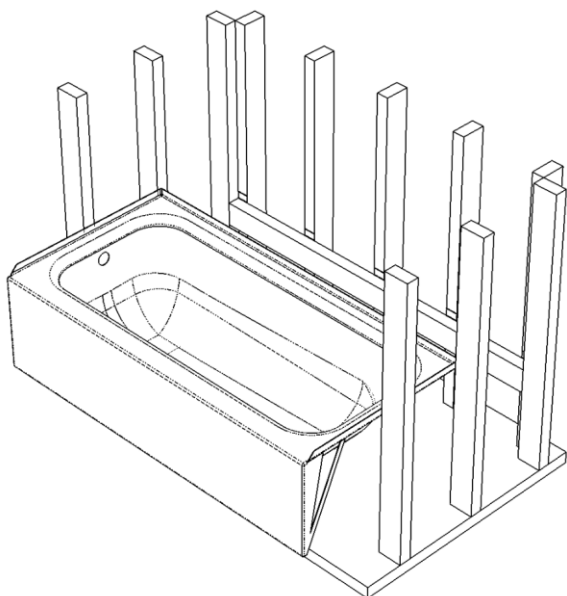

12. Install mounting angles or washers on studs

