


Slant/Fin
Revital/Line[®]
 Aluminum Baseboard Replacement Cover

Quick Installation Guide


Appropriate gloves and eye protection should be worn during installation. *For Use With Hydronic Baseboard Only!*

PREPARE EXISTING BASEBOARD


1. Remove old end caps.

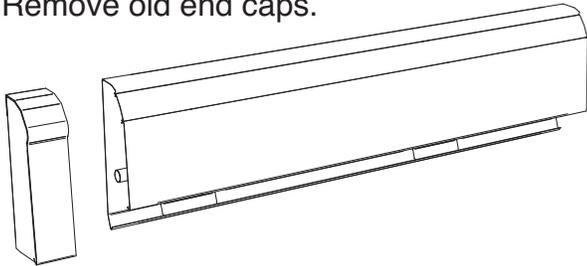

2. Remove existing front panel.

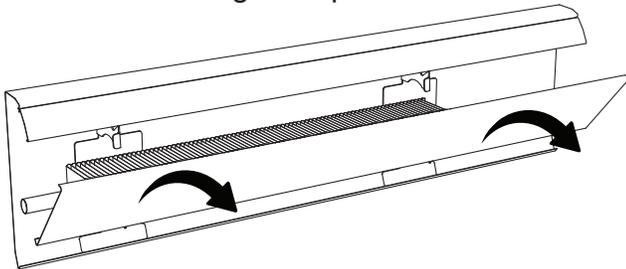


3. Remove any existing damper sections.

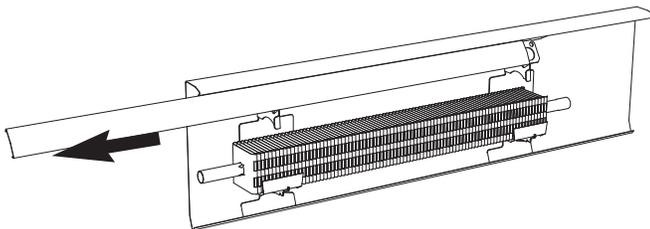


PREPARE NEW ALUMINUM COVER

4. Set plastic cover spacers on top of heating element

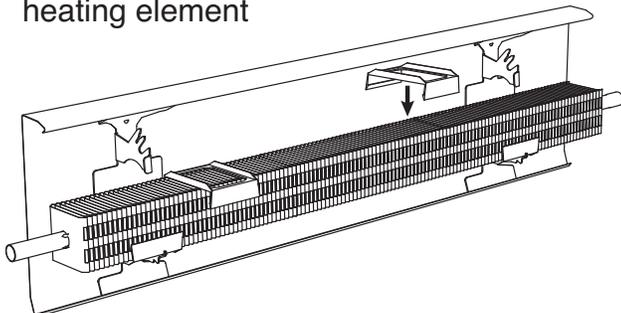


5. *Optional for additional support or necessary where there is no element to rest on plastic spacers:*


Slide or snap brackets into groove on bottom of front panel.

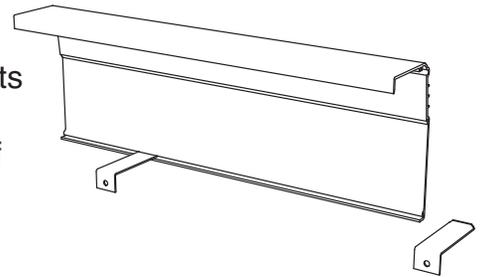


6. Position new assembled cover with wall brackets below element, then slip new cover over back panel.

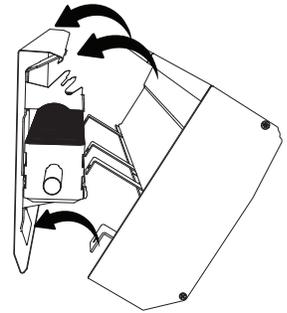

7. *Optional:* Screw brackets to existing back panel with supplied self-drilling screws.

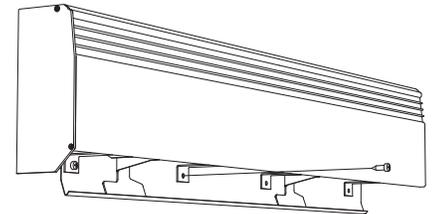

8. Attach end caps, corner pieces or chosen accessories as required.

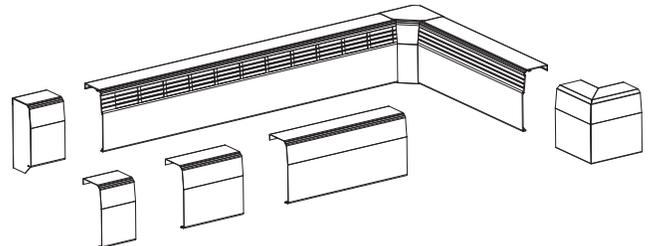

Video Installation Instructions

You can watch a demonstration video of how to install your new Revital/Line Replacement Cover at www.slantfin.com