FBF-3060L/R

Veritek Barrier-Free Shower Pans With Fit-Flo™ Drain



Manufactured from Veritek®


FEATURES


- · Will not mold or mildew, no grout to clean.
- Coordinates with other Swanstone or Veritek shower and bath systems.
- "S" pattern molded into pan provides a slip-resistant surface.
- Made of Veritek® with no surface coating to chip or crack.
- Can be recessed for flush mounting or can be used with a ramp.
- Warranty: Limited Lifetime Residential Limited 5-year - Commercial

Nominal	Rough-In Dimensions					
Size	60"	30"	8"	15"		
30" x 60"	60 ³/s"	30 3 /16"	8 3/16"	15 3 /16"		

IMPORTANT: Rough-in dimensions are provided for reference only. You must measure the actual shower pan and check local building code requirements before construction of the stud wall.

Barrier-Free Shower Pans Available in Right or Left Drain Placement.

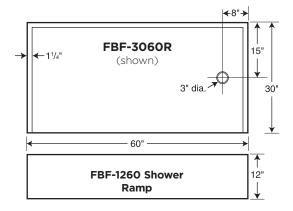



SPECIFICATIONS

Model	Part	Ship Wt. Lb.	Carton Dims. In.	Cu. Ft.	
FBF-3060L (Left Drain)	FB03060LM	64	66 x 36 x 10	14	
FBF-3060R (Right Drain)	FB03060RM	64	66 x 36 x 10	14	
FBF-1260	FB01260	25	66 x 14 x 2	1.07	
12" D x 60" W - Ramp					

Includes: One code-approved compression-molded Veritek® shower pan with molded-in Fit-Flo drain.

Packaging: Each pan packed in a rectangular carton.

COLORS

Solid Colors:

- White (010)
- Bisque (018)
- Bone (037)

ACCESSORIES

See page 86 for complete listing of all Universal Design accessories.

STANDARDS AND RATINGS

American National Standard Institute— ANSI Z124.1.2

International Association of Plumbing and Mechanical Officials (IAPMO)—Listed

CSA Standard B45.5 by IAPMO

Uniform Plumbing Code (UPC)

For a complete list of tests and results see the Technical Data Sheet.

MAINTENANCE AND CLEANING INFORMATION

Clean regularly with common household liquid cleaners and a sponge or soft cloth. For hard water stains, scale removers can be used. If necessary, abrasive cleaners can be used with a nylon brush or pad to remove build up on the shower pan surface. **Do not** use a metal-scouring pad or a wire brush, as it will damage the surface. **Do not** use "leave on" cleaning products, such as automatic spray shower cleaners. Prolonged contact with harsh chemicals could have an adverse reaction over time and discolor surfaces. **Do not** use cleaning agents that caution use on acrylic, polyester or plastics.

SUPPORT DOCUMENTS

Installation instructions available at **swanstone.com**

